
Contents

About This Document.....	ii
1 Using the Command Query Tool to Query Product Command Information.....	1
2 Basic Configurations Commands.....	2
2.1 CLI Overview Commands.....	2
2.1.1 Command Support.....	2
2.1.2 assistant task.....	2
2.1.3 command-privilege level.....	3
2.1.4 command-privilege level rearrange.....	5
2.1.5 diagnose.....	6
2.1.6 display assistant task history.....	7
2.1.7 display component.....	9
2.1.8 display history-command.....	11
2.1.9 display this.....	12
2.1.10 display this include-default.....	13
2.1.11 header.....	15
2.1.12 if-match timer cron.....	18
2.1.13 perform batch-file.....	24
2.1.14 quit.....	25
2.1.15 reset history-command.....	26
2.1.16 return.....	27
2.1.17 system-view.....	28
2.1.18 terminal command forward matched upper-view.....	28
2.1.19 terminal echo-mode.....	30
2.2 EasyDeploy Commands.....	31
2.2.1 Command Support.....	31
2.2.2 activate-file.....	33
2.2.3 backup configuration interval.....	35
2.2.4 batch-cmd begin.....	37
2.2.5 clear topology-error-info.....	38
2.2.6 client.....	39
2.2.7 client aging-time.....	42
2.2.8 client auto-clear enable.....	43

2.2.9 client auto-join enable.....	44
2.2.10 client replace.....	45
2.2.11 cluster.....	48
2.2.12 cluster enable.....	48
2.2.13 cluster-multimac.....	49
2.2.14 configuration-file.....	50
2.2.15 custom-file.....	52
2.2.16 display easy-operation batch-cmd result.....	53
2.2.17 display easy-operation client.....	54
2.2.18 display easy-operation client replace.....	58
2.2.19 display easy-operation configuration.....	60
2.2.20 display easy-operation device-information.....	64
2.2.21 display easy-operation download-status.....	66
2.2.22 display easy-operation group.....	74
2.2.23 display easy-operation power.....	80
2.2.24 display easy-operation topology.....	82
2.2.25 display ndp.....	83
2.2.26 display ntdp.....	86
2.2.27 display ntdp device-list.....	87
2.2.28 display cluster-topology-info.....	90
2.2.29 easy-operation.....	91
2.2.30 easy-operation client ftp-server.....	92
2.2.31 easy-operation client ftp-server-url.....	94
2.2.32 easy-operation client netfile.....	95
2.2.33 easy-operation client sftp-server.....	96
2.2.34 easy-operation client sftp-server-url.....	98
2.2.35 easy-operation client snmp securityname.....	99
2.2.36 easy-operation client tftp-server.....	100
2.2.37 easy-operation client tftp-server-url.....	101
2.2.38 easy-operation client vlan.....	102
2.2.39 easy-operation client ztp-with-cfg enable.....	103
2.2.40 easy-operation commander enable.....	104
2.2.41 easy-operation commander ip-address.....	106
2.2.42 easy-operation dtls disable.....	108
2.2.43 easy-operation dtls psk.....	109
2.2.44 easy-operation shared-key.....	110
2.2.45 execute to.....	111
2.2.46 group build-in.....	112
2.2.47 group custom.....	116
2.2.48 license.....	117
2.2.49 match.....	119
2.2.50 mngvlanid.....	121

2.2.51	ndp enable (interface view)	122
2.2.52	ndp enable (system view)	123
2.2.53	ndp timer aging	124
2.2.54	ndp timer hello	125
2.2.55	ndp trunk-member enable	126
2.2.56	ntdp enable (interface view)	127
2.2.57	ntdp enable (system view)	128
2.2.58	ntdp explore	129
2.2.59	ntdp hop	130
2.2.60	ntdp timer	131
2.2.61	ntdp timer hop-delay	132
2.2.62	ntdp timer port-delay	133
2.2.63	patch	134
2.2.64	reset easy-operation client-database	135
2.2.65	reset easy-operation client-offline	136
2.2.66	reset ndp statistics	136
2.2.67	system-software	137
2.2.68	tftp-server/sftp-server/ftp-server	139
2.2.69	topology enable	141
2.2.70	topology save	142
2.2.71	undo group	142
2.2.72	upgrade group	143
2.2.73	web-file	144
2.2.74	module	145
2.3	USB-based Deployment Configuration Commands	147
2.3.1	Command Support	147
2.3.2	display device usb-deployment configuration	147
2.3.3	set device usb-deployment disable	148
2.3.4	set device usb-deployment config-file password	149
2.3.5	set device usb-deployment hmac-key	150
2.3.6	set device usb-deployment hmac	152
2.3.7	set device usb-deployment password	153
2.4	First Login Commands	154
2.4.1	Command Support	154
2.4.2	clock datetime	154
2.4.3	clock daylight-saving-time	155
2.4.4	clock timezone	160
2.4.5	display calendar	162
2.4.6	display clock	164
2.4.7	display sys-netid	170
2.4.8	sysname	171
2.4.9	sys-netid	172

2.5 UI Configuration Commands.....	173
2.5.1 Command Support.....	173
2.5.2 acl (user interface view).....	173
2.5.3 authentication-mode (user interface view).....	175
2.5.4 auto-execute command.....	177
2.5.5 databits.....	178
2.5.6 display user-interface.....	179
2.5.7 display user-interface maximum-vty.....	181
2.5.8 display users.....	182
2.5.9 display vty mode.....	184
2.5.10 display vty lines.....	185
2.5.11 display web welcome-message.....	185
2.5.12 flow-control.....	186
2.5.13 free user-interface.....	187
2.5.14 kill user-interface.....	188
2.5.15 history-command max-size.....	189
2.5.16 idle-timeout.....	190
2.5.17 mmi-mode enable.....	192
2.5.18 parity.....	192
2.5.19 protocol inbound.....	194
2.5.20 screen-length.....	195
2.5.21 screen-width.....	196
2.5.22 set authentication password.....	197
2.5.23 set password min-length.....	199
2.5.24 shell.....	201
2.5.25 speed (user interface view).....	202
2.5.26 stopbits.....	203
2.5.27 user privilege.....	204
2.5.28 user-interface.....	206
2.5.29 user-interface current.....	209
2.5.30 user-interface maximum-vty.....	210
2.5.31 user-interface password complexity-check disable.....	211
2.5.32 web welcome-message.....	212
2.6 User Login Configuration Commands.....	213
2.6.1 Command Support.....	213
2.6.2 configuration exclusive.....	213
2.6.3 configuration-occupied timeout.....	215
2.6.4 console0 disable.....	216
2.6.5 display configuration-occupied user.....	217
2.6.6 display dsa local-key-pair public.....	218
2.6.7 display dsa peer-public-key.....	220
2.6.8 display ecc local-key-pair public.....	222

2.6.9 display ecc peer-public-key.....	223
2.6.10 display http server.....	225
2.6.11 display http user.....	228
2.6.12 display rsa local-key-pair public.....	229
2.6.13 display rsa peer-public-key.....	231
2.6.14 display ssh server.....	233
2.6.15 display ssh server-info.....	237
2.6.16 display ssh user-information.....	238
2.6.17 display telnet server status.....	240
2.6.18 display telnet-client.....	241
2.6.19 dsa local-key-pair create.....	242
2.6.20 dsa local-key-pair destroy.....	243
2.6.21 dsa peer-public-key.....	244
2.6.22 ecc local-key-pair create.....	247
2.6.23 ecc local-key-pair destroy.....	248
2.6.24 ecc peer-public-key.....	249
2.6.25 free http user-id.....	251
2.6.26 http acl.....	252
2.6.27 http secure-server enable.....	254
2.6.28 http secure-server port.....	255
2.6.29 http secure-server ssl-policy.....	256
2.6.30 http server enable.....	258
2.6.31 http server load.....	259
2.6.32 http server port.....	261
2.6.33 http server-source.....	262
2.6.34 http ipv6 server-source.....	264
2.6.35 http timeout.....	266
2.6.36 lock.....	267
2.6.37 matched upper-view.....	268
2.6.38 peer-public-key end.....	270
2.6.39 public-key-code begin.....	271
2.6.40 public-key-code end.....	272
2.6.41 rsa local-key-pair create.....	273
2.6.42 rsa local-key-pair destroy.....	274
2.6.43 rsa peer-public-key.....	275
2.6.44 run.....	278
2.6.45 send.....	279
2.6.46 ssh authentication-type default password.....	280
2.6.47 ssh authorization-type default aaa.....	281
2.6.48 ssh client assign.....	282
2.6.49 ssh client cipher.....	284
2.6.50 ssh client first-time enable.....	285

2.6.51 ssh client hmac.....	286
2.6.52 ssh client key-exchange.....	288
2.6.53 ssh client rekey.....	290
2.6.54 ssh server acl.....	291
2.6.55 ssh server authentication-retries.....	292
2.6.56 ssh server authentication-type keyboard-interactive enable.....	293
2.6.57 ssh server cipher.....	294
2.6.58 ssh server dh-exchange min-len.....	296
2.6.59 ssh server hmac.....	297
2.6.60 ssh server key-exchange.....	299
2.6.61 ssh server port.....	301
2.6.62 ssh server publickey.....	302
2.6.63 ssh server rekey.....	303
2.6.64 ssh server rekey-interval.....	305
2.6.65 ssh server timeout.....	306
2.6.66 ssh server-source.....	307
2.6.67 ssh ipv6 server-source.....	309
2.6.68 ssh user.....	311
2.6.69 ssh user assign.....	312
2.6.70 ssh user authorization-cmd aaa.....	313
2.6.71 ssh user authentication-type.....	314
2.6.72 ssh user service-type.....	319
2.6.73 stelnet.....	320
2.6.74 stelnet server enable.....	325
2.6.75 super.....	326
2.6.76 super password.....	328
2.6.77 super password complexity-check disable.....	330
2.6.78 telnet.....	331
2.6.79 telnet client-source.....	334
2.6.80 telnet server acl.....	335
2.6.81 telnet server-source.....	336
2.6.82 telnet ipv6 server-source.....	338
2.6.83 telnet server enable.....	340
2.6.84 telnet server port.....	341
2.7 File Management Commands.....	342
2.7.1 Command Support.....	343
2.7.2 ascii.....	343
2.7.3 binary.....	344
2.7.4 binding cipher-suite-customization.....	344
2.7.5 bye.....	346
2.7.6 cd (FTP client view).....	347
2.7.7 cd (SFTP client view).....	348

2.7.8 cd (user view).....	348
2.7.9 cdup (SFTP client view).....	350
2.7.10 cdup (FTP client view).....	351
2.7.11 certificate load.....	352
2.7.12 close.....	356
2.7.13 copy.....	357
2.7.14 crl load.....	362
2.7.15 delete (FTP client view).....	363
2.7.16 delete (user view).....	364
2.7.17 dir (user view).....	367
2.7.18 dir/ls (FTP client view).....	371
2.7.19 dir/ls (SFTP client view).....	374
2.7.20 disconnect.....	375
2.7.21 display ftp-client.....	376
2.7.22 display ftp-server.....	377
2.7.23 display ftp-users.....	379
2.7.24 display scp-client.....	380
2.7.25 display sftp-client.....	381
2.7.26 display ssl policy.....	382
2.7.27 display tftp-client.....	385
2.7.28 execute.....	386
2.7.29 feat.....	388
2.7.30 file prompt.....	390
2.7.31 fixdisk.....	391
2.7.32 format.....	392
2.7.33 format ssd.....	394
2.7.34 ftp.....	395
2.7.35 ftp acl.....	399
2.7.36 ftp client-source.....	400
2.7.37 ftp secure-server enable.....	402
2.7.38 ftp secure-server ssl-policy.....	403
2.7.39 ftp server enable.....	404
2.7.40 ftp server max-sessions.....	406
2.7.41 ftp server port.....	407
2.7.42 ftp server-source.....	408
2.7.43 ftp ipv6 server-source.....	410
2.7.44 ftp timeout.....	412
2.7.45 get (SFTP client view).....	413
2.7.46 get (FTP client view).....	414
2.7.47 help (SFTP client view).....	415
2.7.48 lcd.....	417
2.7.49 mget.....	418

2.7.50 mkdir (FTP client view).....	419
2.7.51 mkdir (SFTP client view).....	420
2.7.52 mkdir (User view).....	421
2.7.53 more.....	423
2.7.54 move.....	426
2.7.55 mput.....	429
2.7.56 open.....	430
2.7.57 passive.....	434
2.7.58 prompt.....	435
2.7.59 put (FTP client view).....	436
2.7.60 put (SFTP client view).....	437
2.7.61 pwd (FTP client view).....	438
2.7.62 pwd (SFTP client view).....	439
2.7.63 pwd (user view).....	440
2.7.64 remotehelp.....	441
2.7.65 remove (SFTP client view).....	442
2.7.66 rename (SFTP client view).....	443
2.7.67 rename (user view).....	444
2.7.68 reset recycle-bin.....	446
2.7.69 rmdir (FTP client view).....	448
2.7.70 rmdir (user view).....	449
2.7.71 rmdir (SFTP client view).....	451
2.7.72 scp.....	452
2.7.73 scp client-source.....	456
2.7.74 scp server enable.....	458
2.7.75 set cipher-suite.....	459
2.7.76 set default ftp-directory.....	461
2.7.77 set device auto-delete-file disable.....	462
2.7.78 set net-manager vpn-instance.....	463
2.7.79 sftp.....	464
2.7.80 sftp client-source.....	471
2.7.81 sftp client-transfile.....	472
2.7.82 sftp server enable.....	480
2.7.83 ssh user sftp-directory.....	481
2.7.84 ssl cipher-suite-list.....	483
2.7.85 ssl minimum version.....	484
2.7.86 ssl policy.....	485
2.7.87 tftp.....	486
2.7.88 tftp client-source.....	489
2.7.89 tftp-server acl.....	491
2.7.90 trusted-ca load.....	492
2.7.91 undelete.....	494

2.7.92 unzip.....	496
2.7.93 user.....	498
2.7.94 verbose.....	499
2.7.95 zip.....	500
2.8 Configuring System Startup Commands.....	502
2.8.1 Command Support.....	502
2.8.2 check file-integrity.....	503
2.8.3 clear configuration interface.....	504
2.8.4 clear configuration this.....	506
2.8.5 clear inactive-configuration all.....	507
2.8.6 configuration backup local disable.....	508
2.8.7 configuration copy file to running.....	510
2.8.8 configuration copy startup to file.....	511
2.8.9 compare configuration.....	512
2.8.10 display changed-configuration time.....	514
2.8.11 display configuration recover-result.....	514
2.8.12 display current-configuration.....	516
2.8.13 display factory-configuration information.....	519
2.8.14 display factory-configuration reset-result.....	521
2.8.15 display pnp-button mode.....	522
2.8.16 display reboot-info.....	523
2.8.17 display saved-configuration.....	525
2.8.18 display schedule reboot.....	527
2.8.19 display startup.....	528
2.8.20 factory-configuration prohibit.....	530
2.8.21 pnp-button mode reset-system.....	531
2.8.22 pnp-button disable.....	532
2.8.23 reboot.....	533
2.8.24 reset factory-configuration.....	535
2.8.25 reset saved-configuration.....	536
2.8.26 reset reboot-info.....	538
2.8.27 save.....	538
2.8.28 schedule reboot.....	541
2.8.29 set factory-configuration operate-mode.....	543
2.8.30 set save-configuration.....	544
2.8.31 set save-configuration backup-to-server server.....	546
2.8.32 startup saved-configuration.....	549
2.8.33 startup system-software.....	551
2.8.34 startup patch.....	555
2.9 Smart Upgrade Commands.....	556
2.9.1 Command Support.....	557
2.9.2 display smart-upgrade information.....	557

2.9.3 smart-upgrade { url https-port }.....	562
2.9.4 smart-upgrade download.....	563
2.9.5 smart-upgrade enable.....	564
2.9.6 smart-upgrade ap enable.....	565
2.9.7 smart-upgrade right-now.....	566
2.9.8 smart-upgrade ssl-policy.....	568
2.9.9 smart-upgrade schedule.....	569
2.9.10 smart-upgrade verify-server disable.....	571
2.9.11 smart-upgrade web-prompt disable.....	572
2.10 Upgrade Commands.....	573
2.10.1 Command Support.....	573
2.10.2 check startup.....	573
2.10.3 display device group-speed license-usage.....	574
2.10.4 display last startup information.....	575
2.10.5 display license.....	576
2.10.6 display license esn.....	582
2.10.7 display license information.....	583
2.10.8 display license resource usage.....	585
2.10.9 display license revoke-ticket.....	586
2.10.10 display license state.....	587
2.10.11 display module-information.....	588
2.10.12 display paf.....	590
2.10.13 display patch-information.....	592
2.10.14 display rollback.....	595
2.10.15 display virtual license.....	597
2.10.16 install-module.....	599
2.10.17 license active.....	601
2.10.18 license emergency.....	603
2.10.19 virtual-license emergency.....	604
2.10.20 license revoke.....	605
2.10.21 license verify.....	607
2.10.22 patch active all.....	608
2.10.23 patch configuration-synchronize.....	609
2.10.24 patch deactivate all.....	610
2.10.25 patch delete all.....	610
2.10.26 patch load.....	611
2.10.27 patch run all.....	613
2.10.28 reset patch-configure.....	614
2.10.29 rollback.....	615
2.10.30 uninstall-module.....	616
3 Device Management Commands.....	618
3.1 Device Status Checking Commands.....	618

3.1.1 Command Support.....	618
3.1.2 check hardware health.....	619
3.1.3 display built-in power.....	627
3.1.4 display battery information.....	628
3.1.5 display chip-temperature.....	630
3.1.6 display compatible-information.....	632
3.1.7 display cpu-usage.....	633
3.1.8 display cpu-usage configuration.....	638
3.1.9 display cpu-usage history.....	640
3.1.10 display device.....	643
3.1.11 display device mac-number.....	647
3.1.12 display device manufacture-info.....	649
3.1.13 display diagnostic-information.....	650
3.1.14 display elabel.....	654
3.1.15 display esn.....	656
3.1.16 display fan.....	657
3.1.17 display integrated-power information.....	659
3.1.18 display memory-usage.....	663
3.1.19 display memory-usage threshold.....	665
3.1.20 display power.....	666
3.1.21 display system-software information.....	668
3.1.22 display software information.....	669
3.1.23 display transceiver.....	670
3.1.24 display transceiver diagnosis interface.....	675
3.1.25 display temperature.....	678
3.1.26 display version.....	680
3.2 Hardware Configuration Commands.....	683
3.2.1 Command Support.....	683
3.2.2 assign resource-mode.....	684
3.2.3 backup elabel.....	694
3.2.4 cpu-usage monitor.....	696
3.2.5 cpu-usage threshold.....	697
3.2.6 clear battery-group esmu communication-failure.....	698
3.2.7 clear battery-group module-missing alarm.....	699
3.2.8 display device dc-output information.....	700
3.2.9 display device ac-output status.....	701
3.2.10 display device dc-output status.....	702
3.2.11 display device fault-light.....	704
3.2.12 display fan speed-adjust threshold minus.....	705
3.2.13 display flash threshold.....	707
3.2.14 display otdr capture history-record interface.....	708
3.2.15 display otdr certificate interface.....	710

3.2.16 display resource-mode configuration.....	711
3.2.17 display root-key configuration.....	712
3.2.18 display service-mode configuration.....	713
3.2.19 display switchover state.....	714
3.2.20 display system resource-template.....	716
3.2.21 display wavelength-map.....	717
3.2.22 mib-data optical-module sample-interval.....	719
3.2.23 otdr capture interface.....	721
3.2.24 otdr certificate interface.....	722
3.2.25 reset battery esmu.....	723
3.2.26 reset cpu-usage record.....	724
3.2.27 reset integrated-power output.....	725
3.2.28 reset power-detect status.....	726
3.2.29 reset otdr capture history-record.....	726
3.2.30 reset otdr certificate.....	727
3.2.31 reset slot.....	728
3.2.32 set battery-group.....	730
3.2.33 set battery-group charge current-limit.....	731
3.2.34 set battery-group install date.....	732
3.2.35 set device dc-output enable.....	733
3.2.36 set device ac-output 24v enable.....	734
3.2.37 set device fault-light.....	735
3.2.38 set fan speed auto min-speed.....	737
3.2.39 set fan speed-adjust threshold minus.....	740
3.2.40 set fan speed mandatory.....	742
3.2.41 set flash threshold.....	743
3.2.42 set integrated-power.....	744
3.2.43 set memory-usage threshold.....	746
3.2.44 set power protocol modbus.....	747
3.2.45 set root-key.....	749
3.2.46 set rtc to power.....	750
3.2.47 set service-mode.....	751
3.2.48 slave restart.....	753
3.2.49 slave switchover.....	754
3.2.50 slave switchover { disable enable }.....	755
3.2.51 system memory-usage monitor disable.....	756
3.2.52 temperature threshold.....	757
3.2.53 transceiver diagnosis threshold rx-power.....	760
3.2.54 transceiver diagnosis threshold tx-power.....	761
3.2.55 transceiver phony-alarm-disable.....	762
3.2.56 wavelength-channel.....	763
3.2.57 wavelength-channel frequency.....	765

3.2.58 wavelength-channel wavelength.....	766
3.2.59 wavelength-channel trust sfp.....	768
3.3 Stack Configuration Commands.....	769
3.3.1 Command Support.....	769
3.3.2 display mad.....	785
3.3.3 display stack.....	787
3.3.4 display stack peers.....	789
3.3.5 display stack port.....	790
3.3.6 display stack port auto-cable-info.....	796
3.3.7 display stack port speed.....	797
3.3.8 display stack-port load-balance.....	799
3.3.9 display stack configuration.....	801
3.3.10 display stack channel.....	803
3.3.11 display upgrade area.....	804
3.3.12 display upgrade state.....	805
3.3.13 interface stack-port.....	807
3.3.14 mad backup ip address.....	808
3.3.15 mad detect mode direct.....	810
3.3.16 mad detect mode relay.....	811
3.3.17 mad domain.....	812
3.3.18 mad exclude.....	812
3.3.19 mad relay.....	814
3.3.20 mad restore.....	814
3.3.21 port interface enable.....	815
3.3.22 reset stack configuration.....	818
3.3.23 reset stack port statistics.....	818
3.3.24 save stack configuration.....	819
3.3.25 set l2-traffic fast-recover.....	820
3.3.26 shutdown interface.....	821
3.3.27 stack authentication.....	823
3.3.28 stack led enable.....	824
3.3.29 stack-port load-balance mode.....	826
3.3.30 stack port speed.....	828
3.3.31 stack port { crc link-flap } trigger.....	830
3.3.32 stack port { crc link-flap } trigger error-down.....	831
3.3.33 stack reserved-vlan.....	833
3.3.34 stack slot priority.....	834
3.3.35 stack slot renumber.....	835
3.3.36 stack timer mac-address switch-delay.....	836
3.3.37 upgrade backup-area slot.....	837
3.3.38 upgrade start.....	838
3.4 Intelligent Simplified Campus Network Configuration Commands.....	843

3.4.1 Command Support.....	843
3.4.2 bind interface.....	843
3.4.3 commit (remote-unit N view).....	844
3.4.4 commit (remote-unit view).....	845
3.4.5 description (remote-unit N view).....	847
3.4.6 display remote-unit.....	848
3.4.7 display remote-unit commit configuration.....	852
3.4.8 display remote-unit commit result.....	853
3.4.9 display remote-unit connect record.....	854
3.4.10 display remote-unit poe.....	856
3.4.11 display remote-unit poe realtime.....	858
3.4.12 display remote-unit port brief.....	860
3.4.13 display remote-unit port poe.....	862
3.4.14 display remote-unit port poe realtime.....	867
3.4.15 display remote-unit port realtime.....	871
3.4.16 display remote-unit port statistics.....	873
3.4.17 display remote-unit port statistics realtime.....	879
3.4.18 display remote-unit port transceiver.....	885
3.4.19 display remote-unit port transceiver realtime.....	889
3.4.20 display remote-unit upgrade.....	893
3.4.21 display remote-unit verbose realtime.....	897
3.4.22 display remote-unit vlan.....	899
3.4.23 display xldp statistics.....	901
3.4.24 isolate (remote-unit view).....	903
3.4.25 isolate (remote-unit N view).....	904
3.4.26 led off (remote-unit view).....	905
3.4.27 led (remote-unit N view).....	906
3.4.28 loopbacktest internal port.....	907
3.4.29 name.....	908
3.4.30 negotiation auto port.....	909
3.4.31 poe anti-interference frequency.....	910
3.4.32 poe enable port.....	912
3.4.33 poe force-power port.....	913
3.4.34 poe power-on delay port.....	914
3.4.35 poe xldp-proxy.....	916
3.4.36 port default vlan (remote-unit N view).....	917
3.4.37 port uplink default vlan.....	918
3.4.38 port uplink vlan.....	920
3.4.39 port vlan.....	921
3.4.40 reboot.....	923
3.4.41 remote-unit.....	924
3.4.42 remote-unit N.....	925

3.4.43 remote-unit protect-action error-down.....	926
3.4.44 remote-unit port default vlan.....	927
3.4.45 remote-unit port uplink default vlan.....	929
3.4.46 remote-unit port uplink vlan.....	930
3.4.47 remote-unit port vlan.....	932
3.4.48 reset xldp statistics.....	934
3.4.49 reset remote-unit commit result.....	935
3.4.50 reset remote-unit connect record.....	936
3.4.51 reset remote-unit port statistics.....	937
3.4.52 reset remote-unit upgrade record.....	938
3.4.53 restart port.....	939
3.4.54 shutdown port.....	940
3.4.55 speed port.....	941
3.4.56 upgrade cutoff-time.....	942
3.4.57 upgrade force.....	943
3.4.58 upgrade right-now.....	944
3.4.59 upgrade start-time.....	946
3.4.60 vlan mode.....	947
3.4.61 xldp enable (interface view).....	948
3.4.62 xldp enable (system view).....	950
3.5 SVF Configuration Commands.....	951
3.5.1 Command Support.....	951
3.5.2 acl ipv6 number (AS administrator profile view).....	957
3.5.3 acl number (AS administrator profile view).....	958
3.5.4 arp anti-attack check user-bind enable (network enhanced profile view).....	960
3.5.5 as-admin-profile (AS group view).....	961
3.5.6 as-admin-profile name.....	962
3.5.7 as authentication configuration revert disable.....	963
3.5.8 as-auth.....	964
3.5.9 as-group name.....	965
3.5.10 as access dtls psk.....	966
3.5.11 as access manage-mac.....	967
3.5.12 as auto-replace enable.....	968
3.5.13 as-mode disable.....	970
3.5.14 as all (AS group view).....	971
3.5.15 as name (AS group view).....	972
3.5.16 as name interface (port group view).....	973
3.5.17 as name (uni-mng view).....	975
3.5.18 as reset.....	976
3.5.19 as service-vlan igmp-snooping.....	977
3.5.20 as service-vlan authorization.....	979
3.5.21 as type.....	980

3.5.22 attach as.....	981
3.5.23 authentication access-user maximum (user access profile view).....	983
3.5.24 auth-mode none.....	984
3.5.25 authentication-profile (user access profile view).....	985
3.5.26 blacklist mac-address.....	988
3.5.27 broadcast-suppression (network enhanced profile view).....	989
3.5.28 clear direct-command.....	990
3.5.29 commit as.....	991
3.5.30 confirm.....	992
3.5.31 description (Fabric-port view).....	993
3.5.32 description (port group view).....	994
3.5.33 dhcp snooping enable (network enhanced profile view).....	995
3.5.34 direct-command.....	996
3.5.35 display as.....	1016
3.5.36 display as access configuration.....	1019
3.5.37 display as blacklist.....	1021
3.5.38 display as run-info.....	1022
3.5.39 display as unauthorized record.....	1024
3.5.40 display as whitelist.....	1025
3.5.41 display uni-mng as-discover packet statistics.....	1026
3.5.42 display uni-mng as-group.....	1029
3.5.43 display uni-mng as index.....	1030
3.5.44 display uni-mng as interface brief.....	1032
3.5.45 display uni-mng as interface eth-trunk.....	1034
3.5.46 display uni-mng authen-user.....	1036
3.5.47 display uni-mng commit-result.....	1038
3.5.48 display uni-mng global.....	1039
3.5.49 display uni-mng indirect configuration.....	1041
3.5.50 display uni-mng execute-failed-record.....	1042
3.5.51 display uni-mng interface fabric-port configuration.....	1044
3.5.52 display uni-mng interface fabric-port state.....	1045
3.5.53 display uni-mng port-group.....	1049
3.5.54 display uni-mng profile.....	1052
3.5.55 display uni-mng profile as.....	1055
3.5.56 display uni-mng topology configuration.....	1063
3.5.57 display uni-mng topology information.....	1064
3.5.58 display uni-mng unauthen-user.....	1067
3.5.59 display uni-mng unauthen-user offline-record.....	1068
3.5.60 display uni-mng upgrade-info.....	1070
3.5.61 display uni-mng up-direction fabric-port.....	1075
3.5.62 down-direction fabric-port.....	1076
3.5.63 down-direction fabric-port connect independent-as.....	1078

3.5.64 forward-mode centralized.....	1079
3.5.65 independent-as-admin.....	1080
3.5.66 interface fabric-port.....	1083
3.5.67 ip source check user-bind enable (network enhanced profile view).....	1084
3.5.68 ipv6 (AS administrator profile view).....	1085
3.5.69 mac-address flapping action (network enhanced profile view).....	1086
3.5.70 mac-address trap notification (network enhanced profile view).....	1087
3.5.71 mac-limit (user access profile view).....	1088
3.5.72 multicast-suppression (network enhanced profile view).....	1090
3.5.73 network-basic-profile name.....	1091
3.5.74 network-basic-profile (port group view).....	1092
3.5.75 network-enhanced-profile name.....	1093
3.5.76 network-enhanced-profile (port group view).....	1094
3.5.77 network-qos-profile name.....	1095
3.5.78 network-qos-profile (port group view).....	1096
3.5.79 pass-vlan (network basic profile view).....	1098
3.5.80 patch delete as.....	1099
3.5.81 policy (traffic policy profile view).....	1100
3.5.82 port connect independent-as.....	1103
3.5.83 port connect-type indirect.....	1106
3.5.84 port-group name.....	1107
3.5.85 port eth-trunk trunkmember.....	1109
3.5.86 port member-group interface.....	1110
3.5.87 port-security aging-time (network enhanced profile view).....	1112
3.5.88 port-security enable (network enhanced profile view).....	1113
3.5.89 port-security mac-address sticky (network enhanced profile view).....	1114
3.5.90 portal url-encode disable.....	1115
3.5.91 qos { pq wrr drr } (network QoS profile view).....	1117
3.5.92 qos queue (network QoS profile view).....	1118
3.5.93 rate-limit (network enhanced profile view).....	1119
3.5.94 reboot uni-mng.....	1121
3.5.95 reset uni-mng as-discover packet statistics.....	1122
3.5.96 shutdown interface.....	1123
3.5.97 slot.....	1124
3.5.98 stp bpdu-protection (AS administrator profile).....	1125
3.5.99 traffic-limit inbound (user access profile view).....	1126
3.5.100 traffic-limit outbound (AS administrator profile view).....	1128
3.5.101 traffic-policy-profile (port group view).....	1130
3.5.102 traffic-policy-profile name.....	1131
3.5.103 trust dscp (network QoS profile view).....	1132
3.5.104 topology explore.....	1133
3.5.105 undo uni-mng enable.....	1134

3.5.106 uni eth-trunk.....	1135
3.5.107 uni eth-trunk lacp timeout.....	1137
3.5.108 uni-mng.....	1138
3.5.109 uni-mng indirect fabric-port.....	1140
3.5.110 uni-mng indirect mng-vlan.....	1142
3.5.111 uni-mng up-direction fabric-port.....	1143
3.5.112 unicast-suppression (network enhanced profile view).....	1145
3.5.113 upgrade as.....	1146
3.5.114 upgrade { local-ftp-server local-sftp-server }.....	1149
3.5.115 upload config.....	1152
3.5.116 user-access-port enable (network enhanced profile view).....	1153
3.5.117 user-access-profile name.....	1154
3.5.118 user-access-profile (port group view).....	1155
3.5.119 user-vlan (network basic profile view).....	1156
3.5.120 user password (AS administrator profile view).....	1158
3.5.121 voice-vlan (network basic profile view).....	1160
3.5.122 whitelist mac-address.....	1162
3.6 PoE Configuration Commands.....	1163
3.6.1 Command Support.....	1163
3.6.2 display poe device.....	1163
3.6.3 display poe information.....	1164
3.6.4 display poe power.....	1166
3.6.5 display poe power-state.....	1170
3.6.6 display poe-power.....	1177
3.6.7 poe af-inrush enable.....	1180
3.6.8 poe anti-interference frequency.....	1181
3.6.9 poe { at-inrush pre-bt-inrush bt-inrush } enable.....	1182
3.6.10 poe enable.....	1184
3.6.11 poe fast-on enable.....	1185
3.6.12 poe force-power.....	1187
3.6.13 poe group management enable.....	1188
3.6.14 poe high-inrush enable.....	1189
3.6.15 poe { power-off power-on } interface.....	1190
3.6.16 poe legacy enable.....	1191
3.6.17 poe lldp-proxy.....	1193
3.6.18 poe max-power.....	1194
3.6.19 poe power.....	1195
3.6.20 poe power auto-neg enable.....	1198
3.6.21 poe power-management.....	1200
3.6.22 poe power-off time-range.....	1202
3.6.23 poe power-on delay.....	1203
3.6.24 poe power-reserved.....	1204

3.6.25 poe power-threshold.....	1206
3.6.26 poe priority.....	1207
3.6.27 poe-power backup-mode.....	1208
3.6.28 poe single-class enable.....	1210
3.6.29 reset poe slot.....	1211
3.7 Monitoring Interface Configuration Commands.....	1212
3.7.1 Command Support.....	1212
3.7.2 display monitor input.....	1212
3.7.3 display monitor output.....	1213
3.7.4 monitor input.....	1215
3.7.5 monitor input enable.....	1216
3.7.6 monitor output enable.....	1217
3.7.7 monitor output keep-time.....	1219
3.8 OPS Configuration Commands.....	1220
3.8.1 Command Support.....	1220
3.8.2 assistant scheduler suspend.....	1220
3.8.3 display ops assistant.....	1221
3.8.4 display ops environment.....	1226
3.8.5 display ops error.....	1228
3.8.6 display ops system-script.....	1229
3.8.7 environment.....	1230
3.8.8 ops.....	1232
3.8.9 ops abort.....	1232
3.8.10 ops install file.....	1233
3.8.11 ops uninstall file.....	1238
3.8.12 script-assistant python.....	1240
3.8.13 shutdown script-assistant.....	1243
3.9 Energy-saving Configuration Commands.....	1244
3.9.1 Command Support.....	1244
3.9.2 als enable.....	1245
3.9.3 als restart.....	1246
3.9.4 als restart mode manual.....	1247
3.9.5 als restart pulse-interval.....	1248
3.9.6 als restart pulse-width.....	1249
3.9.7 display als configuration.....	1249
3.9.8 display power manage cycle.....	1251
3.9.9 display power manage mode.....	1252
3.9.10 display power manage power-information.....	1254
3.9.11 display power manage sleep configuration.....	1256
3.9.12 energy-efficient-ethernet enable.....	1258
3.9.13 port-auto-sleep enable.....	1260
3.9.14 set power manage cycle.....	1261

3.9.15 set power manage interval.....	1262
3.9.16 set power manage mode.....	1263
3.9.17 set power manage non-awaken-port.....	1265
3.9.18 sleep time-range.....	1267
3.10 Information Center Configuration Commands.....	1268
3.10.1 Command Support.....	1269
3.10.2 display buffer.....	1269
3.10.3 display channel.....	1270
3.10.4 display debugging.....	1274
3.10.5 display info-center.....	1276
3.10.6 display info-center filter-id.....	1279
3.10.7 display info-center rate-limit record.....	1280
3.10.8 display info-center rate-limit threshold.....	1282
3.10.9 display info-center session log status.....	1283
3.10.10 display info-center statistics.....	1285
3.10.11 display logbuffer.....	1286
3.10.12 display logfile.....	1291
3.10.13 display log restrain all.....	1293
3.10.14 display log restrain statistics.....	1294
3.10.15 display trapbuffer.....	1295
3.10.16 info-center channel.....	1299
3.10.17 info-center channel name.....	1301
3.10.18 info-center enable.....	1303
3.10.19 info-center filter-id.....	1304
3.10.20 info-center local log-counter disable.....	1306
3.10.21 info-center logbuffer.....	1307
3.10.22 info-center logbuffer size.....	1308
3.10.23 info-center logfile size.....	1309
3.10.24 info-center loghost.....	1310
3.10.25 info-center loghost source.....	1315
3.10.26 info-center loghost source-port.....	1316
3.10.27 info-center max-logfile-number.....	1317
3.10.28 info-center rate-limit except.....	1318
3.10.29 info-center rate-limit global-threshold.....	1319
3.10.30 info-center rate-limit monitor-period.....	1320
3.10.31 info-center rate-limit threshold.....	1321
3.10.32 info-center session log disable.....	1323
3.10.33 info-center source channel.....	1324
3.10.34 info-center statistic-suppress enable.....	1330
3.10.35 info-center timestamp.....	1332
3.10.36 info-center trapbuffer.....	1334
3.10.37 info-center trapbuffer size.....	1335

3.10.38 log restrain disable.....	1336
3.10.39 log restrain threshold.....	1336
3.10.40 reset info-center statistics.....	1338
3.10.41 reset logbuffer.....	1338
3.10.42 reset log restrain statistics.....	1339
3.10.43 reset trapbuffer.....	1340
3.10.44 save logfile.....	1341
3.10.45 save logfile all.....	1341
3.10.46 terminal debugging.....	1342
3.10.47 terminal echo synchronous.....	1343
3.10.48 terminal logging.....	1346
3.10.49 terminal monitor.....	1346
3.10.50 terminal session-log disable.....	1347
3.10.51 terminal trapping.....	1348
3.11 Fault Management Commands.....	1349
3.11.1 Command Support.....	1349
3.11.2 alarm (system view).....	1349
3.11.3 alarm-name severity.....	1350
3.11.4 clear alarm active.....	1352
3.11.5 clear alarm manual-clear.....	1353
3.11.6 clear event all.....	1354
3.11.7 clear record device-alarm.....	1355
3.11.8 delay-suppression enable.....	1355
3.11.9 display alarm active.....	1356
3.11.10 display alarm history.....	1358
3.11.11 display alarm information.....	1360
3.11.12 display alarm manual-clear.....	1361
3.11.13 display alarm urgent.....	1363
3.11.14 display event.....	1366
3.11.15 display event information.....	1367
3.11.16 event.....	1369
3.11.17 mask manual-clear alarm.....	1369
3.11.18 reset alarm urgent.....	1370
3.11.19 set alarm resend interval.....	1371
3.11.20 suppression alarm-name.....	1372
3.11.21 suppression event-name.....	1374
3.12 SAID Configuration Commands.....	1376
3.12.1 Command Support.....	1376
3.12.2 display said-node brief.....	1376
3.12.3 set said-node disable.....	1377
3.13 NTP Configuration Commands.....	1379
3.13.1 Command Support.....	1379

3.13.2 display ntp-service event clock-unsync.....	1380
3.13.3 display ntp-service sessions.....	1381
3.13.4 display ntp-service statistics packet.....	1387
3.13.5 display ntp-service status.....	1389
3.13.6 display ntp-service trace.....	1391
3.13.7 display snmp-agent trap feature-name ntp all.....	1392
3.13.8 ntp-service.....	1393
3.13.9 ntp-service access.....	1395
3.13.10 ntp-service authentication enable.....	1398
3.13.11 ntp-service authentication-keyid.....	1399
3.13.12 ntp-service broadcast-client.....	1401
3.13.13 ntp-service broadcast-server.....	1402
3.13.14 ntp-service disable.....	1404
3.13.15 ntp-service discard.....	1405
3.13.16 ntp-service in-interface disable.....	1407
3.13.17 ntp-service kod-enable.....	1408
3.13.18 ntp-service manycast-client.....	1409
3.13.19 ntp-service manycast-server.....	1410
3.13.20 ntp-service max-distance.....	1412
3.13.21 ntp-service max-dynamic-sessions.....	1413
3.13.22 ntp-service multicast-client.....	1414
3.13.23 ntp-service multicast-server.....	1415
3.13.24 ntp-service port.....	1417
3.13.25 ntp-service refclock-master.....	1418
3.13.26 ntp-service reliable authentication-keyid.....	1420
3.13.27 ntp-service server disable.....	1421
3.13.28 ntp-service source-interface.....	1422
3.13.29 ntp-service unicast-peer.....	1423
3.13.30 ntp-service unicast-server.....	1426
3.13.31 reset ntp-service statistics packet.....	1430
3.13.32 snmp-agent trap enable feature-name ntp.....	1431
3.14 PTP Configuration Commands.....	1432
3.14.1 Command Support.....	1433
3.14.2 display ptp.....	1433
3.14.3 display ptp utc.....	1438
3.14.4 ptp announce-drop enable.....	1440
3.14.5 ptp announce-interval.....	1440
3.14.6 ptp announce receipt-timeout.....	1442
3.14.7 ptp asymmetry-correction.....	1443
3.14.8 ptp clock-source.....	1444
3.14.9 ptp clock-source local local-priority.....	1451
3.14.10 ptp clock-step.....	1452

3.14.11 ptp delay-mechanism.....	1454
3.14.12 ptp device-type.....	1455
3.14.13 ptp domain.....	1458
3.14.14 ptp enable (interface view).....	1459
3.14.15 ptp enable (system view).....	1460
3.14.16 ptp local-priority.....	1461
3.14.17 ptp mac-egress.....	1462
3.14.18 ptp min-delayreq-interval.....	1464
3.14.19 ptp min-pdelayreq-interval.....	1466
3.14.20 ptp notslave disable.....	1468
3.14.21 ptp port-state.....	1469
3.14.22 ptp port-type.....	1471
3.14.23 ptp profile g-8275-1 enable.....	1472
3.14.24 ptp set-port-state enable.....	1473
3.14.25 ptp slaveonly.....	1475
3.14.26 ptp sync-interval.....	1476
3.14.27 ptp tcoc-clock-id.....	1477
3.14.28 ptp udp-egress.....	1479
3.14.29 ptp virtual-clock-id.....	1481
3.14.30 reset ptp statistics.....	1483
3.15 Clock Synchronization Commands.....	1484
3.15.1 Command Support.....	1484
3.15.2 clock alarm-threshold frequency-offset.....	1484
3.15.3 clock clear.....	1485
3.15.4 clock ethernet-synchronization enable.....	1486
3.15.5 clock freq-deviation-detect enable.....	1487
3.15.6 clock map unk.....	1488
3.15.7 clock priority (interface view).....	1489
3.15.8 clock source ptp priority (system view).....	1490
3.15.9 clock run-mode.....	1491
3.15.10 clock source.....	1492
3.15.11 clock source-lost holdoff-time.....	1493
3.15.12 clock source ptp ssm (system view).....	1494
3.15.13 clock ssm (interface view).....	1496
3.15.14 clock ssm-control.....	1497
3.15.15 clock switch.....	1498
3.15.16 clock synchronization enable.....	1499
3.15.17 clock source ptp synchronization enable.....	1499
3.15.18 clock wtr.....	1500
3.15.19 display clock.....	1501
3.15.20 display clock source freq-deviation.....	1503
4 Interface Management Commands.....	1505

4.1 Basic Interface Configuration Commands.....	1505
4.1.1 Command Support.....	1505
4.1.2 collect counters top.....	1505
4.1.3 bandwidth (Interface view).....	1508
4.1.4 description (interface view).....	1510
4.1.5 display counters.....	1511
4.1.6 display counters discard.....	1513
4.1.7 display counters error.....	1514
4.1.8 display counters interface.....	1517
4.1.9 display counters rate.....	1524
4.1.10 display counters top interface.....	1526
4.1.11 display interface.....	1529
4.1.12 display interface brief.....	1544
4.1.13 display interface description.....	1550
4.1.14 display ip interface.....	1553
4.1.15 display ip interface description.....	1557
4.1.16 display this interface.....	1562
4.1.17 interface.....	1575
4.1.18 mtu (Interface view).....	1577
4.1.19 port description.....	1580
4.1.20 reset counters if-mib interface.....	1582
4.1.21 reset counters interface.....	1583
4.1.22 reset counters top interface.....	1584
4.1.23 restart (interface view).....	1585
4.1.24 set flow-stat interval.....	1586
4.1.25 shutdown (interface view).....	1588
4.2 Ethernet Interface Configuration Commands.....	1589
4.2.1 Command Support.....	1589
4.2.2 am isolate.....	1589
4.2.3 assign port-type 100ge.....	1591
4.2.4 assign port-type xge.....	1593
4.2.5 assign port-type 25ge.....	1594
4.2.6 assign group-speed.....	1596
4.2.7 auto duplex.....	1598
4.2.8 auto speed.....	1600
4.2.9 cable-snr-test.....	1602
4.2.10 carrier.....	1603
4.2.11 clear configuration port-isolate.....	1605
4.2.12 combo-port.....	1606
4.2.13 display counters protocol.....	1608
4.2.14 display card port-config-mode configuration.....	1610
4.2.15 display device group-speed configuration.....	1612

4.2.16 display device port-config-mode status.....	1613
4.2.17 display device port-type configuration.....	1615
4.2.18 display error-down recovery.....	1616
4.2.19 display error-statistics trigger speed-down-grade oui.....	1618
4.2.20 display interface ethernet brief.....	1620
4.2.21 display port-group.....	1623
4.2.22 display port-group member-configuration.....	1624
4.2.23 display port-isolate group.....	1625
4.2.24 display port link-flap auto-detect recovery.....	1626
4.2.25 display port protect-group.....	1627
4.2.26 display port split.....	1629
4.2.27 display virtual-cable-test.....	1631
4.2.28 device transceiver 1000BASE-X.....	1633
4.2.29 duplex.....	1635
4.2.30 error-down auto-recovery.....	1636
4.2.31 error-down-threshold error-percentage.....	1645
4.2.32 error-down-threshold error-statistics.....	1646
4.2.33 error-statistics threshold-event trigger error-down.....	1648
4.2.34 error-statistics trigger speed-down-grade.....	1649
4.2.35 fast-link-down disable.....	1651
4.2.36 fec mode base-r.....	1652
4.2.37 fec mode rs.....	1654
4.2.38 flow-control (interface view).....	1657
4.2.39 flow-control negotiation.....	1658
4.2.40 flow-control negotiation receive.....	1660
4.2.41 flow-control receive.....	1663
4.2.42 group-member.....	1665
4.2.43 interface (Ethernet interface).....	1666
4.2.44 interface range.....	1669
4.2.45 jumboframe enable.....	1670
4.2.46 log-threshold input-rate output-rate.....	1673
4.2.47 log-threshold input-discard output-discard (interface view).....	1675
4.2.48 log-threshold.....	1677
4.2.49 loopback.....	1678
4.2.50 loopbacktest.....	1680
4.2.51 mdi.....	1681
4.2.52 negotiation active.....	1683
4.2.53 negotiation auto.....	1684
4.2.54 negotiation priority.....	1685
4.2.55 port clock-mode slave.....	1687
4.2.56 port link-flap auto-detect protection disable.....	1688
4.2.57 port link-flap auto-detect interval.....	1689

4.2.58 port link-flap auto-detect threshold.....	1690
4.2.59 port link-flap auto-detect recovery interval.....	1691
4.2.60 port link-flap interval.....	1693
4.2.61 port link-flap protection enable.....	1694
4.2.62 port link-flap threshold.....	1696
4.2.63 port-group.....	1697
4.2.64 port-group group-member.....	1699
4.2.65 port-isolate enable.....	1701
4.2.66 port-isolate exclude vlan.....	1702
4.2.67 protect-group member.....	1704
4.2.68 port mode 2.5ge.....	1705
4.2.69 port mode ge (25GE interface).....	1707
4.2.70 port-isolate mode.....	1708
4.2.71 port media type (GE interface view).....	1710
4.2.72 port media type (XGE interface view).....	1711
4.2.73 port media type (25GE interface view).....	1712
4.2.74 port protect-group.....	1714
4.2.75 port split.....	1715
4.2.76 port serdes-mode.....	1717
4.2.77 portswitch.....	1719
4.2.78 portswitch batch.....	1720
4.2.79 reset statistics-peak.....	1722
4.2.80 reset statistics-peak interface.....	1723
4.2.81 reset virtual-cable-test.....	1724
4.2.82 set card port-config-mode 25g-port enable.....	1725
4.2.83 set device port-config-mode enable.....	1727
4.2.84 set ethernet speed down-grade.....	1730
4.2.85 set error-statistics trigger speed-down-grade.....	1732
4.2.86 set flow-statistics include-interframe.....	1734
4.2.87 set flow-change-ratio.....	1735
4.2.88 set flow-change-ratio input-broadcast-detect disable.....	1736
4.2.89 set flow-change-ratio start-check.....	1737
4.2.90 set if-mib sample-interval.....	1739
4.2.91 set log updown disable.....	1740
4.2.92 set port-enable delay.....	1741
4.2.93 single-fiber enable.....	1742
4.2.94 speed.....	1744
4.2.95 speed auto-negotiation.....	1746
4.2.96 statistic enable (interface view).....	1748
4.2.97 traffic-pppoe.....	1750
4.2.98 training (40GE interface view).....	1752
4.2.99 training (100GE interface view).....	1754

4.2.100 transceiver power low trigger error-down.....	1755
4.2.101 trap-threshold.....	1757
4.2.102 trap-threshold enable.....	1759
4.2.103 trap-threshold error-percentage.....	1760
4.2.104 trap-threshold error-statistics.....	1762
4.2.105 trap-threshold interval.....	1763
4.2.106 trap-threshold threshold.....	1765
4.2.107 virtual-cable-test.....	1766
4.3 Logical Interface Configuration Commands.....	1771
4.3.1 Command Support.....	1771
4.3.2 display interface loopback.....	1771
4.3.3 display interface null.....	1773
4.3.4 display interface virtual-ethernet.....	1776
4.3.5 interface loopback.....	1778
4.3.6 interface null.....	1779
4.3.7 interface virtual-ethernet.....	1780
4.3.8 portswitch (VE interface view).....	1781
4.3.9 statistic enable (sub-interface view).....	1782
4.3.10 trigger trap.....	1784
5 Ethernet Switching Configuration Commands.....	1786
5.1 MAC Address Table Configuration Commands.....	1786
5.1.1 Command Support.....	1786
5.1.2 display bridge mac-address.....	1787
5.1.3 display mac-address.....	1788
5.1.4 display mac-address aging-time.....	1791
5.1.5 display mac-address blackhole.....	1793
5.1.6 display mac-address dynamic.....	1795
5.1.7 display mac-address flapping.....	1798
5.1.8 display mac-address flapping record.....	1800
5.1.9 display mac-address hash-conflict record.....	1802
5.1.10 display mac-address hash-mode.....	1803
5.1.11 display mac-address mux.....	1804
5.1.12 display mac-address oam.....	1807
5.1.13 display mac-address static.....	1809
5.1.14 display mac-address summary.....	1811
5.1.15 display mac-address total-number.....	1813
5.1.16 display mac-limit.....	1816
5.1.17 drop illegal-mac alarm.....	1819
5.1.18 drop illegal-mac enable.....	1820
5.1.19 mac-address aging-time.....	1821
5.1.20 mac-address blackhole.....	1822
5.1.21 mac-address destination hit aging enable.....	1825

5.1.22 mac-address flapping action.....	1826
5.1.23 mac-address flapping action priority.....	1828
5.1.24 mac-address flapping aging-time.....	1829
5.1.25 mac-address flapping detection.....	1831
5.1.26 mac-address flapping detection exclude vlan.....	1832
5.1.27 mac-address flapping detection vlan security-level.....	1833
5.1.28 mac-address flapping mac-syn-suppress disable.....	1835
5.1.29 mac-address flapping quit-vlan recover-time.....	1836
5.1.30 mac-address flapping unicast-suppress all disable.....	1837
5.1.31 mac-address flapping unicast-suppress disable.....	1838
5.1.32 mac-address hash-bucket-mode.....	1839
5.1.33 mac-address hash-mode.....	1841
5.1.34 mac-address learning disable (interface view and VLAN view).....	1843
5.1.35 mac-address learning disable (traffic behavior view).....	1845
5.1.36 mac-address learning self-healing enable.....	1847
5.1.37 mac-address static vlan.....	1847
5.1.38 mac-address threshold-alarm.....	1849
5.1.39 mac-address trap hash-conflict enable.....	1851
5.1.40 mac-address trap hash-conflict history.....	1852
5.1.41 mac-address trap hash-conflict interval.....	1853
5.1.42 mac-address trap hash-conflict threshold.....	1854
5.1.43 mac-address trap notification.....	1855
5.1.44 mac-address trap notification interval.....	1856
5.1.45 mac-address update arp.....	1857
5.1.46 mac-learning priority.....	1859
5.1.47 mac-learning priority allow-flapping.....	1860
5.1.48 mac-learning priority flapping-defend action.....	1862
5.1.49 mac-limit.....	1863
5.1.50 mac-spoofing-defend enable (interface view).....	1866
5.1.51 mac-spoofing-defend enable (system view).....	1867
5.1.52 mac-syn realtime enable.....	1869
5.1.53 port bridge enable.....	1870
5.1.54 remark destination-mac.....	1871
5.1.55 reset mac-address flapping record.....	1872
5.1.56 undo mac-address.....	1873
5.1.57 undo mac-address temporary.....	1876
5.1.58 undo mac-limit all.....	1876
5.2 Link Aggregation Commands.....	1877
5.2.1 Command Support.....	1877
5.2.2 authentication-mode (E-Trunk view).....	1877
5.2.3 assign trunk.....	1879
5.2.4 collect forward-path.....	1881

5.2.5 display eth-trunk.....	1885
5.2.6 display trunk configuration.....	1893
5.2.7 display eth-trunk load-balance.....	1895
5.2.8 display e-trunk.....	1897
5.2.9 display e-trunk packet-statistics.....	1901
5.2.10 display e-trunk state-change.....	1903
5.2.11 display forward-path.....	1905
5.2.12 display forward-path report.....	1907
5.2.13 display interface eth-trunk.....	1910
5.2.14 display lacp brief.....	1916
5.2.15 display lacp statistics eth-trunk.....	1917
5.2.16 display load-balance-profile.....	1920
5.2.17 display load-distribution active-linknumber-change.....	1921
5.2.18 display trunk index-map.....	1923
5.2.19 display trunk resource.....	1924
5.2.20 display trunkfwdtbl eth-trunk.....	1925
5.2.21 display trunkmembership eth-trunk.....	1926
5.2.22 eth-trunk.....	1929
5.2.23 e-trunk (Eth-Trunk interface view).....	1932
5.2.24 e-trunk mode.....	1934
5.2.25 e-trunk port.....	1935
5.2.26 e-trunk (system view).....	1937
5.2.27 e-trunk track bfd-session.....	1938
5.2.28 interface eth-trunk.....	1939
5.2.29 ipv4 field.....	1941
5.2.30 ipv6 field.....	1943
5.2.31 l2 field.....	1945
5.2.32 lacp collector delay.....	1947
5.2.33 lacp e-trunk priority.....	1948
5.2.34 lacp e-trunk system-id.....	1949
5.2.35 lacp force-switch.....	1950
5.2.36 lacp force-forward.....	1952
5.2.37 lacp optimized-converge enable.....	1954
5.2.38 lacp preempt delay.....	1955
5.2.39 lacp preempt enable.....	1956
5.2.40 lacp priority.....	1957
5.2.41 lacp priority-command-mode.....	1959
5.2.42 lacp selected.....	1960
5.2.43 lacp src-mac.....	1961
5.2.44 lacp system-id.....	1962
5.2.45 lacp system-priority.....	1964
5.2.46 lacp timeout.....	1965

5.2.47 lacp track interface.....	1967
5.2.48 least active-linknumber.....	1969
5.2.49 load-balance.....	1971
5.2.50 load-balance-profile.....	1974
5.2.51 load-distribution active-linknumber-change.....	1975
5.2.52 load-distribution active-linknumber-change global.....	1977
5.2.53 local-preference enable.....	1978
5.2.54 max active-linknumber.....	1980
5.2.55 mixed-rate link enable.....	1983
5.2.56 mode.....	1984
5.2.57 mpls field.....	1986
5.2.58 peer-address source-address.....	1988
5.2.59 priority (E-Trunk view).....	1989
5.2.60 reset e-trunk packet-statistics.....	1990
5.2.61 reset lacp statistics eth-trunk.....	1991
5.2.62 revert disable.....	1993
5.2.63 security-key.....	1994
5.2.64 sequence enable.....	1997
5.2.65 timer hello (E-Trunk view).....	1998
5.2.66 timer hold-on-failure multiplier.....	1999
5.2.67 timer revert delay.....	2001
5.2.68 trunkport.....	2002
5.2.69 unknown-unicast load-balance.....	2004
5.2.70 unicast load-balance enhanced.....	2006
5.3 VLAN Configuration Commands.....	2007
5.3.1 Command Support.....	2007
5.3.2 damping time.....	2007
5.3.3 description (VLAN view).....	2009
5.3.4 description (VLANIF interface view).....	2010
5.3.5 display default-parameter vlan.....	2011
5.3.6 display interface vlanif.....	2013
5.3.7 display ip-subnet-vlan vlan.....	2015
5.3.8 display lnp.....	2017
5.3.9 display mac-vlan.....	2020
5.3.10 display policy-vlan.....	2022
5.3.11 display port vlan.....	2024
5.3.12 display protocol-vlan interface.....	2027
5.3.13 display protocol-vlan vlan.....	2028
5.3.14 display vlan.....	2030
5.3.15 interface vlanif.....	2037
5.3.16 ip-subnet-vlan.....	2040
5.3.17 ip-subnet-vlan enable.....	2042

5.3.18 lnp disable.....	2044
5.3.19 mac-learning smart vlan enable.....	2045
5.3.20 mac-vlan enable.....	2046
5.3.21 mac-vlan mac-address.....	2048
5.3.22 management-vlan.....	2050
5.3.23 name (VLAN view).....	2051
5.3.24 ping mac.....	2052
5.3.25 ping mac enable.....	2055
5.3.26 policy-vlan.....	2056
5.3.27 port.....	2059
5.3.28 port default vlan.....	2061
5.3.29 port discard tagged-packet.....	2064
5.3.30 port hybrid pvid vlan.....	2065
5.3.31 port hybrid tagged vlan.....	2066
5.3.32 port hybrid untagged vlan.....	2070
5.3.33 port hybrid vlan 1.....	2073
5.3.34 port link-type.....	2074
5.3.35 port negotiation disable.....	2078
5.3.36 port trunk allow-pass vlan.....	2079
5.3.37 port trunk allow-pass only-vlan.....	2082
5.3.38 port trunk pvid vlan.....	2084
5.3.39 protocol-transparent.....	2085
5.3.40 protocol-vlan.....	2086
5.3.41 protocol-vlan vlan.....	2090
5.3.42 reset lnp statistics.....	2092
5.3.43 reset vlan statistics.....	2093
5.3.44 shutdown (VLANIF interface view).....	2094
5.3.45 statistic enable (VLAN view).....	2095
5.3.46 statistic enable (VLANIF interface view).....	2097
5.3.47 trace mac.....	2098
5.3.48 trace mac enable.....	2102
5.3.49 unknown-flow drop.....	2103
5.3.50 vlan.....	2104
5.3.51 vlan configuration.....	2105
5.3.52 vlan precedence.....	2107
5.3.53 vlan range.....	2108
5.3.54 vlan statistics.....	2110
5.3.55 vlan statistics interval.....	2111
5.3.56 vlan vlan-name.....	2112
5.4 VLAN Aggregation Configuration Commands.....	2113
5.4.1 Command Support.....	2113
5.4.2 access-vlan.....	2113

5.4.3 aggregate-vlan.....	2115
5.4.4 display sub-vlan.....	2117
5.4.5 display super-vlan.....	2118
5.5 MUX VLAN Configuration Commands.....	2119
5.5.1 Command Support.....	2119
5.5.2 display mux-vlan.....	2119
5.5.3 mux-vlan.....	2121
5.5.4 port mux-vlan enable.....	2122
5.5.5 subordinate group.....	2124
5.5.6 subordinate separate.....	2127
5.6 VLAN Termination Configuration Commands.....	2129
5.6.1 Command Support.....	2129
5.6.2 arp broadcast enable.....	2129
5.6.3 display dot1q information.....	2130
5.6.4 display qinq information.....	2132
5.6.5 dot1q termination vid.....	2134
5.6.6 qinq termination l2.....	2137
5.6.7 qinq termination pe-vid ce-vid.....	2144
5.7 Voice VLAN Configuration Commands.....	2146
5.7.1 Command Support.....	2147
5.7.2 display voice-vlan oui.....	2147
5.7.3 display voice-vlan status.....	2148
5.7.4 voice-vlan enable.....	2151
5.7.5 voice-vlan legacy enable.....	2153
5.7.6 voice-vlan mac-address.....	2154
5.7.7 voice-vlan mode.....	2156
5.7.8 voice-vlan remark.....	2158
5.7.9 voice-vlan remark-mode.....	2160
5.7.10 voice-vlan security enable.....	2161
5.8 QinQ Configuration Commands.....	2162
5.8.1 Command Support.....	2162
5.8.2 add-tag vlan-id.....	2162
5.8.3 display spare-bucket resource.....	2164
5.8.4 display vlan-translation resource.....	2165
5.8.5 port add-tag acl.....	2167
5.8.6 port vlan-stacking.....	2170
5.8.7 port vlan-stacking untagged.....	2173
5.8.8 qinq mapping pe-vid ce-vid.....	2175
5.8.9 qinq mapping vid map-vlan.....	2177
5.8.10 qinq protocol.....	2179
5.8.11 qinq stacking.....	2181
5.8.12 qinq stacking vlan.....	2183

5.8.13 qinq vlan-translation enable.....	2185
5.8.14 qinq vlan-translation miss-drop.....	2186
5.9 VLAN Mapping Configuration Commands	2187
5.9.1 Command Support.....	2187
5.9.2 port vlan-mapping ingress.....	2187
5.9.3 port vlan-mapping vlan inner-vlan.....	2189
5.9.4 port vlan-mapping vlan map-vlan.....	2193
5.9.5 remark cvlan-id.....	2196
5.9.6 remark vlan-id.....	2197
5.9.7 set inner-vlan tag0-remove.....	2199
5.10 GVRP Configuration Commands.....	2200
5.10.1 Command Support.....	2200
5.10.2 display garp statistics.....	2200
5.10.3 display garp timer.....	2201
5.10.4 display gvrp state.....	2203
5.10.5 display gvrp statistics.....	2206
5.10.6 display gvrp status.....	2207
5.10.7 display gvrp vlan-operation.....	2208
5.10.8 garp timer.....	2209
5.10.9 garp timer leaveall.....	2212
5.10.10 gvrp.....	2214
5.10.11 gvrp registration.....	2215
5.10.12 reset garp statistics.....	2217
5.11 VCMP Configuration Commands.....	2218
5.11.1 Command Support.....	2218
5.11.2 display vcmp counters.....	2218
5.11.3 display vcmp interface brief.....	2221
5.11.4 display vcmp status.....	2222
5.11.5 display vcmp track.....	2223
5.11.6 reset vcmp.....	2224
5.11.7 reset vcmp counters.....	2225
5.11.8 reset vcmp track.....	2226
5.11.9 vcmp authentication.....	2226
5.11.10 vcmp device-id.....	2228
5.11.11 vcmp disable.....	2229
5.11.12 vcmp domain.....	2230
5.11.13 vcmp role.....	2231
5.12 STP/RSTP/MSTP/VBST Configuration Commands.....	2233
5.12.1 Command Support.....	2233
5.12.2 active region-configuration.....	2233
5.12.3 check region-configuration.....	2234
5.12.4 display ethernet-loop-protection ignored-vlan.....	2235

5.12.5 display stp.....	2236
5.12.6 display stp abnormal-interface.....	2247
5.12.7 display stp active.....	2250
5.12.8 display stp bridge.....	2258
5.12.9 display stp error packet.....	2260
5.12.10 display stp global.....	2260
5.12.11 display stp region-configuration.....	2264
5.12.12 display stp tc-bpdu statistics.....	2267
5.12.13 display stp topology-change.....	2269
5.12.14 display stp vlan.....	2272
5.12.15 display vbst bpdu-statistics.....	2276
5.12.16 display vbst port-vlan statistics.....	2278
5.12.17 ethernet-loop-protection ignored-vlan.....	2280
5.12.18 instance.....	2282
5.12.19 max bandwidth-affected-linknumber.....	2283
5.12.20 region-name.....	2285
5.12.21 reset stp error packet statistics.....	2286
5.12.22 reset stp statistics.....	2287
5.12.23 reset vbst bpdu-statistics.....	2288
5.12.24 revision-level.....	2289
5.12.25 stp agreement-legacy.....	2290
5.12.26 stp binding process.....	2291
5.12.27 stp binding process link-share.....	2292
5.12.28 stp bpdu-filter.....	2294
5.12.29 stp bpdu-filter default.....	2296
5.12.30 stp bpdu-protection.....	2297
5.12.31 stp bridge-diameter.....	2299
5.12.32 stp compliance.....	2300
5.12.33 stp config-digest-snoop.....	2302
5.12.34 stp converge.....	2303
5.12.35 stp cost.....	2304
5.12.36 stp edged-port.....	2307
5.12.37 stp edged-port default.....	2309
5.12.38 stp enable.....	2310
5.12.39 stp link-share-protection.....	2313
5.12.40 stp loop-protection.....	2314
5.12.41 stp max-hops.....	2315
5.12.42 stp mcheck.....	2317
5.12.43 stp mode (MSTP process view).....	2318
5.12.44 stp mode (system view).....	2320
5.12.45 stp no-agreement-check.....	2322
5.12.46 stp pathcost-standard.....	2323

5.12.47 stp point-to-point.....	2326
5.12.48 stp port priority.....	2327
5.12.49 stp priority.....	2330
5.12.50 stp process.....	2332
5.12.51 stp pvid-consistency protection mode.....	2334
5.12.52 stp region-configuration.....	2335
5.12.53 stp revertive slow.....	2336
5.12.54 stp root.....	2337
5.12.55 stp root-protection.....	2340
5.12.56 stp tc-notify process 0.....	2341
5.12.57 stp tc-protection interval.....	2342
5.12.58 stp tc-protection threshold.....	2343
5.12.59 stp tc-restriction enable.....	2345
5.12.60 stp timer forward-delay.....	2346
5.12.61 stp timer hello.....	2348
5.12.62 stp timer max-age.....	2350
5.12.63 stp timer-factor.....	2352
5.12.64 stp transmit-limit (interface view).....	2353
5.12.65 stp transmit-limit (system view).....	2354
5.12.66 stp vlan enable.....	2356
5.12.67 stp vpls-subinterface enable.....	2358
5.12.68 vlan-mapping modulo.....	2359
5.13 SEP Configuration Commands.....	2360
5.13.1 Command Support.....	2360
5.13.2 block port.....	2361
5.13.3 control-vlan (SEP segment view).....	2363
5.13.4 deal smart-link-flush.....	2365
5.13.5 description (SEP segment view).....	2366
5.13.6 display sep error packet.....	2367
5.13.7 display sep interface.....	2368
5.13.8 display sep segment.....	2372
5.13.9 display sep topology.....	2374
5.13.10 preempt (SEP segment view).....	2377
5.13.11 protected-instance.....	2379
5.13.12 reset sep error packet statistics.....	2381
5.13.13 reset sep interface statistics.....	2382
5.13.14 sep segment.....	2383
5.13.15 sep segment (interface view).....	2384
5.13.16 sep segment priority.....	2387
5.13.17 tc-notify.....	2388
5.13.18 tc-protection interval.....	2391
5.14 RRPP Configuration Commands.....	2392

5.14.1 Command Support.....	2392
5.14.2 control-vlan.....	2392
5.14.3 description (RRPP domain view).....	2393
5.14.4 display rrpp brief.....	2394
5.14.5 display rrpp error packet.....	2397
5.14.6 display rrpp ring-group.....	2398
5.14.7 display rrpp snooping enable.....	2400
5.14.8 display rrpp snooping vsi.....	2402
5.14.9 display rrpp statistics.....	2404
5.14.10 display rrpp verbose.....	2407
5.14.11 domain (RRPP ring group view).....	2410
5.14.12 protected-vlan.....	2412
5.14.13 reset rrpp error packet statistics.....	2414
5.14.14 reset rrpp statistics.....	2415
5.14.15 ring enable.....	2416
5.14.16 ring node-mode.....	2417
5.14.17 rrpp domain.....	2420
5.14.18 rrpp enable.....	2421
5.14.19 rrpp linkup-delay-timer.....	2422
5.14.20 rrpp ring-group.....	2423
5.14.21 rrpp snooping enable.....	2424
5.14.22 rrpp snooping vsi.....	2426
5.14.23 rrpp snooping all-vsi.....	2427
5.14.24 timer (RRPP domain view).....	2428
5.15 ERPS (G.8032) Configuration Commands.....	2430
5.15.1 Command Support.....	2430
5.15.2 clear (ERPS ring view).....	2430
5.15.3 control-vlan (ERPS ring view).....	2431
5.15.4 description (ERPS ring view).....	2432
5.15.5 display erps.....	2433
5.15.6 display erps interface.....	2439
5.15.7 display erps statistics.....	2441
5.15.8 encapsulate-ring-id enable.....	2442
5.15.9 erps ring.....	2444
5.15.10 erps ring (interface view).....	2445
5.15.11 erps ring protect-switch.....	2447
5.15.12 erps track cfm.....	2449
5.15.13 erps vpls-subinterface enable.....	2451
5.15.14 guard-timer (ERPS ring view).....	2452
5.15.15 holdoff-timer (ERPS ring view).....	2453
5.15.16 port (ERPS ring view).....	2454
5.15.17 protected-instance (ERPS ring view).....	2456

5.15.18 raps-mel.....	2458
5.15.19 reset erps statistics.....	2459
5.15.20 revertive.....	2460
5.15.21 sub-ring.....	2461
5.15.22 tc-notify erps ring.....	2462
5.15.23 tc-notify sep.....	2464
5.15.24 tc-protection interval (ERPS ring view).....	2465
5.15.25 tc-protection threshold (ERPS ring view).....	2466
5.15.26 version (ERPS ring view).....	2468
5.15.27 virtual-channel.....	2469
5.15.28 wtr-timer (ERPS ring view).....	2470
5.16 Loopback Detection Configuration Commands.....	2471
5.16.1 Command Support.....	2471
5.16.2 display loopback-detect.....	2472
5.16.3 display loopback-detect interface.....	2474
5.16.4 loopback-detect action.....	2477
5.16.5 loopback-detect auto action.....	2479
5.16.6 loopback-detect auto disable.....	2481
5.16.7 loopback-detect enable (system view).....	2482
5.16.8 loopback-detect enable (interface view).....	2483
5.16.9 loopback-detect packet vlan.....	2484
5.16.10 loopback-detect packet-interval.....	2485
5.16.11 loopback-detect recovery-time.....	2487
5.16.12 loopback-detect untagged mac-address.....	2488
5.17 Layer 2 Protocol Tunneling Commands.....	2489
5.17.1 Command Support.....	2490
5.17.2 bpdu.....	2490
5.17.3 bpdu dmac.....	2491
5.17.4 bpdu mac-address.....	2492
5.17.5 bpdu packet-type eapol discard.....	2494
5.17.6 bpdu-tunnel stp bridge role provider.....	2495
5.17.7 display bpdu mac-address.....	2496
5.17.8 display bpdu-tunnel global config.....	2497
5.17.9 display l2protocol-tunnel group-mac.....	2499
5.17.10 display l2protocol-tunnel statistics.....	2502
5.17.11 display l2protocol-tunnel statistics group-mac.....	2505
5.17.12 l2protocol-tunnel.....	2507
5.17.13 l2protocol-tunnel drop-threshold.....	2511
5.17.14 l2protocol-tunnel group-mac.....	2515
5.17.15 l2protocol-tunnel protocol-type match disable.....	2518
5.17.16 l2protocol-tunnel user-defined-protocol.....	2519
5.17.17 l2protocol-tunnel vlan.....	2522

5.17.18 reset l2protocol-tunnel statistics.....	2525
5.17.19 reset l2protocol-tunnel statistics group-mac.....	2528
5.17.20 stp bpdu vlan.....	2529
5.17.21 stp snooping enable.....	2531
6 IP Service Commands.....	2532
6.1 IPv4 Configuration Commands.....	2532
6.1.1 Command Support.....	2532
6.1.2 ip address.....	2533
6.1.3 ip address unnumbered.....	2535
6.1.4 display ip interface.....	2537
6.2 ARP Configuration Commands.....	2542
6.2.1 Command Support.....	2542
6.2.2 arp auto-scan enable.....	2542
6.2.3 arp broadcast disable (VLANIF interface view).....	2543
6.2.4 arp detect-mode unicast.....	2545
6.2.5 arp detect-times.....	2547
6.2.6 arp direct-route enable.....	2548
6.2.7 arp expire-time.....	2550
6.2.8 arp fixup.....	2552
6.2.9 arp ip-conflict-detect enable.....	2553
6.2.10 arp learning double-tag disable.....	2554
6.2.11 arp learning ip-network-cross enable.....	2556
6.2.12 arp learning multicast disable.....	2558
6.2.13 arp learning multicast enable (interface view).....	2559
6.2.14 arp learning multicast enable (system view).....	2560
6.2.15 arp learning priority high.....	2561
6.2.16 arp periodic-refresh disable.....	2563
6.2.17 arp purge slowly.....	2564
6.2.18 arp regularly-refresh cycle-interval.....	2565
6.2.19 arp regularly-refresh enable.....	2566
6.2.20 arp regularly-refresh entry-number.....	2567
6.2.21 arp regularly-refresh scan-interval.....	2568
6.2.22 arp scan.....	2570
6.2.23 arp send-packet.....	2571
6.2.24 arp static.....	2573
6.2.25 arp topology-change disable.....	2576
6.2.26 arp-miss message-cache disable.....	2578
6.2.27 arp-proxy enable.....	2579
6.2.28 arp-proxy inner-sub-vlan-proxy enable.....	2580
6.2.29 arp-proxy inter-sub-vlan-proxy enable.....	2581
6.2.30 arp-suppress enable.....	2582
6.2.31 assign arp reserved number.....	2583

6.2.32 dhcp snooping arp security enable.....	2584
6.2.33 dhcp snooping arp security isolate-forwarding-trust.....	2586
6.2.34 display arp.....	2587
6.2.35 display arp dynamic.....	2591
6.2.36 display arp error packet.....	2595
6.2.37 display arp interface.....	2597
6.2.38 display arp ip-conflict track.....	2600
6.2.39 display arp network.....	2602
6.2.40 display arp packet statistics.....	2606
6.2.41 display arp static.....	2608
6.2.42 display arp statistics.....	2611
6.2.43 display arp status.....	2612
6.2.44 display arp track.....	2616
6.2.45 display arp vpn-instance.....	2618
6.2.46 display mac-address multiport.....	2621
6.2.47 l2-topology detect enable.....	2623
6.2.48 mac-address multiport.....	2624
6.2.49 mac-address multiport interface.....	2625
6.2.50 reset arp.....	2627
6.2.51 reset arp packet statistics.....	2629
6.3 DHCP Configuration Commands.....	2630
6.3.1 Command Support.....	2630
6.3.2 alarm ip-used percentage.....	2630
6.3.3 bootfile.....	2631
6.3.4 conflict auto-recycle interval.....	2633
6.3.5 dhcp anti-attack check duplicate option.....	2634
6.3.6 dhcp anti-attack check udp-checksum.....	2635
6.3.7 dhcp anti-attack check magic-cookie.....	2636
6.3.8 dhcp broadcast suppress enable.....	2637
6.3.9 dhcp client class-id (interface view).....	2638
6.3.10 dhcp client class-id (system view).....	2639
6.3.11 dhcp client client-id.....	2641
6.3.12 dhcp client default-route preference.....	2642
6.3.13 dhcp client expected-lease.....	2643
6.3.14 dhcp client gateway-detect.....	2644
6.3.15 dhcp client hostname.....	2645
6.3.16 dhcp client renew.....	2647
6.3.17 dhcp client request option-list exclude.....	2648
6.3.18 dhcp client request option-list.....	2649
6.3.19 dhcp enable.....	2650
6.3.20 dhcp relay anycast gateway re-route enable.....	2652
6.3.21 dhcp option template.....	2653

6.3.22 dhcp relay gateway-switch enable.....	2655
6.3.23 dhcp relay giaddr source-interface.....	2656
6.3.24 dhcp relay information enable.....	2659
6.3.25 dhcp relay information strategy.....	2660
6.3.26 dhcp relay information link-selection insert enable.....	2662
6.3.27 dhcp relay release.....	2664
6.3.28 dhcp relay request server-match enable.....	2666
6.3.29 dhcp relay reply forward all enable.....	2667
6.3.30 dhcp relay server-ip.....	2668
6.3.31 dhcp relay server-select.....	2671
6.3.32 dhcp relay trust option82.....	2672
6.3.33 dhcp select global.....	2673
6.3.34 dhcp select interface.....	2675
6.3.35 dhcp select relay.....	2676
6.3.36 dhcp server alarm ip-used percentage.....	2677
6.3.37 dhcp server bootfile.....	2679
6.3.38 dhcp server bootp.....	2681
6.3.39 dhcp server bootp automatic.....	2682
6.3.40 dhcp server conflict auto-recycle interval.....	2683
6.3.41 dhcp server database.....	2685
6.3.42 dhcp server dns-list.....	2687
6.3.43 dhcp server domain-name (interface view).....	2688
6.3.44 dhcp server excluded-ip-address.....	2690
6.3.45 dhcp server force insert option.....	2693
6.3.46 dhcp server force response.....	2694
6.3.47 dhcp server gateway-list.....	2695
6.3.48 dhcp server group.....	2697
6.3.49 dhcp server ip-range.....	2699
6.3.50 dhcp server lease.....	2700
6.3.51 dhcp server logging.....	2702
6.3.52 dhcp server mask.....	2705
6.3.53 dhcp server nbns-list.....	2706
6.3.54 dhcp server netbios-type.....	2708
6.3.55 dhcp server next-server.....	2710
6.3.56 dhcp server option.....	2711
6.3.57 dhcp server option121.....	2715
6.3.58 dhcp server option125 vendor-specific.....	2717
6.3.59 dhcp server option184.....	2718
6.3.60 dhcp server ping.....	2720
6.3.61 dhcp server sip-server.....	2721
6.3.62 dhcp server sname.....	2723
6.3.63 dhcp server static-bind.....	2725

6.3.64 dhcp server trust option82.....	2727
6.3.65 dhcp-server.....	2728
6.3.66 dhcp set ttl.....	2730
6.3.67 dhcp speed-limit auto.....	2731
6.3.68 dhcp udp-checksum enable.....	2733
6.3.69 display dhcp client.....	2734
6.3.70 display dhcp client statistics.....	2736
6.3.71 display dhcp configuration.....	2739
6.3.72 display dhcp option template.....	2742
6.3.73 display dhcp relay.....	2745
6.3.74 display dhcp relay statistics.....	2748
6.3.75 display dhcp server configuration.....	2751
6.3.76 display dhcp server database.....	2753
6.3.77 display dhcp server group.....	2754
6.3.78 display dhcp server statistics.....	2756
6.3.79 display dhcp statistics.....	2757
6.3.80 display ip pool.....	2762
6.3.81 dns-list.....	2769
6.3.82 domain-name.....	2771
6.3.83 excluded-ip-address.....	2772
6.3.84 force insert option.....	2774
6.3.85 gateway (DHCP server group view).....	2775
6.3.86 gateway-list.....	2776
6.3.87 ip address bootp-alloc.....	2778
6.3.88 ip address dhcp-alloc.....	2780
6.3.89 ip pool (system view).....	2782
6.3.90 ip relay address cycle.....	2783
6.3.91 ip route dhcp.....	2784
6.3.92 lease.....	2785
6.3.93 lock (IP address pool view).....	2787
6.3.94 logging (IP address pool view).....	2788
6.3.95 nbns-list.....	2790
6.3.96 netbios-type.....	2791
6.3.97 network (IP address pool view).....	2793
6.3.98 next-server.....	2795
6.3.99 option.....	2796
6.3.100 option121.....	2801
6.3.101 option125 vendor-specific.....	2802
6.3.102 option184.....	2803
6.3.103 reset dhcp client statistics.....	2805
6.3.104 reset dhcp relay statistics.....	2806
6.3.105 reset dhcp server statistics.....	2807

6.3.106 reset dhcp statistics.....	2808
6.3.107 reset ip pool.....	2808
6.3.108 section (IP address pool view).....	2810
6.3.109 sip-server (IP address pool view).....	2811
6.3.110 sname.....	2812
6.3.111 static-bind.....	2814
6.3.112 vpn-instance (global address pool view).....	2816
6.4 DHCP Policy VLAN Configuration Commands.....	2817
6.4.1 Command Support.....	2817
6.4.2 dhcp policy-vlan generic.....	2818
6.4.3 dhcp policy-vlan mac-address.....	2819
6.4.4 dhcp policy-vlan port.....	2821
6.5 DNS Configuration Commands.....	2823
6.5.1 Command Support.....	2823
6.5.2 display dns dynamic-host.....	2823
6.5.3 display dns domain.....	2825
6.5.4 display dns server.....	2826
6.5.5 display ip host.....	2828
6.5.6 dns domain.....	2830
6.5.7 dns resolve.....	2831
6.5.8 dns server.....	2832
6.5.9 dns server source-ip.....	2833
6.5.10 ip host.....	2834
6.5.11 reset dns dynamic-host.....	2836
6.6 mDNS Gateway Configuration Commands.....	2837
6.6.1 Command Support.....	2837
6.6.2 display mdns gateway.....	2837
6.6.3 display mdns gateway statistics.....	2838
6.6.4 display mdns group.....	2840
6.6.5 display mdns service.....	2842
6.6.6 mdns gateway enable.....	2846
6.6.7 mdns group.....	2847
6.6.8 mdns probe interval.....	2848
6.6.9 mdns permit service-type.....	2850
6.6.10 mdns source ip.....	2852
6.6.11 mdns whitelist source-ip.....	2854
6.6.12 reset mdns gateway statistics.....	2855
6.6.13 service-vlan.....	2856
6.6.14 user-vlan (mDNS group view).....	2857
6.7 mDNS Relay Configuration Commands.....	2858
6.7.1 Command Support.....	2859
6.7.2 display mdns relay.....	2859

6.7.3 display mdns relay statistics.....	2860
6.7.4 mdns gateway ip.....	2862
6.7.5 mdns probe interval.....	2863
6.7.6 mdns relay enable.....	2864
6.7.7 mdns source ip.....	2865
6.7.8 reset mdns relay statistics.....	2868
6.8 UDP Helper Configuration Commands.....	2868
6.8.1 Command Support.....	2868
6.8.2 display udp-helper port.....	2869
6.8.3 display udp-helper server.....	2870
6.8.4 reset udp-helper packet.....	2872
6.8.5 udp-helper enable.....	2873
6.8.6 udp-helper port.....	2874
6.8.7 udp-helper server.....	2876
6.9 IP Performance Optimization Configuration Commands.....	2878
6.9.1 Command Support.....	2878
6.9.2 clear ip df.....	2878
6.9.3 discard { ra rr srr ts }.....	2879
6.9.4 display icmp statistics.....	2880
6.9.5 display ip interface.....	2882
6.9.6 display ip forwarding status.....	2887
6.9.7 display ip socket.....	2888
6.9.8 display ip socket register-port.....	2895
6.9.9 display ip statistics.....	2897
6.9.10 display load-balance mode.....	2899
6.9.11 display network status.....	2900
6.9.12 display priority.....	2902
6.9.13 display rawip statistics.....	2903
6.9.14 display tcp statistics.....	2905
6.9.15 display tcp status.....	2908
6.9.16 display udp statistics.....	2910
6.9.17 drop illegal-dst-ip enable.....	2912
6.9.18 drop illegal-ip disable.....	2913
6.9.19 icmp blackhole unreachable send.....	2914
6.9.20 icmp host-unreachable send.....	2915
6.9.21 icmp port-unreachable send.....	2917
6.9.22 icmp protocol-unreachable send.....	2918
6.9.23 icmp receive.....	2920
6.9.24 icmp redirect send.....	2922
6.9.25 icmp time-exceed.....	2924
6.9.26 icmp ttl-exceeded drop.....	2925
6.9.27 icmp ttl-exceeded send.....	2927

6.9.28 icmp unreachable drop.....	2928
6.9.29 icmp with-options drop.....	2929
6.9.30 icmp-reply fast.....	2931
6.9.31 ip error-packet-check disable.....	2932
6.9.32 ip forward-broadcast.....	2933
6.9.33 ip forwarding converge normal.....	2935
6.9.34 ip forwarding disable.....	2936
6.9.35 ip ttl-expired drop.....	2937
6.9.36 ip verify source-address.....	2938
6.9.37 ipv4 destination-unreachable drop.....	2940
6.9.38 ipv4 fragment enable.....	2941
6.9.39 ipv6 destination-unreachable drop.....	2942
6.9.40 ipv6 with-options drop.....	2944
6.9.41 load-balance (system view).....	2945
6.9.42 load-balance vpn.....	2946
6.9.43 management-port icmp-reply fast disable.....	2947
6.9.44 reset ip socket monitor.....	2949
6.9.45 reset ip socket pktstort.....	2949
6.9.46 reset ip statistics.....	2950
6.9.47 reset rawip statistics.....	2951
6.9.48 reset tcp statistics.....	2952
6.9.49 reset udp statistics.....	2953
6.9.50 set priority.....	2953
6.9.51 tcp min-mss.....	2955
6.9.52 tcp max-mss.....	2957
6.9.53 tcp send-trap bind-port.....	2958
6.9.54 tcp timer fin-timeout.....	2959
6.9.55 tcp timer syn-timeout.....	2960
6.9.56 tcp window.....	2961
6.10 Basic IPv6 Configuration Commands.....	2962
6.10.1 Command Support.....	2962
6.10.2 display default-parameter tcp6.....	2962
6.10.3 display icmpv6 statistics.....	2963
6.10.4 display ipv6 attack-source overlapping-fragment.....	2966
6.10.5 display ipv6 interface.....	2968
6.10.6 display ipv6 interface tunnel.....	2971
6.10.7 display ipv6 nd track.....	2974
6.10.8 display ipv6 neighbors.....	2976
6.10.9 display ipv6 pathmtu.....	2980
6.10.10 display ipv6 socket.....	2982
6.10.11 display ipv6 statistics.....	2985
6.10.12 display nd optimized-passby status.....	2988

6.10.13 display nd optimized-reply statistics.....	2990
6.10.14 display nd optimized-reply status.....	2991
6.10.15 display rawip ipv6 statistics.....	2992
6.10.16 display tcp ipv6 authentication-statistics.....	2994
6.10.17 display tcp ipv6 statistics.....	2996
6.10.18 display tcp ipv6 status.....	2999
6.10.19 display this ipv6 interface.....	3003
6.10.20 display udp ipv6 statistics.....	3006
6.10.21 eth-trunk (tunnel interface view).....	3008
6.10.22 ipv6.....	3009
6.10.23 ipv6 address.....	3010
6.10.24 ipv6 address anycast.....	3013
6.10.25 ipv6 address auto global.....	3014
6.10.26 ipv6 address auto link-local.....	3016
6.10.27 ipv6 address eui-64.....	3017
6.10.28 ipv6 address link-local.....	3019
6.10.29 ipv6 enable (interface view).....	3021
6.10.30 ipv6 icmp-error.....	3022
6.10.31 ipv6 icmp blackhole unreachable send.....	3024
6.10.32 ipv6 icmp port-unreachable send.....	3025
6.10.33 ipv6 icmp hop-limit-exceeded send.....	3026
6.10.34 ipv6 icmp receive.....	3027
6.10.35 ipv6 icmp send.....	3029
6.10.36 ipv6 icmp too-big-rate-limit.....	3031
6.10.37 ipv6 mtu.....	3032
6.10.38 ipv6 nd autoconfig managed-address-flag.....	3034
6.10.39 ipv6 nd autoconfig other-flag.....	3035
6.10.40 ipv6 nd dad attempts.....	3036
6.10.41 ipv6 nd hop-limit.....	3038
6.10.42 ipv6 nd learning strict.....	3039
6.10.43 ipv6 nd link-local-entry-learn enable.....	3041
6.10.44 ipv6 nd neighbor-limit.....	3042
6.10.45 ipv6 nd ns multicast-enable.....	3044
6.10.46 ipv6 nd ns retrans-timer.....	3045
6.10.47 ipv6 nd nud reachable-time.....	3047
6.10.48 ipv6 nd proxy inner-access-vlan enable.....	3049
6.10.49 ipv6 nd proxy inter-access-vlan enable.....	3050
6.10.50 ipv6 nd ra.....	3051
6.10.51 ipv6 nd ra dns-server.....	3053
6.10.52 ipv6 nd ra dns-suffix.....	3054
6.10.53 ipv6 nd ra halt.....	3055
6.10.54 ipv6 nd ra hop-limit.....	3057

6.10.55 ipv6 nd ra preference.....	3058
6.10.56 ipv6 nd ra prefix.....	3060
6.10.57 ipv6 nd ra route-information.....	3063
6.10.58 ipv6 nd ra router-lifetime.....	3065
6.10.59 ipv6 nd stale-timeout.....	3066
6.10.60 ipv6 neighbor.....	3067
6.10.61 ipv6 packet-too-big drop.....	3069
6.10.62 ipv6 pathmtu.....	3071
6.10.63 ipv6 pathmtu age.....	3072
6.10.64 nd optimized-passby enable.....	3073
6.10.65 nd optimized-reply disable.....	3074
6.10.66 nd trap hash-conflict enable.....	3076
6.10.67 nd trap hash-conflict history.....	3077
6.10.68 nd trap hash-conflict interval.....	3078
6.10.69 nd-miss message-cache disable.....	3079
6.10.70 reset ipv6 attack-source overlapping-fragment.....	3080
6.10.71 reset ipv6 neighbors.....	3081
6.10.72 reset ipv6 pathmtu.....	3083
6.10.73 reset ipv6 socket pktsort.....	3084
6.10.74 reset ipv6 statistics.....	3084
6.10.75 reset nd optimized-reply statistics.....	3085
6.10.76 reset rawip ipv6 statistics.....	3086
6.10.77 reset tcp ipv6 authentication-statistics.....	3087
6.10.78 reset tcp ipv6 statistics.....	3088
6.10.79 reset udp ipv6 statistics.....	3088
6.10.80 segment-routing ipv6 head pop.....	3089
6.10.81 service type tunnel.....	3091
6.10.82 tcp ipv6 max-mss.....	3092
6.10.83 tcp ipv6 min-mss.....	3093
6.10.84 tcp ipv6 timer fin-timeout.....	3095
6.10.85 tcp ipv6 timer syn-timeout.....	3096
6.10.86 tcp ipv6 window.....	3097
6.11 DHCPv6 Configuration Commands.....	3098
6.11.1 Command Support.....	3098
6.11.2 address prefix.....	3098
6.11.3 capwap-ac (IPv6 address pool view).....	3101
6.11.4 conflict-address expire-time.....	3103
6.11.5 dhcpv6 client information-request.....	3104
6.11.6 dhcpv6 client pd.....	3105
6.11.7 dhcpv6 client renew.....	3107
6.11.8 dhcpv6 duid.....	3108
6.11.9 dhcpv6 interface-id format.....	3109

6.11.10 dhcpv6 interface-id insert enable.....	3113
6.11.11 dhcpv6 packet-rate.....	3114
6.11.12 dhcpv6 packet-rate drop-alarm enable.....	3115
6.11.13 dhcpv6 packet-rate drop-alarm threshold.....	3116
6.11.14 dhcpv6 pool.....	3118
6.11.15 dhcpv6 relay advertise prefix-delegation route.....	3119
6.11.16 dhcpv6 relay prefix-delegation route.....	3120
6.11.17 dhcpv6 relay destination.....	3122
6.11.18 dhcpv6 relay server-select.....	3124
6.11.19 dhcpv6 relay source-interface.....	3125
6.11.20 dhcpv6 relay option79 insert enable.....	3128
6.11.21 dhcpv6 remote-id format.....	3129
6.11.22 dhcpv6 remote-id insert enable.....	3134
6.11.23 dhcpv6 remote-id rebuild enable.....	3135
6.11.24 dhcpv6 server (system view).....	3136
6.11.25 dhcpv6 server (interface view).....	3139
6.11.26 dhcpv6-server (DHCPv6 server group view).....	3142
6.11.27 dhcpv6 server database.....	3143
6.11.28 dhcpv6 server group.....	3145
6.11.29 display dhcpv6 client.....	3146
6.11.30 display dhcpv6 client prefix.....	3148
6.11.31 display dhcpv6 client statistics.....	3149
6.11.32 display dhcpv6 duid.....	3151
6.11.33 display dhcpv6 relay configuration.....	3151
6.11.34 display dhcpv6 relay prefix-delegation.....	3153
6.11.35 display dhcpv6 relay statistics.....	3155
6.11.36 display dhcpv6 pool.....	3157
6.11.37 display dhcpv6 relay.....	3161
6.11.38 display dhcpv6 server.....	3162
6.11.39 display dhcpv6 server group.....	3163
6.11.40 display dhcpv6 statistics.....	3165
6.11.41 dns-domain-name.....	3169
6.11.42 dns-server (IPv6 address pool view).....	3171
6.11.43 excluded-address.....	3172
6.11.44 information-refresh.....	3174
6.11.45 ipv6 address auto dhcp.....	3175
6.11.46 link-address.....	3177
6.11.47 lock (IPv6 address pool view).....	3179
6.11.48 logging (IPv6 address pool view).....	3180
6.11.49 nis-domain-name.....	3182
6.11.50 nisp-domain-name.....	3183
6.11.51 nisp-server.....	3184

6.11.52 nis-server.....	3186
6.11.53 prefix-delegation.....	3187
6.11.54 renew-time-percent rebind-time-percent.....	3190
6.11.55 reset dhcpv6 client statistics.....	3192
6.11.56 reset dhcpv6 pool.....	3193
6.11.57 reset dhcpv6 relay prefix-delegation route.....	3194
6.11.58 reset dhcpv6 relay statistics.....	3195
6.11.59 reset dhcpv6 server statistics.....	3196
6.11.60 reset dhcpv6 statistics.....	3197
6.11.61 sip-domain-name.....	3198
6.11.62 sip-server (IPv6 address pool view).....	3199
6.11.63 sntp-server.....	3200
6.11.64 static-bind address.....	3202
6.11.65 static-bind prefix.....	3203
6.11.66 suboption.....	3205
6.11.67 vendor-specific.....	3207
6.12 IPv6 DNS Configuration Commands.....	3208
6.12.1 Command Support.....	3208
6.12.2 display dns ipv6 dynamic-host.....	3208
6.12.3 display ipv6 host.....	3209
6.12.4 dns server ipv6.....	3211
6.12.5 dns server ipv6 source-ip.....	3213
6.12.6 ipv6 host.....	3214
6.12.7 reset dns ipv6 dynamic-host.....	3215
6.13 IPv6 over IPv4 Tunnel Configuration Commands.....	3216
6.13.1 Command Support.....	3216
6.13.2 destination.....	3217
6.13.3 interface tunnel.....	3218
6.13.4 source.....	3220
6.13.5 tunnel-protocol.....	3222
6.14 IPv4 over IPv6 Tunnel Configuration Commands.....	3224
6.14.1 Command Support.....	3224
6.14.2 display interface tunnel.....	3224
6.14.3 tunnel ipv4-ipv6 encapsulation-limit.....	3227
6.14.4 tunnel ipv4-ipv6 flow-label.....	3229
6.14.5 tunnel ipv4-ipv6 hop-limit.....	3230
6.14.6 tunnel ipv4-ipv6 traffic-class.....	3231
7 IP Unicast Routing Commands.....	3233
7.1 Static Route Configuration Commands.....	3233
7.1.1 Command Support.....	3233
7.1.2 ip route recursive-lookup bgp-vpnv4-route.....	3233
7.1.3 ip route recursive-lookup blackhole protocol static.....	3235

7.1.4 ip route recursive-lookup inherit-label-route enable.....	3236
7.1.5 ip route-static.....	3238
7.1.6 ip route-static default-preference.....	3242
7.1.7 ip route-static track bfd-session admin-down invalid.....	3243
7.1.8 ip route-static vpn-instance.....	3244
7.1.9 ipv6 route recursive-lookup inherit-label-route enable.....	3248
7.1.10 ipv6 route-static.....	3250
7.1.11 ipv6 route-static default-preference.....	3253
7.1.12 ipv6 route-static track bfd-session admin-down invalid.....	3254
7.1.13 ipv6 route-static vpn-instance.....	3256
7.2 RIP Configuration Commands.....	3259
7.2.1 Command Support.....	3259
7.2.2 bfd all-interfaces enable(RIP).....	3259
7.2.3 bfd all-interfaces(RIP).....	3260
7.2.4 checkzero (RIP).....	3262
7.2.5 default-cost (RIP).....	3263
7.2.6 default-route originate.....	3264
7.2.7 description (RIP).....	3266
7.2.8 display default-parameter rip.....	3267
7.2.9 display rip.....	3269
7.2.10 display rip bfd session.....	3273
7.2.11 display rip database.....	3275
7.2.12 display rip graceful-restart.....	3276
7.2.13 display rip interface.....	3278
7.2.14 display rip neighbor.....	3281
7.2.15 display rip neighbor last-nbr-down.....	3283
7.2.16 display rip route.....	3284
7.2.17 display rip statistics interface.....	3286
7.2.18 filter-policy export (RIP).....	3288
7.2.19 filter-policy import (RIP).....	3290
7.2.20 graceful-restart (RIP).....	3292
7.2.21 host-route.....	3293
7.2.22 import-route (RIP).....	3294
7.2.23 maximum load-balancing (RIP).....	3296
7.2.24 network (RIP).....	3297
7.2.25 peer (RIP).....	3298
7.2.26 preference (RIP).....	3299
7.2.27 reset rip configuration.....	3300
7.2.28 reset rip statistics.....	3301
7.2.29 rip.....	3302
7.2.30 rip authentication-mode.....	3303
7.2.31 rip bfd.....	3306

7.2.32 rip bfd block.....	3309
7.2.33 rip bfd enable.....	3310
7.2.34 rip bfd static.....	3311
7.2.35 rip input.....	3313
7.2.36 rip metricin.....	3314
7.2.37 rip metricout.....	3315
7.2.38 rip mib-binding.....	3317
7.2.39 rip output.....	3318
7.2.40 rip pkt-transmit.....	3319
7.2.41 rip poison-reverse.....	3320
7.2.42 rip replay-protect.....	3321
7.2.43 rip split-horizon.....	3323
7.2.44 rip summary-address.....	3324
7.2.45 rip valid-ttl-hops.....	3325
7.2.46 rip version.....	3326
7.2.47 silent-interface (RIP).....	3328
7.2.48 summary (RIP).....	3329
7.2.49 timers rip.....	3331
7.2.50 verify-source (RIP).....	3332
7.2.51 version (RIP).....	3333
7.3 RIPng Configuration Commands.....	3334
7.3.1 Command Support.....	3334
7.3.2 checkzero (RIPng).....	3334
7.3.3 default-cost (RIPng).....	3335
7.3.4 description (RIPng).....	3335
7.3.5 display default-parameter ripng.....	3336
7.3.6 display ripng.....	3339
7.3.7 display ripng database.....	3340
7.3.8 display ripng interface.....	3342
7.3.9 display ripng neighbor.....	3344
7.3.10 display ripng neighbor last-nbr-down.....	3345
7.3.11 display ripng route.....	3347
7.3.12 display ripng statistics interface.....	3348
7.3.13 filter-policy export (RIPng).....	3350
7.3.14 filter-policy import (RIPng).....	3352
7.3.15 import-route (RIPng).....	3353
7.3.16 ipsec sa (RIPng).....	3355
7.3.17 maximum load-balancing (RIPng).....	3356
7.3.18 preference (RIPng).....	3358
7.3.19 reset ripng statistics.....	3359
7.3.20 ripng.....	3360
7.3.21 ripng default-route.....	3361

7.3.22 ripng enable.....	3362
7.3.23 ripng input.....	3363
7.3.24 ripng ipsec sa.....	3364
7.3.25 ripng metricin.....	3365
7.3.26 ripng metricout.....	3367
7.3.27 ripng output.....	3368
7.3.28 ripng pkt-transmit.....	3369
7.3.29 ripng poison-reverse.....	3370
7.3.30 ripng split-horizon.....	3371
7.3.31 ripng summary-address.....	3372
7.3.32 timers ripng.....	3374
7.4 OSPF Configuration Commands.....	3375
7.4.1 Command Support.....	3375
7.4.2 abr-summary (OSPF area).....	3375
7.4.3 advertise mpls-lsr-id.....	3377
7.4.4 area (OSPF).....	3379
7.4.5 asbr-summary (OSPF).....	3380
7.4.6 authentication-mode (OSPF area).....	3383
7.4.7 bandwidth-config enable.....	3387
7.4.8 bandwidth-reference (OSPF).....	3388
7.4.9 bfd all-interfaces (OSPF).....	3389
7.4.10 default (OSPF).....	3391
7.4.11 default-cost (OSPF Area).....	3393
7.4.12 default-route-advertise (OSPF).....	3394
7.4.13 description (OSPF).....	3399
7.4.14 description (OSPF Area).....	3400
7.4.15 display default-parameter ospf.....	3400
7.4.16 display gtsm statistics.....	3403
7.4.17 display ospf abr-asbr.....	3404
7.4.18 display ospf asbr-summary.....	3406
7.4.19 display ospf bfd session.....	3408
7.4.20 display ospf brief.....	3411
7.4.21 display ospf cumulative.....	3417
7.4.22 display ospf error.....	3420
7.4.23 display ospf global-statistics.....	3426
7.4.24 display ospf graceful-restart.....	3429
7.4.25 display ospf interface.....	3436
7.4.26 display ospf lsdb.....	3441
7.4.27 display ospf mesh-group.....	3450
7.4.28 display ospf mignp-routing.....	3451
7.4.29 display ospf nexthop.....	3454
7.4.30 display ospf peer.....	3456

7.4.31 display ospf request-queue.....	3463
7.4.32 display ospf retrans-queue.....	3464
7.4.33 display ospf routing.....	3466
7.4.34 display ospf sham-link.....	3468
7.4.35 display ospf spf-statistics.....	3470
7.4.36 display ospf statistics updated-lsa.....	3473
7.4.37 display ospf vlink.....	3477
7.4.38 dn-bit-set.....	3478
7.4.39 dn-bit-check.....	3480
7.4.40 domain-id (OSPF).....	3481
7.4.41 eca-route-type compatible.....	3483
7.4.42 enable log.....	3485
7.4.43 filter export (OSPF Area).....	3486
7.4.44 filter import (OSPF Area).....	3487
7.4.45 filter-lsa-out peer.....	3489
7.4.46 filter-policy export (OSPF).....	3491
7.4.47 filter-policy import (OSPF).....	3493
7.4.48 flooding-control.....	3495
7.4.49 frr (OSPF).....	3496
7.4.50 frr-policy route (OSPF).....	3497
7.4.51 frr-priority static low.....	3499
7.4.52 graceful-restart (OSPF).....	3500
7.4.53 graceful-restart helper-role (OSPF).....	3502
7.4.54 gtsm default-action.....	3504
7.4.55 gtsm log drop-packet all.....	3506
7.4.56 import-route (OSPF).....	3507
7.4.57 local-mt enable (OSPF).....	3511
7.4.58 local-mt filter-policy (OSPF).....	3512
7.4.59 loop-free-alternate (OSPF).....	3514
7.4.60 lsa-arrival-interval.....	3515
7.4.61 lsa-originate-interval.....	3517
7.4.62 lsdb-overflow-limit.....	3519
7.4.63 maximum load-balancing (OSPF).....	3520
7.4.64 maximum-routes.....	3522
7.4.65 mesh-group enable.....	3524
7.4.66 network (OSPF area).....	3525
7.4.67 nexthop (OSPF).....	3527
7.4.68 nssa (OSPF Area).....	3528
7.4.69 opaque-capability enable.....	3532
7.4.70 ospf.....	3533
7.4.71 ospf authentication-mode.....	3535
7.4.72 ospf bfd.....	3539

7.4.73 ospf bfd block.....	3542
7.4.74 ospf cost.....	3543
7.4.75 ospf dr-priority.....	3545
7.4.76 ospf enable.....	3546
7.4.77 ospf filter-lsa-out.....	3548
7.4.78 ospf frr block.....	3550
7.4.79 ospf maxage-lsa auto-protect disable.....	3551
7.4.80 ospf mib-binding.....	3552
7.4.81 ospf mtu-enable.....	3553
7.4.82 ospf network-type.....	3554
7.4.83 ospf p2mp-mask-ignore.....	3556
7.4.84 ospf router-id auto-recover disable.....	3557
7.4.85 ospf smart-discover.....	3558
7.4.86 ospf suppress-flapping peer.....	3560
7.4.87 ospf suppress-flapping peer disable.....	3561
7.4.88 ospf suppress-flapping peer hold-down.....	3562
7.4.89 ospf suppress-flapping peer hold-max-cost disable.....	3564
7.4.90 ospf suppress-reachability.....	3565
7.4.91 ospf timer dead.....	3566
7.4.92 ospf timer hello.....	3568
7.4.93 ospf timer poll.....	3569
7.4.94 ospf timer retransmit.....	3570
7.4.95 ospf trans-delay.....	3571
7.4.96 ospf valid-ttl-hops.....	3572
7.4.97 p2mp-peer.....	3574
7.4.98 peer (OSPF).....	3575
7.4.99 preference (OSPF).....	3576
7.4.100 prefix-priority (OSPF).....	3578
7.4.101 reset gtsm statistics.....	3580
7.4.102 reset ospf counters.....	3581
7.4.103 reset ospf process.....	3582
7.4.104 reset ospf redistribution.....	3583
7.4.105 reset ospf suppress-flapping peer.....	3584
7.4.106 retransmission-limit.....	3585
7.4.107 route-tag.....	3586
7.4.108 rfc1583 compatible.....	3588
7.4.109 sham-hello enable (OSPF).....	3589
7.4.110 sham-link (OSPF Area).....	3590
7.4.111 silent-interface (OSPF).....	3595
7.4.112 spf-schedule-interval.....	3596
7.4.113 stub (OSPF area).....	3598
7.4.114 stub-router (OSPF).....	3599

7.4.115 suppress-flapping peer disable (OSPF).....	3600
7.4.116 suppress-reachability (OSPF).....	3601
7.4.117 vlink-peer (OSPF area).....	3602
7.4.118 vpn-instance-capability simple (OSPF).....	3607
7.5 OSPFv3 Configuration Commands.....	3609
7.5.1 Command Support.....	3609
7.5.2 abr-summary (OSPFv3 Area).....	3609
7.5.3 area (OSPFv3).....	3610
7.5.4 asbr-summary (OSPFv3).....	3611
7.5.5 authentication-mode (OSPFv3).....	3613
7.5.6 bandwidth-reference (OSPFv3).....	3615
7.5.7 bfd all-interfaces (OSPFv3).....	3616
7.5.8 default (OSPFv3).....	3620
7.5.9 default-cost (OSPFv3 Area).....	3621
7.5.10 default-route-advertise (OSPFv3).....	3622
7.5.11 description (OSPFv3 Area).....	3624
7.5.12 description (OSPFv3).....	3625
7.5.13 display default-parameter ospfv3.....	3626
7.5.14 display ospfv3.....	3629
7.5.15 display ospfv3 abr-summary-list.....	3632
7.5.16 display ospfv3 area.....	3633
7.5.17 display ospfv3 asbr-summary.....	3635
7.5.18 display ospfv3 bfd session.....	3637
7.5.19 display ospfv3 black-box neighbor-down.....	3641
7.5.20 display ospfv3 error.....	3642
7.5.21 display ospfv3 graceful-restart-information.....	3646
7.5.22 display ospfv3 interface.....	3649
7.5.23 display ospfv3 lsd.....	3654
7.5.24 display ospfv3 next-hop.....	3658
7.5.25 display ospfv3 path.....	3659
7.5.26 display ospfv3 peer.....	3661
7.5.27 display ospfv3 request-list.....	3663
7.5.28 display ospfv3 retrans-list.....	3665
7.5.29 display ospfv3 routing.....	3667
7.5.30 display ospfv3 sham-link.....	3670
7.5.31 display ospfv3 topology.....	3672
7.5.32 display ospfv3 vlink.....	3673
7.5.33 domain-id (OSPFv3).....	3675
7.5.34 filter export (OSPFv3).....	3677
7.5.35 filter import (OSPFv3).....	3679
7.5.36 filter-policy export (OSPFv3).....	3681
7.5.37 filter-policy import (OSPFv3).....	3682

7.5.38 frr (OSPFv3).....	3683
7.5.39 frr-policy route (OSPFv3).....	3685
7.5.40 graceful-restart (OSPFv3).....	3686
7.5.41 helper-role (OSPFv3).....	3688
7.5.42 import-route (OSPFv3).....	3689
7.5.43 ipsec sa (OSPFv3).....	3692
7.5.44 loop-free-alternate (OSPFv3).....	3693
7.5.45 lsa-forwarding-address.....	3695
7.5.46 maximum load-balancing (OSPFv3).....	3696
7.5.47 nexthop (OSPFv3).....	3698
7.5.48 nssa (OSPFv3 Area).....	3699
7.5.49 ospfv3.....	3701
7.5.50 ospfv3 area.....	3702
7.5.51 ospfv3 authentication-mode.....	3704
7.5.52 ospfv3 bfd.....	3707
7.5.53 ospfv3 bfd block.....	3710
7.5.54 ospfv3 cost.....	3712
7.5.55 ospfv3 dr-priority.....	3713
7.5.56 ospfv3 frr block.....	3714
7.5.57 ospfv3 ipsec sa.....	3715
7.5.58 ospfv3 mib-binding.....	3717
7.5.59 ospfv3 mtu-ignore.....	3718
7.5.60 ospfv3 network-type.....	3719
7.5.61 ospfv3 peer router-id.....	3720
7.5.62 ospfv3 router-id auto-recover disable.....	3722
7.5.63 ospfv3 suppress-flapping peer.....	3723
7.5.64 ospfv3 suppress-flapping peer disable.....	3725
7.5.65 ospfv3 suppress-flapping peer hold-down.....	3726
7.5.66 ospfv3 suppress-flapping peer hold-max-cost disable.....	3727
7.5.67 ospfv3 timer dead.....	3729
7.5.68 ospfv3 timer hello.....	3730
7.5.69 ospfv3 timer poll.....	3732
7.5.70 ospfv3 timer retransmit.....	3733
7.5.71 ospfv3 trans-delay.....	3734
7.5.72 ospfv3 valid-ttl-hops.....	3736
7.5.73 preference (OSPFv3).....	3737
7.5.74 reset ospfv3.....	3739
7.5.75 reset ospfv3 suppress-flapping peer.....	3740
7.5.76 rfc1583 compatible (OSPFv3).....	3741
7.5.77 route-tag (OSPFv3).....	3742
7.5.78 router-id (OSPFv3).....	3743
7.5.79 sham-hello enable (OSPFv3).....	3744

7.5.80 sham-link (OSPFv3).....	3745
7.5.81 silent-interface (OSPFv3).....	3748
7.5.82 spf timers.....	3749
7.5.83 spf-schedule-interval (OSPFv3).....	3751
7.5.84 stub (OSPFv3 Area).....	3753
7.5.85 stub-router (OSPFv3).....	3754
7.5.86 suppress-flapping peer disable (OSPFv3).....	3755
7.5.87 vlink-peer (OSPFv3 Area).....	3756
7.5.88 vpn-instance-capability simple (OSPFv3).....	3760
7.6 IPv4 IS-IS Configuration Commands.....	3760
7.6.1 Command Support.....	3761
7.6.2 adjacency-strict-check enable.....	3761
7.6.3 area-authentication-mode.....	3762
7.6.4 attached-bit advertise.....	3766
7.6.5 attached-bit avoid-learning.....	3767
7.6.6 auto-cost enable.....	3768
7.6.7 bandwidth-reference (IS-IS).....	3770
7.6.8 bfd all-interfaces (IS-IS).....	3772
7.6.9 bfd all-interfaces enable.....	3775
7.6.10 circuit-cost.....	3776
7.6.11 circuit default-tag.....	3777
7.6.12 cost-style.....	3779
7.6.13 default-route-advertise (IS-IS).....	3781
7.6.14 description (IS-IS).....	3784
7.6.15 display default-parameter isis.....	3785
7.6.16 display isis cost interface.....	3789
7.6.17 display isis bfd interface.....	3791
7.6.18 display isis bfd session.....	3792
7.6.19 display isis brief.....	3794
7.6.20 display isis debug-switches.....	3797
7.6.21 display isis error.....	3798
7.6.22 display isis graceful-restart status.....	3802
7.6.23 display isis interface.....	3804
7.6.24 display isis last-peer-change.....	3809
7.6.25 display isis lsdb.....	3812
7.6.26 display isis mesh-group.....	3816
7.6.27 display isis name-table.....	3817
7.6.28 display isis peer.....	3818
7.6.29 display isis purge packet.....	3822
7.6.30 display isis route.....	3823
7.6.31 display isis spf-log.....	3829
7.6.32 display isis spf-tree.....	3833

7.6.33 display isis statistics.....	3841
7.6.34 display isis traffic-eng advertisements.....	3846
7.6.35 display isis traffic-eng link.....	3850
7.6.36 display isis traffic-eng network.....	3852
7.6.37 display isis traffic-eng statistics.....	3854
7.6.38 display isis traffic-eng sub-tlvs.....	3855
7.6.39 domain-authentication-mode.....	3857
7.6.40 filter-policy export (IS-IS).....	3860
7.6.41 filter-policy import (IS-IS).....	3862
7.6.42 flash-flood.....	3864
7.6.43 frr (IS-IS).....	3865
7.6.44 frr-policy route.....	3867
7.6.45 graceful-restart (IS-IS).....	3868
7.6.46 graceful-restart no-impact-holdtime.....	3869
7.6.47 graceful-restart interval.....	3871
7.6.48 graceful-restart suppress-sa.....	3872
7.6.49 graceful-restart t2-interval.....	3873
7.6.50 import-route (IS-IS).....	3875
7.6.51 import-route isis level-1 into level-2.....	3879
7.6.52 import-route isis level-2 into level-1.....	3881
7.6.53 isis.....	3883
7.6.54 isis authentication-mode.....	3885
7.6.55 isis bfd.....	3889
7.6.56 isis bfd block.....	3891
7.6.57 isis bfd enable.....	3893
7.6.58 isis bfd static.....	3894
7.6.59 isis circuit-level.....	3895
7.6.60 isis circuit-type.....	3897
7.6.61 isis cost.....	3899
7.6.62 isis delay-peer.....	3901
7.6.63 isis dis-name.....	3903
7.6.64 isis dis-priority.....	3904
7.6.65 isis enable.....	3905
7.6.66 isis lfa-backup.....	3906
7.6.67 isis lsp seq-overflow auto-recover disable.....	3908
7.6.68 isis mesh-group.....	3909
7.6.69 isis padding-hello.....	3911
7.6.70 isis peer-ip-ignore.....	3912
7.6.71 isis ppp-negotiation.....	3913
7.6.72 isis ppp-ospf-check.....	3915
7.6.73 isis purge-lsp auto-protect disable.....	3916
7.6.74 isis silent.....	3917

7.6.75 isis small-hello.....	3918
7.6.76 isis suppress-flapping peer.....	3920
7.6.77 isis suppress-flapping peer disable.....	3922
7.6.78 isis suppress-flapping peer hold-down.....	3923
7.6.79 isis suppress-flapping peer hold-max-cost disable.....	3924
7.6.80 isis suppress-reachability.....	3925
7.6.81 isis system-id auto-recover disable.....	3927
7.6.82 isis tag-value.....	3928
7.6.83 isis timer csnp.....	3929
7.6.84 isis timer hello.....	3931
7.6.85 isis timer holding-multiplier.....	3933
7.6.86 isis timer lsp-retransmit.....	3935
7.6.87 isis timer lsp-throttle.....	3937
7.6.88 is-level.....	3938
7.6.89 is-name.....	3940
7.6.90 is-name map.....	3941
7.6.91 log-peer-change.....	3942
7.6.92 loop-free-alternate.....	3944
7.6.93 lsp-fragments-extend.....	3945
7.6.94 lsp-length.....	3946
7.6.95 maximum load-balancing (IS-IS).....	3948
7.6.96 network-entity.....	3949
7.6.97 nexthop (IS-IS).....	3950
7.6.98 optional-checksum enable.....	3951
7.6.99 preference (IS-IS).....	3952
7.6.100 prefix-priority (IS-IS).....	3954
7.6.101 purge-originator-identification enable.....	3956
7.6.102 reset isis all.....	3957
7.6.103 reset isis peer.....	3958
7.6.104 reset isis suppress-flapping peer.....	3960
7.6.105 set-overload.....	3961
7.6.106 spf-priority.....	3964
7.6.107 spf-slice-size.....	3965
7.6.108 summary (IS-IS).....	3965
7.6.109 suppress-flapping peer disable (IS-IS).....	3967
7.6.110 timer lsp-generation.....	3968
7.6.111 timer lsp-max-age.....	3970
7.6.112 timer lsp-refresh.....	3971
7.6.113 timer spf.....	3973
7.6.114 virtual-system.....	3974
7.7 IPv6 IS-IS Configuration Commands.....	3975
7.7.1 Command Support.....	3975

7.7.2 display isis ipv6 bfd interface.....	3975
7.7.3 display isis ipv6 bfd session.....	3977
7.7.4 ipv6 auto-cost enable.....	3980
7.7.5 ipv6 bandwidth-reference.....	3982
7.7.6 ipv6 bfd all-interfaces enable (IS-IS).....	3983
7.7.7 ipv6 bfd all-interfaces(IS-IS).....	3984
7.7.8 ipv6 circuit-cost.....	3987
7.7.9 ipv6 circuit default-tag.....	3988
7.7.10 ipv6 default-route-advertise.....	3990
7.7.11 ipv6 enable(IS-IS).....	3992
7.7.12 ipv6 filter-policy export.....	3994
7.7.13 ipv6 filter-policy import.....	3996
7.7.14 ipv6 import-route.....	3998
7.7.15 ipv6 import-route isis level-1 into level-2.....	4002
7.7.16 ipv6 import-route isis level-2 into level-1.....	4004
7.7.17 ipv6 maximum load-balancing.....	4006
7.7.18 ipv6 preference.....	4007
7.7.19 ipv6 prefix-priority (IS-IS).....	4009
7.7.20 ipv6 spf-priority.....	4011
7.7.21 ipv6 summary.....	4012
7.7.22 isis ipv6 bfd.....	4013
7.7.23 isis ipv6 bfd block.....	4015
7.7.24 isis ipv6 bfd enable.....	4017
7.7.25 isis ipv6 cost.....	4018
7.7.26 isis ipv6 enable.....	4021
7.7.27 isis ipv6 suppress-reachability.....	4022
7.7.28 isis ipv6 tag-value.....	4024
7.8 BGP Configuration Commands.....	4025
7.8.1 Command Support.....	4025
7.8.2 active-route-advertise.....	4026
7.8.3 aggregate (BGP).....	4027
7.8.4 as-notation plain.....	4030
7.8.5 as-path-limit.....	4032
7.8.6 auto-frr.....	4033
7.8.7 bestroute as-path-ignore.....	4034
7.8.8 bestroute igp-metric-ignore.....	4035
7.8.9 bestroute l2vpn-preference vpls.....	4036
7.8.10 bestroute med-confederation (BGP).....	4037
7.8.11 bestroute med-none-as-maximum.....	4038
7.8.12 bestroute nexthop-resolved.....	4039
7.8.13 bestroute routerid-prior-clusterlist.....	4041
7.8.14 bgp.....	4042

7.8.15 bgp dynamic-session-limit.....	4044
7.8.16 bgp fast-refresh enable.....	4045
7.8.17 check-first-as.....	4046
7.8.18 compare-different-as-med.....	4047
7.8.19 confederation id.....	4048
7.8.20 confederation nonstandard.....	4050
7.8.21 confederation peer-as.....	4051
7.8.22 confederation route unicast-to-label disable.....	4052
7.8.23 dampening.....	4053
7.8.24 default ipv4-unicast.....	4056
7.8.25 default local-preference.....	4057
7.8.26 default med.....	4058
7.8.27 default-route imported.....	4059
7.8.28 deterministic-med (BGP).....	4060
7.8.29 display bgp bfd session.....	4062
7.8.30 display bgp error.....	4064
7.8.31 display bgp error discard.....	4066
7.8.32 display bgp group.....	4068
7.8.33 display bgp ipv6 bfd session.....	4078
7.8.34 display bgp ipv6 routing-table.....	4081
7.8.35 display bgp ipv6 routing-table statistics.....	4089
7.8.36 display bgp mdt brief.....	4091
7.8.37 display bgp mdt routing-table.....	4093
7.8.38 display bgp mdt routing-table statistics.....	4101
7.8.39 display bgp multicast group.....	4104
7.8.40 display bgp multicast network.....	4107
7.8.41 display bgp multicast paths.....	4108
7.8.42 display bgp multicast peer.....	4109
7.8.43 display bgp multicast routing-table.....	4111
7.8.44 display bgp multicast routing-table as-path-filter.....	4115
7.8.45 display bgp multicast routing-table cidr.....	4117
7.8.46 display bgp multicast routing-table community.....	4118
7.8.47 display bgp multicast routing-table community-filter.....	4120
7.8.48 display bgp multicast routing-table dampened.....	4122
7.8.49 display bgp multicast routing-table dampening parameter.....	4123
7.8.50 display bgp multicast routing-table different-origin-as.....	4124
7.8.51 display bgp multicast routing-table flap-info.....	4126
7.8.52 display bgp multicast routing-table peer.....	4128
7.8.53 display bgp multicast routing-table regular-expression.....	4130
7.8.54 display bgp multicast routing-table statistics.....	4131
7.8.55 display bgp multicast update-peer-group.....	4132
7.8.56 display bgp mvpn brief.....	4134

7.8.57 display bgp mvpn routing-table.....	4136
7.8.58 display bgp mvpn routing-table statistics.....	4147
7.8.59 display bgp network.....	4150
7.8.60 display bgp paths.....	4153
7.8.61 display bgp peer.....	4156
7.8.62 display bgp resource.....	4175
7.8.63 display bgp routing-table.....	4176
7.8.64 display bgp routing-table dampened.....	4185
7.8.65 display bgp routing-table dampening parameter.....	4188
7.8.66 display bgp routing-table flap-info.....	4189
7.8.67 display bgp routing-table label.....	4194
7.8.68 display bgp routing-table peer no-advertise.....	4196
7.8.69 display bgp routing-table peer statistics.....	4201
7.8.70 display bgp routing-table statistics.....	4204
7.8.71 display bgp update-peer-group.....	4207
7.8.72 display bgp vpnv4 brief.....	4211
7.8.73 display bgp vpnv4 routing-table.....	4212
7.8.74 display bgp vpnv4 routing-table statistics.....	4227
7.8.75 display bgp vpnv6 brief.....	4233
7.8.76 display bgp vpnv6 routing-table.....	4234
7.8.77 display bgp vpnv6 routing-table statistics.....	4249
7.8.78 display default-parameter bgp.....	4255
7.8.79 display mbgp routing-table.....	4257
7.8.80 display mbgp routing-table statistics.....	4260
7.8.81 ebgp-interface-sensitive.....	4262
7.8.82 ext-community-change enable.....	4263
7.8.83 filter-policy export (BGP).....	4264
7.8.84 filter-policy import (BGP).....	4267
7.8.85 graceful-restart (BGP).....	4269
7.8.86 graceful-restart peer-reset.....	4270
7.8.87 graceful-restart timer restart.....	4271
7.8.88 graceful-restart timer wait-for-rib.....	4272
7.8.89 group.....	4273
7.8.90 import-route (BGP).....	4275
7.8.91 ipv4-family.....	4277
7.8.92 ipv6-family.....	4279
7.8.93 load-balancing as-path-ignore.....	4280
7.8.94 maximum load-balancing (BGP).....	4281
7.8.95 maximum load-balancing eibgp.....	4284
7.8.96 network (BGP).....	4286
7.8.97 nexthop recursive-lookup (BGP).....	4288
7.8.98 nexthop recursive-lookup delay.....	4289

7.8.99 nexthop recursive-lookup non-critical-event delay.....	4290
7.8.100 out-delay.....	4293
7.8.101 peer advertise-community.....	4294
7.8.102 peer advertise-ext-community.....	4296
7.8.103 peer allow-as-loop.....	4297
7.8.104 peer as-number.....	4299
7.8.105 peer as-path-filter.....	4302
7.8.106 peer bfd.....	4304
7.8.107 peer bfd block.....	4306
7.8.108 peer bfd enable.....	4308
7.8.109 peer capability-advertise.....	4310
7.8.110 peer connect-interface.....	4312
7.8.111 peer connected-check-ignore.....	4314
7.8.112 peer default-route-advertise.....	4315
7.8.113 peer description (BGP).....	4318
7.8.114 peer ebgp-max-hop.....	4320
7.8.115 peer enable (BGP).....	4322
7.8.116 peer fake-as.....	4323
7.8.117 peer filter-policy.....	4325
7.8.118 peer group.....	4328
7.8.119 peer ignore.....	4330
7.8.120 peer ip-prefix.....	4331
7.8.121 peer keychain (BGP).....	4334
7.8.122 peer keep-all-routes.....	4336
7.8.123 peer label-route-capability (BGP).....	4337
7.8.124 peer listen-net.....	4339
7.8.125 peer listen-only.....	4341
7.8.126 peer log-change.....	4342
7.8.127 peer next-hop-invariable.....	4344
7.8.128 peer next-hop-local.....	4345
7.8.129 peer out-delay.....	4347
7.8.130 peer password.....	4349
7.8.131 peer preferred-value.....	4351
7.8.132 peer public-as-only.....	4353
7.8.133 peer reflect-client.....	4355
7.8.134 peer route-limit.....	4357
7.8.135 peer route-policy.....	4360
7.8.136 peer route-update-interval.....	4362
7.8.137 peer timer.....	4364
7.8.138 peer tnl-policy.....	4367
7.8.139 peer timer connect-retry.....	4368
7.8.140 peer tracking.....	4370

7.8.141 peer valid-ttl-hops.....	4372
7.8.142 preference (BGP).....	4374
7.8.143 reflect between-clients.....	4378
7.8.144 reflect change-path-attribute.....	4379
7.8.145 reflector cluster-id.....	4381
7.8.146 refresh bgp.....	4383
7.8.147 refresh bgp multicast.....	4385
7.8.148 refresh bgp multicast external.....	4386
7.8.149 refresh bgp multicast internal.....	4387
7.8.150 reset bgp.....	4388
7.8.151 reset bgp dampening.....	4391
7.8.152 reset bgp flap-info.....	4393
7.8.153 reset bgp flapping-count.....	4396
7.8.154 reset bgp mdt.....	4398
7.8.155 reset bgp multicast.....	4400
7.8.156 reset bgp multicast dampening.....	4401
7.8.157 reset bgp multicast external.....	4402
7.8.158 reset bgp multicast flap-info.....	4403
7.8.159 reset bgp multicast internal.....	4404
7.8.160 reset bgp mvpn.....	4405
7.8.161 router-id (BGP).....	4406
7.8.162 router-id (BGP-VPN Instance View).....	4408
7.8.163 route-select delay.....	4409
7.8.164 routing-table limit threshold-alarm.....	4411
7.8.165 routing-table rib-only.....	4413
7.8.166 shutdown (BGP).....	4414
7.8.167 slow-peer detection disable.....	4415
7.8.168 slow-peer detection threshold.....	4417
7.8.169 summary automatic.....	4418
7.8.170 supernet unicast advertise.....	4419
7.8.171 timer (BGP).....	4421
7.8.172 timer connect-retry.....	4423
7.8.173 undo synchronization (BGP).....	4424
7.9 Routing Policy Configuration Commands.....	4425
7.9.1 Command Support.....	4425
7.9.2 apply as-path.....	4425
7.9.3 apply backup-interface.....	4427
7.9.4 apply backup-nextthop.....	4429
7.9.5 apply behavior.....	4431
7.9.6 apply comm-filter delete.....	4432
7.9.7 apply community.....	4435
7.9.8 apply cost.....	4438

7.9.9 apply cost-type.....	4439
7.9.10 apply dampening.....	4441
7.9.11 apply extcommunity.....	4443
7.9.12 apply ip-address next-hop (Route-Policy view).....	4445
7.9.13 apply ip-precedence.....	4447
7.9.14 apply ipv6 backup-interface.....	4449
7.9.15 apply ipv6 backup-nexthop.....	4451
7.9.16 apply ipv6 next-hop.....	4452
7.9.17 apply isis.....	4454
7.9.18 apply local-preference.....	4456
7.9.19 apply mpls-label.....	4457
7.9.20 apply origin.....	4458
7.9.21 apply ospf.....	4460
7.9.22 apply preference.....	4461
7.9.23 apply preferred-value.....	4463
7.9.24 apply qos-local-id.....	4464
7.9.25 apply tag.....	4465
7.9.26 apply traffic-index.....	4466
7.9.27 description (Route-Policy view).....	4468
7.9.28 display ip as-path-filter.....	4469
7.9.29 display ip community-filter.....	4470
7.9.30 display ip extcommunity-filter.....	4472
7.9.31 display ip ip-prefix.....	4474
7.9.32 display ip ipv6-prefix.....	4476
7.9.33 display ip rd-filter.....	4478
7.9.34 display route-policy.....	4479
7.9.35 goto next-node.....	4481
7.9.36 if-match acl (Route-Policy view).....	4482
7.9.37 if-match as-path-filter.....	4484
7.9.38 if-match community-filter.....	4486
7.9.39 if-match cost.....	4488
7.9.40 if-match extcommunity-filter.....	4490
7.9.41 if-match interface.....	4492
7.9.42 if-match ip.....	4493
7.9.43 if-match ip-prefix.....	4495
7.9.44 if-match ipv6.....	4497
7.9.45 if-match mpls-label.....	4498
7.9.46 if-match rd-filter.....	4499
7.9.47 if-match route-type.....	4501
7.9.48 if-match tag.....	4503
7.9.49 ip as-path-filter.....	4504
7.9.50 ip community-filter.....	4507

7.9.51 ip extcommunity-filter.....	4512
7.9.52 ip ip-prefix.....	4516
7.9.53 ip ipv6-prefix.....	4525
7.9.54 ip rd-filter.....	4534
7.9.55 reset ip ip-prefix.....	4537
7.9.56 reset ip ipv6-prefix.....	4538
7.9.57 reset route-policy counters.....	4539
7.9.58 route-policy.....	4540
7.9.59 route-policy-change notify-delay.....	4542
7.9.60 route-policy nonexistent-config-check.....	4544
7.10 IP Routing Table Management Commands.....	4545
7.10.1 Command Support.....	4545
7.10.2 arp vlink-direct-route advertise.....	4545
7.10.3 display fib.....	4547
7.10.4 display fib acl.....	4552
7.10.5 display fib interface.....	4553
7.10.6 display fib ip-prefix.....	4555
7.10.7 display fib longer.....	4557
7.10.8 display fib next-hop.....	4560
7.10.9 display fib statistics.....	4561
7.10.10 display fib statistics all.....	4562
7.10.11 display ip routing-table.....	4564
7.10.12 display ip routing-table limit.....	4571
7.10.13 display ip routing-table protocol.....	4573
7.10.14 display ip routing-table statistics.....	4576
7.10.15 display ip routing-table time-range.....	4577
7.10.16 display ipv6 fib.....	4583
7.10.17 display ipv6 routing-table.....	4585
7.10.18 display ipv6 routing-table limit.....	4590
7.10.19 display ipv6 routing-table protocol.....	4592
7.10.20 display ipv6 routing-table statistics.....	4595
7.10.21 display ipv6 routing-table time-range.....	4596
7.10.22 display rm bfd-session.....	4602
7.10.23 display rm interface.....	4605
7.10.24 display rm ipv6 bfd-session.....	4609
7.10.25 display rm ipv6 interface.....	4612
7.10.26 display router id.....	4614
7.10.27 display route resource.....	4615
7.10.28 ecmp load-balance.....	4616
7.10.29 ecmp load-balance difffluence.....	4617
7.10.30 ecmp local-preference disable.....	4619
7.10.31 fib regularly-refresh.....	4621

7.10.32 fib regularly-refresh disable.....	4623
7.10.33 fib threshold-alarm.....	4624
7.10.34 fib trap lpm-fail enable.....	4625
7.10.35 fib trap lpm-fail history.....	4627
7.10.36 fib trap lpm-fail interval.....	4628
7.10.37 ip frr (system view).....	4629
7.10.38 ip prefix-limit.....	4630
7.10.39 ip prefix-limit log-interval.....	4633
7.10.40 ip route recursive-lookup default-route protocol.....	4634
7.10.41 ip route trace unicast-route-change disable.....	4635
7.10.42 ipv6 fib-loadbalance-type hash-based.....	4636
7.10.43 ipv6 fib regularly-refresh.....	4637
7.10.44 ipv6 fib regularly-refresh disable.....	4639
7.10.45 ipv6 prefix-limit.....	4640
7.10.46 ipv6 prefix-limit log-interval.....	4642
7.10.47 ipv6 frr (system view).....	4643
7.10.48 l3-forward-entry aging.....	4645
7.10.49 l3-forward-entry regularly-check.....	4646
7.10.50 l3-forward-entry self-healing enable.....	4648
7.10.51 l3-interface regularly-refresh.....	4650
7.10.52 l3-interface periodic-refresh disable.....	4652
7.10.53 refresh fib.....	4653
7.10.54 refresh ipv6 fib.....	4654
7.10.55 reset ip routing-table statistics protocol.....	4655
7.10.56 reset ipv6 routing-table statistics protocol.....	4656
7.10.57 router id.....	4657
7.10.58 route low-priority enable.....	4659
7.11 PBR Configuration Commands.....	4660
7.11.1 Command Support.....	4660
7.11.2 redirect ip-multipop.....	4661
7.11.3 redirect ip-nexthop.....	4663
7.11.4 redirect ipv6-multipop.....	4665
7.11.5 redirect ipv6-nexthop.....	4668
7.12 Route Monitoring Group Configuration Commands.....	4670
7.12.1 Command Support.....	4670
7.12.2 display ip route-monitor-group.....	4671
7.12.3 display ip route-monitor-group track-route.....	4672
7.12.4 ip route-monitor-group.....	4674
7.12.5 monitor enable.....	4675
7.12.6 operator and.....	4676
7.12.7 trigger-down-delay.....	4677
7.12.8 trigger-up-delay.....	4678

7.12.9 track ip route.....	4679
8 IP Multicast Commands.....	4682
8.1 IGMP Configuration Commands.....	4682
8.1.1 Command Support.....	4682
8.1.2 display default-parameter igmp.....	4683
8.1.3 display igmp control-message counters.....	4687
8.1.4 display igmp explicit-tracking.....	4689
8.1.5 display igmp group.....	4692
8.1.6 display igmp group ssm-mapping.....	4696
8.1.7 display igmp group static.....	4701
8.1.8 display igmp interface.....	4705
8.1.9 display igmp invalid-packet.....	4710
8.1.10 display igmp proxy group.....	4714
8.1.11 display igmp proxy interface.....	4716
8.1.12 display igmp proxy routing-table.....	4720
8.1.13 display igmp routing-table.....	4724
8.1.14 display igmp ssm-mapping.....	4727
8.1.15 igmp.....	4728
8.1.16 igmp enable.....	4729
8.1.17 igmp global limit.....	4731
8.1.18 igmp group-policy.....	4733
8.1.19 igmp ip-source-policy.....	4735
8.1.20 igmp lastmember-queryinterval.....	4737
8.1.21 igmp limit.....	4739
8.1.22 igmp max-response-time.....	4741
8.1.23 igmp on-demand.....	4743
8.1.24 igmp prompt-leave.....	4744
8.1.25 igmp proxy.....	4747
8.1.26 igmp proxy backup.....	4749
8.1.27 igmp proxy interface reroute.....	4750
8.1.28 igmp proxy reroute delay.....	4752
8.1.29 igmp query ip-source-policy.....	4753
8.1.30 igmp require-router-alert.....	4754
8.1.31 igmp robust-count.....	4756
8.1.32 igmp send-router-alert.....	4758
8.1.33 igmp ssm-mapping enable.....	4759
8.1.34 igmp static-group.....	4761
8.1.35 igmp timer other-querier-present.....	4766
8.1.36 igmp timer query.....	4768
8.1.37 igmp ttl-check.....	4769
8.1.38 igmp version.....	4771
8.1.39 lastmember-queryinterval (IGMP).....	4772

8.1.40 limit (IGMP).....	4773
8.1.41 max-response-time (IGMP).....	4775
8.1.42 prompt-leave (IGMP).....	4777
8.1.43 proxy reroute delay.....	4778
8.1.44 proxy source-lifetime.....	4780
8.1.45 proxy source-policy.....	4781
8.1.46 proxy ssm-policy.....	4782
8.1.47 require-router-alert (IGMP).....	4784
8.1.48 reset igmp control-message counters.....	4785
8.1.49 reset igmp explicit-tracking.....	4786
8.1.50 reset igmp group.....	4788
8.1.51 reset igmp group ssm-mapping.....	4789
8.1.52 robust-count (IGMP).....	4791
8.1.53 send-router-alert (IGMP).....	4793
8.1.54 ssm-mapping (IGMP).....	4794
8.1.55 timer other-querier-present (IGMP).....	4795
8.1.56 timer query (IGMP).....	4797
8.1.57 ttl-check (IGMP).....	4798
8.1.58 version (IGMP).....	4799
8.2 MLD Configuration Commands.....	4800
8.2.1 MLD Configuration Commands.....	4800
8.2.2 display default-parameter mld.....	4801
8.2.3 display mld control-message counters.....	4804
8.2.4 display mld explicit-tracking.....	4807
8.2.5 display mld group.....	4810
8.2.6 display mld group ssm-mapping.....	4813
8.2.7 display mld group static.....	4817
8.2.8 display mld interface.....	4821
8.2.9 display mld invalid-packet.....	4826
8.2.10 display mld routing-table.....	4830
8.2.11 display mld ssm-mapping.....	4832
8.2.12 display mld ssm-mapping interface.....	4834
8.2.13 lastlistener-queryinterval (MLD view).....	4835
8.2.14 limit (MLD view).....	4837
8.2.15 max-response-time (MLD view).....	4839
8.2.16 mld.....	4840
8.2.17 mld enable.....	4841
8.2.18 mld global limit.....	4843
8.2.19 mld group-policy.....	4845
8.2.20 mld ip-source-policy.....	4847
8.2.21 mld lastlistener-queryinterval.....	4848
8.2.22 mld limit.....	4850

8.2.23 mld max-response-time.....	4853
8.2.24 mld on-demand.....	4854
8.2.25 mld prompt-leave.....	4856
8.2.26 mld query ip-source-policy.....	4858
8.2.27 mld require-router-alert.....	4860
8.2.28 mld robust-count.....	4861
8.2.29 mld send-router-alert.....	4863
8.2.30 mld ssm-mapping enable.....	4865
8.2.31 mld static-group.....	4866
8.2.32 mld timer other-querier-present.....	4869
8.2.33 mld timer query.....	4871
8.2.34 mld ttl-check.....	4872
8.2.35 mld version.....	4874
8.2.36 require-router-alert (MLD view).....	4875
8.2.37 reset mld control-message counters.....	4876
8.2.38 reset mld explicit-tracking.....	4877
8.2.39 reset mld group.....	4879
8.2.40 reset mld group ssm-mapping.....	4880
8.2.41 robust-count (MLD view).....	4882
8.2.42 send-router-alert (MLD view).....	4883
8.2.43 ssm-mapping (MLD view).....	4885
8.2.44 timer other-querier-present (MLD view).....	4886
8.2.45 timer query (MLD view).....	4888
8.2.46 ttl-check (MLD view).....	4889
8.3 IPv4 PIM Configuration Commands.....	4890
8.3.1 Command Support.....	4890
8.3.2 bsm semantic fragmentation (IPv4).....	4890
8.3.3 bsr-policy (IPv4).....	4892
8.3.4 c-bsr (IPv4).....	4894
8.3.5 c-bsr admin-scope.....	4895
8.3.6 c-bsr global.....	4897
8.3.7 c-bsr group.....	4899
8.3.8 c-bsr hash-length (IPv4).....	4900
8.3.9 c-bsr holdtime (IPv4).....	4902
8.3.10 c-bsr interval (IPv4).....	4903
8.3.11 c-bsr priority (IPv4).....	4905
8.3.12 c-rp (IPv4).....	4906
8.3.13 c-rp advertisement-interval (IPv4).....	4909
8.3.14 c-rp holdtime (IPv4).....	4910
8.3.15 c-rp priority (IPv4).....	4911
8.3.16 crp-policy (IPv4).....	4912
8.3.17 display default-parameter pim-dm.....	4914

8.3.18 display default-parameter pim-sm.....	4919
8.3.19 display default-parameter pim-ssm.....	4925
8.3.20 display pim bfd session.....	4930
8.3.21 display pim bsr-info.....	4932
8.3.22 display pim claimed-route.....	4935
8.3.23 display pim control-message counters.....	4937
8.3.24 display pim grafts.....	4940
8.3.25 display pim interface.....	4941
8.3.26 display pim invalid-packet.....	4947
8.3.27 display pim neighbor.....	4953
8.3.28 display pim routing-table.....	4956
8.3.29 display pim rp-info.....	4962
8.3.30 graceful-restart (IPv4).....	4963
8.3.31 graceful-restart period (IPv4).....	4964
8.3.32 hello ipsec sa (IPv4).....	4966
8.3.33 hello-option dr-priority (IPv4).....	4967
8.3.34 hello-option holdtime (IPv4).....	4968
8.3.35 hello-option lan-delay (IPv4).....	4970
8.3.36 hello-option neighbor-tracking (IPv4).....	4971
8.3.37 hello-option override-interval (IPv4).....	4972
8.3.38 holdtime assert (IPv4).....	4974
8.3.39 holdtime join-prune (IPv4).....	4975
8.3.40 ipsec sa (IPv4).....	4977
8.3.41 join-prune max-packet-length (IPv4).....	4978
8.3.42 join-prune periodic-messages queue-size (IPv4).....	4979
8.3.43 join-prune triggered-message-cache disable (IPv4).....	4980
8.3.44 neighbor-check (IPv4).....	4981
8.3.45 pim.....	4983
8.3.46 pim bfd.....	4984
8.3.47 pim bfd enable.....	4986
8.3.48 pim bsr-boundary.....	4987
8.3.49 pim dm.....	4989
8.3.50 pim dr-election dr-priority.....	4991
8.3.51 pim hello ipsec sa.....	4992
8.3.52 pim hello-option dr-priority.....	4994
8.3.53 pim hello-option holdtime.....	4995
8.3.54 pim hello-option lan-delay.....	4997
8.3.55 pim hello-option neighbor-tracking.....	4998
8.3.56 pim hello-option override-interval.....	5000
8.3.57 pim holdtime assert.....	5002
8.3.58 pim holdtime join-prune.....	5003
8.3.59 pim ipsec sa.....	5005

8.3.60 pim join-policy.....	5006
8.3.61 pim neighbor-policy.....	5008
8.3.62 pim require-genid.....	5010
8.3.63 pim silent.....	5011
8.3.64 pim sm.....	5013
8.3.65 pim state-refresh-capable.....	5015
8.3.66 pim timer dr-switch-delay.....	5016
8.3.67 pim timer graft-retry.....	5018
8.3.68 pim timer hello.....	5019
8.3.69 pim timer join-prune.....	5020
8.3.70 pim triggered-hello-delay.....	5022
8.3.71 probe-interval (IPv4).....	5023
8.3.72 register-header-checksum.....	5024
8.3.73 register-policy (IPv4).....	5025
8.3.74 register-source.....	5027
8.3.75 register-suppression-timeout (IPv4).....	5028
8.3.76 reset pim control-message counters.....	5029
8.3.77 reset pim routing-table.....	5030
8.3.78 source-lifetime (IPv4).....	5032
8.3.79 source-policy (IPv4).....	5034
8.3.80 spt-switch-threshold (IPv4).....	5035
8.3.81 ssm-policy (IPv4).....	5037
8.3.82 state-refresh-interval (IPv4).....	5039
8.3.83 state-refresh-rate-limit (IPv4).....	5040
8.3.84 state-refresh-ttl (IPv4).....	5041
8.3.85 static-rp (IPv4).....	5043
8.3.86 timer hello (IPv4).....	5044
8.3.87 timer join-prune (IPv4).....	5046
8.3.88 timer spt-switch (IPv4).....	5047
8.4 IPv6 PIM Configuration Commands.....	5048
8.4.1 Command Support.....	5048
8.4.2 bsm semantic fragmentation (IPv6).....	5049
8.4.3 bsr-policy (IPv6).....	5050
8.4.4 c-bsr (IPv6).....	5052
8.4.5 c-bsr admin-scope (IPv6).....	5054
8.4.6 c-bsr global (IPv6).....	5056
8.4.7 c-bsr hash-length (IPv6).....	5057
8.4.8 c-bsr holdtime (IPv6).....	5058
8.4.9 c-bsr interval (IPv6).....	5060
8.4.10 c-bsr priority (IPv6).....	5061
8.4.11 c-bsr scope.....	5063
8.4.12 c-rp (IPv6).....	5064

8.4.13 c-rp advertisement-interval (IPv6).....	5067
8.4.14 c-rp holdtime (IPv6).....	5068
8.4.15 c-rp priority (IPv6).....	5069
8.4.16 crp-policy (IPv6).....	5070
8.4.17 display default-parameter pim-dm6.....	5072
8.4.18 display default-parameter pim-sm6.....	5077
8.4.19 display default-parameter pim-ssm6.....	5083
8.4.20 display pim ipv6 bsr-info.....	5087
8.4.21 display pim ipv6 bfd session.....	5090
8.4.22 display pim ipv6 claimed-route.....	5093
8.4.23 display pim ipv6 control-message counters.....	5094
8.4.24 display pim ipv6 grafts.....	5096
8.4.25 display pim ipv6 interface.....	5097
8.4.26 display pim ipv6 invalid-packet.....	5101
8.4.27 display pim ipv6 neighbor.....	5106
8.4.28 display pim ipv6 routing-table.....	5108
8.4.29 display pim ipv6 rp-info.....	5114
8.4.30 embedded-rp.....	5115
8.4.31 graceful-restart (IPv6).....	5117
8.4.32 graceful-restart period (IPv6).....	5118
8.4.33 hello-option dr-priority (IPv6).....	5119
8.4.34 hello-option holdtime (IPv6).....	5120
8.4.35 hello-option lan-delay (IPv6).....	5122
8.4.36 hello-option neighbor-tracking (IPv6).....	5123
8.4.37 hello-option override-interval (IPv6).....	5124
8.4.38 holdtime assert (IPv6).....	5126
8.4.39 holdtime join-prune (IPv6).....	5127
8.4.40 join-prune max-packet-length (IPv6).....	5128
8.4.41 join-prune periodic-messages queue-size (IPv6).....	5129
8.4.42 join-prune triggered-message-cache disable (IPv6).....	5131
8.4.43 neighbor-check (IPv6).....	5132
8.4.44 pim-ipv6.....	5133
8.4.45 pim ipv6 bfd.....	5134
8.4.46 pim ipv6 bfd enable.....	5138
8.4.47 pim ipv6 bsr-boundary.....	5139
8.4.48 pim ipv6 dm.....	5141
8.4.49 pim ipv6 hello-option dr-priority.....	5142
8.4.50 pim ipv6 hello-option holdtime.....	5143
8.4.51 pim ipv6 hello-option lan-delay.....	5145
8.4.52 pim ipv6 hello-option neighbor-tracking.....	5146
8.4.53 pim ipv6 hello-option override-interval.....	5148
8.4.54 pim ipv6 holdtime assert.....	5150

8.4.55 pim ipv6 holdtime join-prune.....	5151
8.4.56 pim ipv6 join-policy.....	5152
8.4.57 pim ipv6 neighbor-policy.....	5154
8.4.58 pim ipv6 require-genid.....	5156
8.4.59 pim ipv6 silent.....	5157
8.4.60 pim ipv6 sm.....	5159
8.4.61 pim ipv6 state-refresh-capable.....	5160
8.4.62 pim ipv6 timer dr-switch-delay.....	5161
8.4.63 pim ipv6 timer graft-retry.....	5163
8.4.64 pim ipv6 timer hello.....	5164
8.4.65 pim ipv6 timer join-prune.....	5165
8.4.66 pim ipv6 triggered-hello-delay.....	5167
8.4.67 probe-interval (IPv6).....	5168
8.4.68 register-policy (IPv6).....	5169
8.4.69 register-source (IPv6).....	5171
8.4.70 register-suppression-timeout (IPv6).....	5172
8.4.71 reset pim ipv6 control-message counters.....	5173
8.4.72 reset pim ipv6 routing-table.....	5174
8.4.73 source-lifetime (IPv6).....	5176
8.4.74 source-policy (IPv6).....	5177
8.4.75 spt-switch-threshold (IPv6).....	5179
8.4.76 ssm-policy (IPv6).....	5181
8.4.77 state-refresh-interval (IPv6).....	5182
8.4.78 state-refresh-rate-limit (IPv6).....	5184
8.4.79 state-refresh-ttl (IPv6).....	5185
8.4.80 static-rp (IPv6).....	5186
8.4.81 timer hello (IPv6).....	5188
8.4.82 timer join-prune (IPv6).....	5189
8.4.83 timer spt-switch (IPv6).....	5190
8.5 MSDP Configuration Commands.....	5191
8.5.1 Command Support.....	5192
8.5.2 cache-sa-enable.....	5192
8.5.3 display default-parameter msdp.....	5194
8.5.4 display msdp brief.....	5196
8.5.5 display msdp control-message counters.....	5199
8.5.6 display msdp invalid-packet.....	5201
8.5.7 display msdp peer-status.....	5205
8.5.8 display msdp rpf-peer.....	5210
8.5.9 display msdp sa-cache.....	5212
8.5.10 display msdp sa-count.....	5215
8.5.11 encap-data-enable.....	5217
8.5.12 import-source.....	5218

8.5.13 msdp.....	5220
8.5.14 originating-rp.....	5221
8.5.15 peer connect-interface (MSDP).....	5222
8.5.16 peer description (MSDP).....	5223
8.5.17 peer keychain (MSDP).....	5224
8.5.18 peer mesh-group.....	5226
8.5.19 peer minimum-ttl.....	5228
8.5.20 peer password (MSDP).....	5229
8.5.21 peer request-sa-enable.....	5231
8.5.22 peer sa-cache-maximum.....	5232
8.5.23 peer sa-policy.....	5234
8.5.24 peer sa-request-policy.....	5236
8.5.25 reset msdp control-message counters.....	5237
8.5.26 reset msdp peer.....	5238
8.5.27 reset msdp sa-cache.....	5240
8.5.28 reset msdp statistics.....	5241
8.5.29 shutdown (MSDP).....	5242
8.5.30 static-rpf-peer.....	5243
8.5.31 timer retry.....	5245
8.6 Multicast VPN Configuration Commands.....	5246
8.6.1 Command Support.....	5246
8.6.2 auto-discovery.....	5246
8.6.3 display default-parameter mvpn.....	5249
8.6.4 display multicast-domain control-message counters.....	5251
8.6.5 display multicast-domain invalid-packet.....	5252
8.6.6 display multicast-domain vpn-instance share-group.....	5255
8.6.7 display multicast-domain vpn-instance switch-group receive.....	5257
8.6.8 display multicast-domain vpn-instance switch-group send.....	5260
8.6.9 interface mtunnel.....	5262
8.6.10 mtu (MTI view).....	5263
8.6.11 multicast-domain holddown-time.....	5264
8.6.12 multicast-domain log switch-group-reuse.....	5266
8.6.13 multicast-domain share-group binding.....	5267
8.6.14 multicast-domain source-interface.....	5269
8.6.15 multicast-domain switch-delay.....	5270
8.6.16 multicast-domain switch-group-pool.....	5272
8.6.17 multicast-domain switch-without-register.....	5274
8.6.18 reset multicast-domain control-message counters.....	5275
8.6.19 service type (Eth-trunk interface view).....	5276
8.6.20 set multicast tunnel enhanced.....	5278
8.7 IPv4 Multicast Route Management Commands.....	5279
8.7.1 Command Support.....	5279

8.7.2 display default-parameter mrm.....	5280
8.7.3 display migp routing-table.....	5282
8.7.4 display migp routing-table statistics.....	5285
8.7.5 display mrt routing-table.....	5286
8.7.6 display mrt routing-table statistics.....	5290
8.7.7 display mrt routing-table vpn-instance.....	5291
8.7.8 display mtrace statistics.....	5293
8.7.9 display multicast boundary.....	5294
8.7.10 display multicast forwarding-table.....	5295
8.7.11 display multicast forwarding-table optimization-mode configuration.....	5300
8.7.12 display multicast routing-table.....	5302
8.7.13 display multicast routing-table static.....	5305
8.7.14 display multicast rpf-info.....	5307
8.7.15 ip rpf-route-static.....	5309
8.7.16 mtrace.....	5312
8.7.17 mtrace query-policy.....	5320
8.7.18 multicast boundary.....	5321
8.7.19 multicast cpu-forward disable.....	5323
8.7.20 multicast forwarding-table downstream-limit.....	5324
8.7.21 multicast forwarding-table route-limit.....	5325
8.7.22 multicast invalid-packet.....	5327
8.7.23 multicast load-splitting.....	5328
8.7.24 multicast load-splitting weight.....	5330
8.7.25 multicast load-splitting-timer.....	5331
8.7.26 multicast longest-match.....	5333
8.7.27 multicast routing-enable.....	5334
8.7.28 multicast ttl-check disable.....	5335
8.7.29 ping multicast.....	5336
8.7.30 reset mtrace statistics.....	5342
8.7.31 reset multicast forwarding-table.....	5343
8.7.32 reset multicast routing-table.....	5344
8.7.33 set multicast forwarding-table enhance-mode.....	5346
8.7.34 set multicast forwarding-table optimization-mode.....	5347
8.7.35 set multicast forwarding-table super-mode.....	5349
8.7.36 set multicast-hash-mode.....	5351
8.8 IPv6 Multicast Route Management Commands.....	5353
8.8.1 Command Support.....	5353
8.8.2 display multicast ipv6 boundary.....	5353
8.8.3 display multicast ipv6 forwarding-table.....	5354
8.8.4 display multicast forwarding-table optimization-mode configuration.....	5360
8.8.5 display multicast ipv6 routing-table.....	5361
8.8.6 display multicast ipv6 rpf-info.....	5364

8.8.7 multicast ipv6 boundary.....	5365
8.8.8 multicast ipv6 cpu-forward disable.....	5367
8.8.9 multicast ipv6 forwarding-table downstream-limit.....	5368
8.8.10 multicast ipv6 forwarding-table route-limit.....	5369
8.8.11 multicast ipv6 invalid-packet.....	5371
8.8.12 multicast ipv6 load-splitting.....	5372
8.8.13 multicast ipv6 load-splitting weight.....	5374
8.8.14 multicast ipv6 load-splitting-timer.....	5375
8.8.15 multicast ipv6 routing-enable.....	5377
8.8.16 multicast ttl-check disable.....	5378
8.8.17 reset multicast ipv6 forwarding-table.....	5379
8.8.18 reset multicast ipv6 routing-table.....	5380
8.8.19 set multicast forwarding-table optimization-mode.....	5382
8.8.20 set multicast forwarding-table super-mode.....	5383
8.8.21 set multicast-hash-mode.....	5386
8.9 VLAN-based IGMP Snooping Configuration Commands.....	5387
8.9.1 Command Support.....	5387
8.9.2 dhcp-snooping user-offline remove igmp-snooping.....	5387
8.9.3 display igmp-snooping.....	5388
8.9.4 display igmp-snooping configuration.....	5393
8.9.5 display igmp-snooping port-info.....	5394
8.9.6 display igmp-snooping host-tracking.....	5398
8.9.7 display igmp-snooping qinq-port-info.....	5400
8.9.8 display igmp-snooping querier.....	5402
8.9.9 display igmp-snooping router-port.....	5404
8.9.10 display igmp-snooping statistics.....	5405
8.9.11 display l2-multicast forwarding-mode.....	5409
8.9.12 display l2-multicast forwarding-table vlan.....	5410
8.9.13 display l2-multicast forwarding-table statistics.....	5412
8.9.14 igmp-snooping enable (system view).....	5414
8.9.15 igmp-snooping enable (VLAN view).....	5416
8.9.16 igmp-snooping fast-switch enable.....	5417
8.9.17 igmp-snooping fast-send report enable.....	5418
8.9.18 igmp-snooping fast-send robust-count interval.....	5419
8.9.19 igmp-snooping group-limit.....	5421
8.9.20 igmp-snooping group-policy (interface view).....	5423
8.9.21 igmp-snooping group-policy (VLAN view).....	5426
8.9.22 igmp-snooping lastmember-queryinterval.....	5428
8.9.23 igmp-snooping learning.....	5430
8.9.24 igmp-snooping limit-action.....	5432
8.9.25 igmp-snooping max-response-time.....	5433
8.9.26 igmp-snooping prompt-leave.....	5435

8.9.27 igmp-snooping host-based prompt-leave.....	5437
8.9.28 igmp-snooping proxy.....	5438
8.9.29 igmp-snooping proxy-uplink-port.....	5440
8.9.30 igmp-snooping querier enable.....	5441
8.9.31 igmp-snooping query-interval.....	5443
8.9.32 igmp-snooping report-suppress.....	5445
8.9.33 igmp-snooping require-router-alert.....	5446
8.9.34 igmp-snooping robust-count.....	5448
8.9.35 igmp-snooping router-aging-time.....	5449
8.9.36 igmp-snooping router-learning (interface view).....	5451
8.9.37 igmp-snooping router-learning (VLAN view).....	5452
8.9.38 igmp-snooping send-query enable.....	5454
8.9.39 igmp-snooping send-query source-address.....	5455
8.9.40 igmp-snooping send-router-alert.....	5457
8.9.41 igmp-snooping ssm-mapping.....	5458
8.9.42 igmp-snooping ssm-mapping enable.....	5460
8.9.43 igmp-snooping ssm-policy.....	5461
8.9.44 igmp-snooping static-group suppress-dynamic-join.....	5463
8.9.45 igmp-snooping static-router-port.....	5464
8.9.46 igmp-snooping suppress-time.....	5465
8.9.47 igmp-snooping version.....	5467
8.9.48 l2-multicast forwarding-mode.....	5470
8.9.49 l2-multicast router-port-discard.....	5472
8.9.50 l2-multicast static-group.....	5473
8.9.51 multicast drop-unknown.....	5476
8.9.52 multicast-snooping mux-vlan enable.....	5478
8.9.53 multicast-source-deny.....	5479
8.9.54 reset igmp-snooping group.....	5480
8.9.55 reset igmp-snooping qinq-port-info.....	5482
8.9.56 reset igmp-snooping statistics.....	5483
8.10 VSI-based IGMP Snooping Configuration Commands.....	5484
8.10.1 Command Support.....	5484
8.10.2 display igmp-snooping.....	5484
8.10.3 display igmp-snooping configuration.....	5487
8.10.4 display igmp-snooping port-info.....	5488
8.10.5 display igmp-snooping router-port.....	5490
8.10.6 display igmp-snooping statistics.....	5492
8.10.7 display l2-multicast forwarding-table vsi.....	5494
8.10.8 igmp-snooping enable (system view).....	5496
8.10.9 igmp-snooping enable (VSI view).....	5497
8.10.10 igmp-snooping group-limit.....	5498
8.10.11 igmp-snooping group-policy (interface view).....	5500

8.10.12 igmp-snooping group-policy (VSI view).....	5503
8.10.13 igmp-snooping lastmember-queryinterval.....	5505
8.10.14 igmp-snooping max-response-time.....	5506
8.10.15 igmp-snooping over-vpls enable.....	5508
8.10.16 igmp-snooping prompt-leave.....	5509
8.10.17 igmp-snooping query-interval.....	5510
8.10.18 igmp-snooping require-router-alert.....	5512
8.10.19 igmp-snooping robust-count.....	5513
8.10.20 igmp-snooping router-aging-time.....	5514
8.10.21 igmp-snooping router-learning.....	5516
8.10.22 igmp-snooping send-router-alert.....	5517
8.10.23 igmp-snooping ssm-mapping.....	5518
8.10.24 igmp-snooping ssm-mapping enable.....	5520
8.10.25 igmp-snooping ssm-policy.....	5521
8.10.26 igmp-snooping static-router-port (interface view).....	5522
8.10.27 igmp-snooping static-router-port (VSI view).....	5524
8.10.28 igmp-snooping version.....	5526
8.10.29 l2-multicast backup-query forward.....	5527
8.10.30 l2-multicast backup-report forward.....	5529
8.10.31 l2-multicast static-group (interface view).....	5530
8.10.32 l2-multicast static-group (VSI view).....	5532
8.10.33 reset igmp-snooping group.....	5534
8.10.34 reset igmp-snooping statistics.....	5536
8.11 BD-based IGMP Snooping Configuration Commands.....	5537
8.11.1 Command Support.....	5537
8.11.2 display igmp-snooping.....	5537
8.11.3 display igmp-snooping configuration.....	5540
8.11.4 display igmp-snooping port-info.....	5541
8.11.5 display igmp-snooping router-port.....	5544
8.11.6 display igmp-snooping statistics.....	5546
8.11.7 display l2-multicast forwarding-table bridge-domain.....	5548
8.11.8 igmp-snooping enable (system view).....	5550
8.11.9 igmp-snooping enable (BD view).....	5551
8.11.10 igmp-snooping fast-switch enable.....	5552
8.11.11 igmp-snooping group-policy(BD view).....	5553
8.11.12 igmp-snooping lastmember-queryinterval.....	5555
8.11.13 igmp-snooping learning.....	5557
8.11.14 igmp-snooping max-response-time.....	5559
8.11.15 igmp-snooping over-vxlan enable.....	5561
8.11.16 igmp-snooping prompt-leave.....	5562
8.11.17 igmp-snooping querier enable.....	5564
8.11.18 igmp-snooping query-interval.....	5566

8.11.19 igmp-snooping report-suppress.....	5568
8.11.20 igmp-snooping require-router-alert.....	5569
8.11.21 igmp-snooping robust-count.....	5571
8.11.22 igmp-snooping router-aging-time.....	5572
8.11.23 igmp-snooping router-learning (BD view).....	5574
8.11.24 igmp-snooping send-router-alert.....	5575
8.11.25 igmp-snooping ssm-mapping.....	5576
8.11.26 igmp-snooping ssm-mapping enable.....	5578
8.11.27 igmp-snooping ssm-policy.....	5579
8.11.28 igmp-snooping static-group suppress-dynamic-join.....	5581
8.11.29 igmp-snooping static-router-port.....	5582
8.11.30 igmp-snooping suppress-time.....	5584
8.11.31 igmp-snooping version.....	5585
8.11.32 l2-multicast static-group.....	5587
8.11.33 multicast drop-unknown.....	5590
8.11.34 reset igmp-snooping group.....	5591
8.11.35 reset igmp-snooping statistics.....	5593
8.12 MLD Snooping Configuration Commands.....	5594
8.12.1 Command Support.....	5594
8.12.2 display l2-multicast forwarding-mode.....	5594
8.12.3 display mld-snooping.....	5595
8.12.4 display mld-snooping configuration.....	5599
8.12.5 display mld-snooping forwarding-table.....	5600
8.12.6 display mld-snooping port-info.....	5602
8.12.7 display mld-snooping router-port.....	5604
8.12.8 display mld-snooping forwarding-table statistics.....	5606
8.12.9 display mld-snooping statistics.....	5607
8.12.10 l2-multicast forwarding-mode.....	5610
8.12.11 l2-multicast router-port-discard.....	5612
8.12.12 mld-snooping enable.....	5613
8.12.13 mld-snooping group-policy (interface view).....	5615
8.12.14 mld-snooping group-policy (VLAN view).....	5617
8.12.15 mld-snooping last-listener-query-interval.....	5620
8.12.16 mld-snooping learning.....	5621
8.12.17 mld-snooping max-response-time.....	5623
8.12.18 mld-snooping prompt-leave.....	5625
8.12.19 mld-snooping proxy.....	5627
8.12.20 mld-snooping querier enable.....	5628
8.12.21 mld-snooping query-interval.....	5630
8.12.22 mld-snooping report-suppress.....	5632
8.12.23 mld-snooping require-router-alert.....	5633
8.12.24 mld-snooping robust-count.....	5635

8.12.25 mld-snooping router-aging-time.....	5636
8.12.26 mld-snooping router-learning.....	5638
8.12.27 mld-snooping send-query enable.....	5639
8.12.28 mld-snooping send-query source-address.....	5640
8.12.29 mld-snooping send-router-alert.....	5642
8.12.30 mld-snooping static-group.....	5643
8.12.31 mld-snooping static-router-port.....	5645
8.12.32 mld-snooping suppression-time.....	5647
8.12.33 mld-snooping table limit.....	5648
8.12.34 mld-snooping version.....	5650
8.12.35 multicast drop-unknown.....	5652
8.12.36 multicast-snooping mux-vlan enable.....	5653
8.12.37 multicast-source-deny.....	5654
8.12.38 reset mld-snooping group.....	5656
8.12.39 reset mld-snooping statistics.....	5657
8.13 Static Multicast MAC Address Configuration Commands.....	5658
8.13.1 Command Support.....	5658
8.13.2 display mac-address multicast.....	5659
8.13.3 display mac-address multicast total-number.....	5660
8.13.4 mac-address multicast.....	5661
8.13.5 mac-address multicast interface.....	5663
8.13.6 multicast mac-ip check enable.....	5665
8.14 Multicast VLAN Configuration Commands.....	5667
8.14.1 Command Support.....	5667
8.14.2 display l2-multicast-bind.....	5667
8.14.3 display multicast static-flow.....	5669
8.14.4 display multicast-vlan.....	5670
8.14.5 display user-vlan.....	5672
8.14.6 l2-multicast-bind vlan.....	5673
8.14.7 l2-multicast user-vlan limit.....	5675
8.14.8 multicast flow-trigger enable.....	5676
8.14.9 multicast static-flow.....	5677
8.14.10 multicast-vlan enable.....	5679
8.14.11 multicast-vlan send-query prune-source-port.....	5680
8.14.12 multicast-vlan user-vlan.....	5681
8.15 Controllable Multicast Configuration Commands.....	5683
8.15.1 Command Support.....	5683
8.15.2 add multicast-group.....	5683
8.15.3 add multicast-list.....	5685
8.15.4 attach multicast-profile.....	5686
8.15.5 btv.....	5688
8.15.6 display multicast-group.....	5689

8.15.7 display multicast-list.....	5690
8.15.8 display multicast-profile.....	5692
8.15.9 display multicast-profile-apply.....	5693
8.15.10 max-program-num (multicast profile view).....	5695
8.15.11 max-program-num (VLAN view).....	5696
8.15.12 multicast-group.....	5697
8.15.13 multicast-list.....	5699
8.15.14 multicast-preview interval.....	5701
8.15.15 multicast-preview minutes.....	5702
8.15.16 multicast-preview times.....	5703
8.15.17 multicast-profile.....	5704
8.16 Multicast Network Management Commands.....	5705
8.16.1 Command Support.....	5705
8.16.2 display multicast threshold-alarm.....	5705
8.16.3 display pim mib-control-message.....	5706
8.16.4 display pim mib-notification interval.....	5709
8.16.5 igmp trap-interval limit.....	5710
8.16.6 mgmd total-number threshold-alarm.....	5711
8.16.7 mgmd host threshold-alarm.....	5713
8.16.8 multicast forwarding-table source-group-number threshold-alarm.....	5715
8.16.9 multicast mib-notification join-leave frequency.....	5717
8.16.10 multicast-mib.....	5718
8.16.11 multicast threshold-alarm.....	5719
8.16.12 pim mib-notification interval.....	5720
8.16.13 pim threshold-alarm.....	5722
9 MPLS Configuration Commands.....	5725
9.1 Basic MPLS Configuration Commands.....	5725
9.1.1 Command Support.....	5725
9.1.2 authentication exclude.....	5725
9.1.3 authentication key-chain.....	5726
9.1.4 authentication key-chain all.....	5728
9.1.5 authentication key-chain peer-group.....	5730
9.1.6 auto-frr lsp-trigger.....	5732
9.1.7 backoff timer.....	5734
9.1.8 bfd bind ldp-lsp.....	5735
9.1.9 bfd bind static-lsp.....	5737
9.1.10 display default-parameter mpls ldp.....	5738
9.1.11 display default-parameter mpls management.....	5742
9.1.12 display isis ldp-sync interface.....	5750
9.1.13 display lspv configuration.....	5752
9.1.14 display lspv statistics.....	5753
9.1.15 display mpls bfd session.....	5755

9.1.16 display mpls graceful-restart.....	5762
9.1.17 display mpls interface.....	5763
9.1.18 display mpls label static available.....	5766
9.1.19 display mpls label-stack ilm inlabel.....	5767
9.1.20 display mpls last-info lsp-down.....	5768
9.1.21 display mpls ldp.....	5772
9.1.22 display mpls ldp adjacency.....	5776
9.1.23 display mpls ldp adjacency statistics.....	5779
9.1.24 display mpls ldp error packet.....	5780
9.1.25 display mpls ldp error packet state.....	5782
9.1.26 display mpls ldp event adjacency-down.....	5784
9.1.27 display mpls ldp event gr-helper.....	5787
9.1.28 display mpls ldp event session-down.....	5789
9.1.29 display mpls ldp interface.....	5791
9.1.30 display mpls label all summary.....	5794
9.1.31 display mpls ldp lsp.....	5796
9.1.32 display mpls ldp lsp statistics.....	5798
9.1.33 display mpls ldp peer.....	5799
9.1.34 display mpls ldp peer statistics.....	5803
9.1.35 display mpls ldp remote-peer.....	5804
9.1.36 display mpls ldp session.....	5807
9.1.37 display mpls ldp session statistics.....	5813
9.1.38 display mpls lsp.....	5814
9.1.39 display mpls lsp statistics.....	5821
9.1.40 display mpls route-state.....	5823
9.1.41 display mpls static-lsp.....	5826
9.1.42 display ospf ldp-sync interface.....	5828
9.1.43 display static-route ldp-sync.....	5830
9.1.44 fec-list.....	5832
9.1.45 fec-node.....	5832
9.1.46 graceful-restart (MPLS-LDP view).....	5834
9.1.47 graceful-restart timer neighbor-liveness.....	5835
9.1.48 graceful-restart timer reconnect.....	5836
9.1.49 graceful-restart timer recovery.....	5837
9.1.50 gtsm peer valid-ttl-hops.....	5839
9.1.51 inbound peer fec.....	5840
9.1.52 ip route-static ldp-sync.....	5842
9.1.53 isis ldp-sync.....	5844
9.1.54 isis ldp-sync block.....	5846
9.1.55 isis timer ldp-sync hold-down.....	5847
9.1.56 isis timer ldp-sync hold-max-cost.....	5848
9.1.57 label advertise.....	5850

9.1.58 label distribution default-route.....	5852
9.1.59 label-withdraw-delay.....	5853
9.1.60 label-withdraw-delay timer.....	5854
9.1.61 ldp-over-te enable.....	5855
9.1.62 ldp-sync enable.....	5856
9.1.63 longest-match.....	5857
9.1.64 loop-detect.....	5858
9.1.65 lsp-trigger bgp-label-route.....	5859
9.1.66 lsp-trigger.....	5861
9.1.67 lspv mpls-lsp-ping echo enable.....	5862
9.1.68 lspv packet-filter.....	5864
9.1.69 lsr-id.....	5865
9.1.70 maintain-session received-error-message.....	5866
9.1.71 md5-password.....	5867
9.1.72 md5-password all.....	5869
9.1.73 md5-password peer-group.....	5871
9.1.74 mpls (system view).....	5873
9.1.75 mpls (interface view).....	5874
9.1.76 mpls bfd enable.....	5875
9.1.77 mpls bfd.....	5876
9.1.78 mpls bfd-trigger.....	5878
9.1.79 mpls bfd-ldp-number threshold-alarm.....	5880
9.1.80 mpls bgp bfd.....	5881
9.1.81 mpls bgp bfd enable.....	5883
9.1.82 mpls bgp bfd-trigger-tunnel.....	5884
9.1.83 mpls bgp-lsp-number threshold-alarm.....	5886
9.1.84 mpls bgpv6-lsp-number threshold-alarm.....	5887
9.1.85 mpls dynamic-label-number threshold-alarm.....	5889
9.1.86 mpls ecmp load-balance.....	5891
9.1.87 mpls forward-resource threshold-alarm.....	5892
9.1.88 mpls remote-adjacency-number threshold-alarm.....	5894
9.1.89 mpls ldp advertisement.....	5895
9.1.90 mpls ldp (system view).....	5897
9.1.91 mpls ldp (interface view).....	5898
9.1.92 mpls ldp frr nexthop.....	5899
9.1.93 mpls ldp remote-peer.....	5901
9.1.94 mpls ldp timer hello-hold.....	5903
9.1.95 mpls ldp timer hello-send.....	5904
9.1.96 mpls ldp timer igp-sync-delay.....	5906
9.1.97 mpls ldp timer keepalive-hold.....	5907
9.1.98 mpls ldp timer keepalive-send.....	5909
9.1.99 mpls ldp transport-address.....	5910

9.1.100 mpls ldp-lsp-number threshold-alarm.....	5912
9.1.101 mpls local-adjacency-number threshold-alarm.....	5914
9.1.102 mpls lsr-id.....	5916
9.1.103 mpls mtu.....	5917
9.1.104 mpls total-lsp-number threshold-alarm.....	5919
9.1.105 mpls-passive.....	5921
9.1.106 mpls ping interval.....	5922
9.1.107 mtu-signalling.....	5923
9.1.108 no-renegotiate session-parameter-change graceful-restart.....	5925
9.1.109 ospf ldp-sync.....	5926
9.1.110 ospf timer ldp-sync hold-down.....	5927
9.1.111 ospf timer ldp-sync hold-max-cost.....	5928
9.1.112 outbound peer split-horizon.....	5929
9.1.113 path-vectors.....	5931
9.1.114 ping lsp.....	5932
9.1.115 propagate mapping.....	5941
9.1.116 proxy-egress disable.....	5942
9.1.117 remote-ip.....	5943
9.1.118 remote-ip auto-dod-request.....	5945
9.1.119 remote-peer auto-dod-request.....	5946
9.1.120 remote-peer pwe3.....	5947
9.1.121 reset lspv statistics.....	5949
9.1.122 reset mpls ldp.....	5949
9.1.123 reset mpls ldp error packet.....	5951
9.1.124 reset mpls ldp event adjacency-down.....	5951
9.1.125 reset mpls ldp event session-down.....	5952
9.1.126 route recursive-lookup tunnel.....	5953
9.1.127 snmp-agent trap suppress feature-name lsp.....	5954
9.1.128 static-lsp egress.....	5955
9.1.129 static-lsp ingress.....	5957
9.1.130 static-lsp transit.....	5959
9.1.131 static-route timer ldp-sync hold-down.....	5960
9.1.132 timer ldp-sync hold-down.....	5962
9.1.133 timer ldp-sync hold-max-cost.....	5963
9.1.134 tracert lsp.....	5964
9.1.135 ttl expiration pop.....	5970
9.1.136 ttl propagate.....	5971
9.1.137 ttl propagate public.....	5972
9.1.138 ttl propagate vpn.....	5973
9.1.139 undo outbound peer all.....	5974
9.1.140 undo inbound peer all.....	5975
9.2 MPLS QoS Configuration Commands.....	5975

9.2.1 Command Support.....	5976
9.2.2 diffserv-mode.....	5976
9.2.3 mpls-exp-inbound.....	5978
9.2.4 mpls-exp-outbound.....	5979
9.2.5 mpls-qos egress.....	5981
9.2.6 mpls-qos ingress.....	5983
9.2.7 mpls-qos transit.....	5984
9.3 MPLS TE Configuration Commands.....	5986
9.3.1 Command Support.....	5986
9.3.2 add hop.....	5986
9.3.3 affinity property.....	5988
9.3.4 bandwidth (LSP attribute view).....	5989
9.3.5 bfd bind mpls-te.....	5990
9.3.6 bypass-attributes.....	5992
9.3.7 commit (LSP attribute view).....	5994
9.3.8 delete hop.....	5994
9.3.9 display default-parameter mpls rsvp-te.....	5996
9.3.10 display default-parameter mpls te cspf.....	5998
9.3.11 display default-parameter mpls te management.....	5999
9.3.12 display explicit-path.....	6002
9.3.13 display lsp-attribute.....	6004
9.3.14 display mpls aps statistics global.....	6007
9.3.15 display mpls lsp attribute.....	6008
9.3.16 display mpls rsvp-te.....	6010
9.3.17 display mpls rsvp-te bfd session.....	6013
9.3.18 display mpls rsvp-te established.....	6015
9.3.19 display mpls rsvp-te graceful-restart.....	6017
9.3.20 display mpls rsvp-te graceful-restart peer.....	6019
9.3.21 display mpls rsvp-te interface.....	6022
9.3.22 display mpls rsvp-te peer.....	6024
9.3.23 display mpls rsvp-te psb-content.....	6026
9.3.24 display mpls rsvp-te request.....	6029
9.3.25 display mpls rsvp-te reservation.....	6031
9.3.26 display mpls rsvp-te rsb-content.....	6033
9.3.27 display mpls rsvp-te sender.....	6035
9.3.28 display mpls rsvp-te session.....	6037
9.3.29 display mpls rsvp-te statistics.....	6042
9.3.30 display mpls rsvp-te statistics fast-reroute.....	6045
9.3.31 display mpls static-cr-lsp.....	6046
9.3.32 display mpls stale-interface.....	6048
9.3.33 display mpls te cspf destination.....	6051
9.3.34 display mpls te cspf tedb.....	6056

9.3.35 display mpls te hot-standby state.....	6063
9.3.36 display mpls te link-administration admission-control.....	6066
9.3.37 display mpls te link-administration bandwidth-allocation.....	6067
9.3.38 display mpls te link-administration srlg-information.....	6070
9.3.39 display mpls te protection binding protect-tunnel.....	6071
9.3.40 display mpls te protection tunnel.....	6073
9.3.41 display mpls te session-entry.....	6077
9.3.42 display mpls te srlg.....	6079
9.3.43 display mpls te tunnel-interface.....	6080
9.3.44 display mpls te tunnel-interface failed.....	6083
9.3.45 display mpls te tunnel-interface last-error.....	6084
9.3.46 display mpls te tunnel-interface lsp-constraint.....	6087
9.3.47 display mpls te tunnel-interface traffic-state.....	6088
9.3.48 display mpls te tunnel.....	6090
9.3.49 display mpls te tunnel c-hop.....	6098
9.3.50 display mpls te tunnel path.....	6099
9.3.51 display mpls te tunnel statistics.....	6102
9.3.52 display ospf mpls-te.....	6104
9.3.53 display ospf traffic-adjustment.....	6108
9.3.54 enable traffic-adjustment.....	6110
9.3.55 explicit-path.....	6111
9.3.56 explicit-path (LSP attribute view).....	6112
9.3.57 fast-reroute.....	6112
9.3.58 hop-limit.....	6113
9.3.59 hotstandby-switch.....	6114
9.3.60 list hop.....	6115
9.3.61 lsp-attribute.....	6116
9.3.62 modify hop.....	6117
9.3.63 mpls-te enable.....	6119
9.3.64 mpls autobypass-tunnel-number threshold-alarm.....	6120
9.3.65 mpls bfd-te-number threshold-alarm.....	6121
9.3.66 mpls cspf threshold-alarm.....	6123
9.3.67 mpls rsvp-lsp-number threshold-alarm.....	6125
9.3.68 mpls rsvp-peer-number threshold-alarm.....	6127
9.3.69 mpls rsvp-te.....	6129
9.3.70 mpls rsvp-te authentication.....	6130
9.3.71 mpls rsvp-te authentication handshake.....	6133
9.3.72 mpls rsvp-te authentication lifetime.....	6135
9.3.73 mpls rsvp-te authentication window-size.....	6136
9.3.74 mpls rsvp-te bfd.....	6138
9.3.75 mpls rsvp-te bfd all-interfaces.....	6141
9.3.76 mpls rsvp-te bfd all-interfaces enable.....	6143

9.3.77 mpls rsvp-te bfd block.....	6144
9.3.78 mpls rsvp-te bfd enable.....	6145
9.3.79 mpls rsvp-te challenge-lost.....	6146
9.3.80 mpls rsvp-te fast-reroute-bandwidth compatible.....	6148
9.3.81 mpls rsvp-te hello-lost.....	6149
9.3.82 mpls rsvp-te hello.....	6150
9.3.83 mpls rsvp-te hello basic-restart-time.....	6151
9.3.84 mpls rsvp-te hello full-gr.....	6152
9.3.85 mpls rsvp-te hello nodeid-session.....	6153
9.3.86 mpls rsvp-te hello support-peer-gr.....	6154
9.3.87 mpls rsvp-te keep-multiplier.....	6155
9.3.88 mpls rsvp-te peer.....	6156
9.3.89 mpls rsvp-te resv-rro.....	6157
9.3.90 mpls rsvp-te resvconfirm.....	6159
9.3.91 mpls rsvp-te retrans-timer challenge.....	6159
9.3.92 mpls rsvp-te send-message.....	6161
9.3.93 mpls rsvp-te srefresh.....	6163
9.3.94 mpls rsvp-te timer hello.....	6164
9.3.95 mpls rsvp-te timer refresh.....	6165
9.3.96 mpls rsvp-te timer retransmission.....	6166
9.3.97 mpls te.....	6167
9.3.98 mpls te affinity property.....	6169
9.3.99 mpls te auto-bandwidth.....	6170
9.3.100 mpls te auto-frr (MPLS view).....	6172
9.3.101 mpls te auto-frr (interface view).....	6173
9.3.102 mpls te auto-frr reoptimization.....	6175
9.3.103 mpls te backup.....	6177
9.3.104 mpls te backup frr-in-use.....	6179
9.3.105 mpls te backup hot-standby overlap-path.....	6180
9.3.106 mpls te backup hotstandby-lsp-constraint.....	6181
9.3.107 mpls te backup ordinary-lsp-constraint.....	6183
9.3.108 mpls te bandwidth (interface view).....	6184
9.3.109 mpls te bandwidth (tunnel interface view).....	6186
9.3.110 mpls te bandwidth change thresholds.....	6187
9.3.111 mpls te bandwidth max-reservable-bandwidth.....	6189
9.3.112 mpls te bfd.....	6190
9.3.113 mpls te bfd block.....	6192
9.3.114 mpls te bfd enable.....	6193
9.3.115 mpls te bypass-attributes.....	6195
9.3.116 mpls te bypass-tunnel.....	6196
9.3.117 mpls te commit.....	6197
9.3.118 mpls te cspf.....	6198

9.3.119 mpls te cspf disable.....	6199
9.3.120 mpls te cspf preferred-igp.....	6200
9.3.121 mpls te cspf timer failed-link.....	6201
9.3.122 mpls te fast-reroute.....	6202
9.3.123 mpls te hop-limit.....	6203
9.3.124 mpls te hotstandby-lsp-constraint.....	6205
9.3.125 mpls te igp advertise.....	6206
9.3.126 mpls te igp metric.....	6207
9.3.127 mpls te igp shortcut.....	6209
9.3.128 mpls te link administrative group.....	6210
9.3.129 mpls te loop-detection.....	6211
9.3.130 mpls te metric.....	6212
9.3.131 mpls te ordinary-lsp-constraint.....	6213
9.3.132 mpls te path explicit-path.....	6214
9.3.133 mpls te path metric-type.....	6215
9.3.134 mpls te path-selection overload.....	6216
9.3.135 mpls te primary-lsp-constraint.....	6218
9.3.136 mpls te priority.....	6219
9.3.137 mpls te protected-interface.....	6220
9.3.138 mpls te protect-switch.....	6221
9.3.139 mpls te protection tunnel.....	6223
9.3.140 mpls te record-route.....	6225
9.3.141 mpls te reoptimization (user view).....	6226
9.3.142 mpls te reoptimization (tunnel interface view).....	6227
9.3.143 mpls te resv-style.....	6229
9.3.144 mpls te route-pinning.....	6230
9.3.145 mpls te signal-protocol.....	6231
9.3.146 mpls te signaling-delay-trigger enable.....	6232
9.3.147 mpls te signalled tunnel-name.....	6233
9.3.148 mpls te srlg.....	6234
9.3.149 mpls te srlg path-calculation.....	6235
9.3.150 mpls te switch-delay.....	6237
9.3.151 mpls te tie-breaking.....	6238
9.3.152 mpls te timer auto-bandwidth.....	6240
9.3.153 mpls te timer fast-reroute.....	6241
9.3.154 mpls te timer retry.....	6242
9.3.155 mpls te tunnel-id.....	6243
9.3.156 mpls total-crlsp-number threshold-alarm.....	6244
9.3.157 next hop.....	6246
9.3.158 notify neighbor-down.....	6248
9.3.159 opaque-capability enable.....	6249
9.3.160 priority.....	6250

9.3.161 record-route.....	6251
9.3.162 reset mpls rsvp-te.....	6252
9.3.163 reset mpls rsvp-te statistics.....	6252
9.3.164 reset mpls stale-interface.....	6253
9.3.165 reset mpls te auto-bandwidth adjustment timers.....	6254
9.3.166 reset mpls te auto-frr.....	6255
9.3.167 reset mpls te tunnel-interface tunnel.....	6256
9.3.168 static-cr-lsp egress.....	6257
9.3.169 static-cr-lsp ingress.....	6258
9.3.170 static-cr-lsp transit.....	6260
9.3.171 statistic enable (MPLS TE tunnel interface view).....	6262
9.3.172 traffic-eng.....	6263
9.3.173 undo mpls te srlg all-config.....	6265
10 VPN Configuration Commands.....	6266
10.1 GRE Configuration Commands.....	6266
10.1.1 Command Support.....	6266
10.1.2 description (tunnel interface view).....	6266
10.1.3 destination.....	6267
10.1.4 display interface tunnel.....	6269
10.1.5 display keepalive packets count.....	6272
10.1.6 display tunnel-info.....	6274
10.1.7 gre key.....	6278
10.1.8 interface tunnel.....	6279
10.1.9 keepalive.....	6280
10.1.10 map interface virtual-ethernet.....	6282
10.1.11 reset keepalive packets count.....	6284
10.1.12 source.....	6285
10.1.13 statistic enable (Tunnel interface view).....	6287
10.1.14 tunnel-protocol.....	6288
10.2 IPsec Configuration Commands (IPsec Encryption).....	6290
10.2.1 Command Support.....	6290
10.2.2 ah authentication-algorithm.....	6290
10.2.3 display ipsec proposal.....	6292
10.2.4 display ipsec sa.....	6294
10.2.5 display ipsec statistics.....	6296
10.2.6 encapsulation-mode.....	6298
10.2.7 esp authentication-algorithm.....	6300
10.2.8 esp encryption-algorithm.....	6301
10.2.9 ipsec proposal.....	6303
10.2.10 ipsec sa.....	6304
10.2.11 proposal.....	6305
10.2.12 reset ipsec statistics.....	6306

10.2.13 sa authentication-hex.....	6307
10.2.14 sa encryption-hex.....	6310
10.2.15 sa spi.....	6312
10.2.16 sa string-key.....	6313
10.2.17 transform.....	6315
10.3 IPsec Configuration Commands (IPsec Efficient VPN).....	6317
10.3.1 Command Support.....	6317
10.3.2 anti-replay window.....	6317
10.3.3 dh.....	6318
10.3.4 display ike error-info.....	6319
10.3.5 display ike global config.....	6326
10.3.6 display ike offline-info.....	6327
10.3.7 display ike sa.....	6329
10.3.8 display ike statistics.....	6337
10.3.9 display ikev2 statistics.....	6341
10.3.10 display ipsec efficient-vpn.....	6351
10.3.11 display ipsec global config.....	6356
10.3.12 display ipsec interface brief.....	6357
10.3.13 display ipsec history record.....	6358
10.3.14 display ipsec sa efficient-vpn.....	6360
10.3.15 display ipsec packet statistics.....	6363
10.3.16 display ipsec statistics tunnel-number.....	6367
10.3.17 dpd msg.....	6368
10.3.18 dpd msg notify-hash-sequence learning.....	6369
10.3.19 ike dscp.....	6370
10.3.20 ike heartbeat.....	6371
10.3.21 ike heartbeat-timer interval.....	6373
10.3.22 ike heartbeat-timer timeout.....	6374
10.3.23 ike local-name.....	6375
10.3.24 ike nat-keepalive-timer interval.....	6376
10.3.25 ikev1 phase1-phase2 sa dependent.....	6377
10.3.26 ikev2 delete old child-sa enable.....	6378
10.3.27 ikev2 initial-contact enable.....	6379
10.3.28 ipsec anti-replay enable.....	6380
10.3.29 ipsec anti-replay window.....	6381
10.3.30 ipsec efficient-vpn (interface view).....	6382
10.3.31 ipsec efficient-vpn (system view).....	6384
10.3.32 ipsec sa global-duration.....	6385
10.3.33 local-id-type.....	6388
10.3.34 pfs.....	6389
10.3.35 pre-shared-key (Efficient VPN policy view).....	6391
10.3.36 re-authentication interval.....	6392

10.3.37 remote-address (Efficient VPN policy view).....	6393
10.3.38 remote-id.....	6395
10.3.39 reset ike error-info.....	6396
10.3.40 reset ike offline-info.....	6397
10.3.41 reset ike sa.....	6398
10.3.42 reset ike statistics.....	6399
10.3.43 reset ipsec history record.....	6400
10.3.44 reset ipsec sa.....	6400
10.3.45 reset ipsec packet statistics.....	6402
10.3.46 sa binding vpn-instance (Efficient VPN policy view).....	6402
10.3.47 security acl.....	6404
10.3.48 service-scheme (Efficient VPN policy view).....	6405
10.3.49 tunnel local.....	6406
10.4 BGP/MPLS IP VPN Configuration Commands.....	6407
10.4.1 Command Support.....	6407
10.4.2 apply tunnel-policy (tunnel-selector view).....	6407
10.4.3 apply-label per-instance.....	6409
10.4.4 apply-label per-next-hop.....	6410
10.4.5 apply-label per-route.....	6412
10.4.6 arp vpn-cross enable.....	6413
10.4.7 as-number.....	6414
10.4.8 auto-frr.....	6415
10.4.9 auto-frr (BGP-VPNv4 address family view).....	6416
10.4.10 description (VPN instance view).....	6417
10.4.11 description (tunnel interface view).....	6418
10.4.12 description (tunnel-policy view).....	6419
10.4.13 destination.....	6420
10.4.14 display default-parameter l3vpn.....	6422
10.4.15 display ip prefix-limit statistics.....	6423
10.4.16 display ipv6 prefix-limit statistics.....	6425
10.4.17 display ip vpn-instance.....	6427
10.4.18 display ip vpn-instance import-vt.....	6434
10.4.19 display interface tunnel.....	6435
10.4.20 display l3vpn vpn-list tunnel-policy.....	6439
10.4.21 display mpls label-stack vpn-instance.....	6440
10.4.22 display tunnel-info.....	6441
10.4.23 display tunnel-policy.....	6445
10.4.24 display tunnel-policy-config.....	6447
10.4.25 display tunnel-policy subscriber statistics.....	6448
10.4.26 display tunnel-selector.....	6449
10.4.27 export route-policy.....	6450
10.4.28 if-match ip next-hop (tunnel-selector view).....	6452

10.4.29 if-match ip-prefix (tunnel-selector view).....	6454
10.4.30 if-match ipv6 next-hop (tunnel-selector view).....	6455
10.4.31 import route-policy.....	6456
10.4.32 ingress-lsp trigger.....	6457
10.4.33 interface tunnel.....	6459
10.4.34 ip binding vpn-instance.....	6460
10.4.35 ip frr (VPN instance view).....	6462
10.4.36 ipv6 frr (VPN instance IPv6 address family view).....	6464
10.4.37 ip vpn-instance.....	6465
10.4.38 ipv4-family (VPN instance view).....	6467
10.4.39 ipv6-family (VPN instance view).....	6468
10.4.40 limit-log-interval	6469
10.4.41 mpls te reserved-for-binding.....	6471
10.4.42 nd vpn-cross enable.....	6472
10.4.43 peer default-originate vpn-instance.....	6473
10.4.44 peer mpls-local-ifnet disable.....	6475
10.4.45 peer up.....	6476
10.4.46 peer soo.....	6478
10.4.47 peer substitute-as.....	6480
10.4.48 policy vpn-target.....	6482
10.4.49 prefix limit.....	6483
10.4.50 route-distinguisher.....	6485
10.4.51 routing-table limit.....	6487
10.4.52 rr-filter.....	6489
10.4.53 service-id (VPN instance view).....	6490
10.4.54 source.....	6491
10.4.55 supernet label-route advertise.....	6493
10.4.56 tunnel binding.....	6494
10.4.57 tunnel-selector (system view).....	6496
10.4.58 tunnel-selector (BGP-VPNv4 address family view).....	6498
10.4.59 tunnel select-seq.....	6499
10.4.60 tunnel-policy nonexistent-config-check.....	6501
10.4.61 tunnel-policy (system view).....	6502
10.4.62 tunnel-protocol.....	6504
10.4.63 tnl-policy.....	6506
10.4.64 transit-vpn.....	6507
10.4.65 undo vpn frr all.....	6509
10.4.66 vpn-route cross multipath.....	6509
10.4.67 vpn-target.....	6511
10.4.68 vpn frr.....	6514
10.5 VLL Configuration Commands.....	6515
10.5.1 Command Support.....	6515

10.5.2 bfd bind pw.....	6516
10.5.3 ccc interface in-label out-label.....	6517
10.5.4 ccc interface out-interface.....	6519
10.5.5 ce.....	6521
10.5.6 connection.....	6523
10.5.7 display bgp l2vpn.....	6526
10.5.8 display l2vpn ccc-interface vc-type.....	6529
10.5.9 display mpls l2vc.....	6531
10.5.10 display mpls l2vc brief.....	6543
10.5.11 display mpls l2vpn.....	6545
10.5.12 display mpls l2vpn (route-target-list).....	6548
10.5.13 display mpls l2vpn connection.....	6549
10.5.14 display mpls l2vpn forwarding-info.....	6555
10.5.15 display mpls l2vpn label-space.....	6558
10.5.16 display mpls l2vpn vpws.....	6559
10.5.17 display mpls label-stack vll interface.....	6563
10.5.18 display mpls static-l2vc.....	6564
10.5.19 display mpls static-l2vc brief.....	6571
10.5.20 display traffic-statistics l2vpn interface.....	6573
10.5.21 display vll ccc.....	6574
10.5.22 interface-parameter-type vccv (interface view).....	6578
10.5.23 ignore-mtu-match (MPLS-L2VPN instance view).....	6579
10.5.24 l2vpn-family.....	6580
10.5.25 manual-set pw-ac-fault.....	6581
10.5.26 mpls l2vc.....	6582
10.5.27 mpls l2vpn.....	6587
10.5.28 mpls l2vpn alarm verification disable.....	6588
10.5.29 mpls l2vpn default martini.....	6589
10.5.30 mpls l2vpn flow-label.....	6590
10.5.31 mpls l2vpn ip-parse enable.....	6592
10.5.32 mpls l2vpn l2vpn-name.....	6593
10.5.33 mpls l2vpn pw bfd.....	6594
10.5.34 mpls l2vpn reroute.....	6597
10.5.35 mpls l2vpn service-name.....	6599
10.5.36 mpls l2vpn vlan-stacking.....	6601
10.5.37 mpls l2vpn traffic-statistics enable.....	6602
10.5.38 mpls l2vpn trigger if-down.....	6603
10.5.39 mpls static-l2vc.....	6604
10.5.40 mtu (MPLS-L2VPN instance view).....	6607
10.5.41 ping vc.....	6608
10.5.42 ping vc vpn-instance.....	6614
10.5.43 reset bgp l2vpn.....	6617

10.5.44 reset traffic-statistics l2vpn interface.....	6618
10.5.45 route-distinguisher (MPLS-L2VPN instance view).....	6618
10.5.46 tracert vc.....	6620
10.5.47 tracert vc vpn-instance.....	6626
10.5.48 vpn-target (MPLS-L2VPN instance view).....	6629
10.6 PWE3 Configuration Commands.....	6631
10.6.1 Command Support.....	6631
10.6.2 bfd bind pw.....	6632
10.6.3 bfd-detect.....	6633
10.6.4 bfd for pw enable.....	6635
10.6.5 control-word.....	6636
10.6.6 display mpls l2vc.....	6637
10.6.7 display mpls l2vc brief.....	6649
10.6.8 display mpls l2vc track admin-vc.....	6651
10.6.9 display mpls static-l2vc.....	6653
10.6.10 display mpls static-l2vc brief.....	6660
10.6.11 display mpls switch-l2vc.....	6661
10.6.12 display mpls switch-l2vc brief.....	6666
10.6.13 display pw-template.....	6667
10.6.14 lsv pw reply ptn-mode.....	6670
10.6.15 manual-set pw-ac-fault.....	6671
10.6.16 mpls l2vc.....	6672
10.6.17 mpls l2vc admin.....	6677
10.6.18 mpls l2vc track admin-vc.....	6679
10.6.19 mpls l2vpn.....	6682
10.6.20 mpls l2vpn flow-label.....	6683
10.6.21 mpls l2vpn ip-parse enable.....	6685
10.6.22 mpls l2vpn no-request-message.....	6686
10.6.23 mpls l2vpn pw bfd.....	6687
10.6.24 mpls l2vpn redundancy.....	6689
10.6.25 mpls l2vpn reroute.....	6691
10.6.26 mpls l2vpn service-name.....	6694
10.6.27 mpls l2vpn stream-dual-receiving.....	6695
10.6.28 mpls l2vpn switchover.....	6696
10.6.29 mpls l2vpn vccv bfd-cv-negotiation fault-detection-only.....	6698
10.6.30 mpls static-l2vc.....	6700
10.6.31 mpls switch-l2vc.....	6702
10.6.32 mtu (PW template view).....	6708
10.6.33 peer-address.....	6709
10.6.34 ping vc.....	6710
10.6.35 pw-template.....	6716
10.6.36 reset pw.....	6717

10.6.37 tnl-policy (PW template view).....	6718
10.6.38 tracetrc vc.....	6719
10.7 VPLS Configuration Commands.....	6725
10.7.1 Command Support.....	6725
10.7.2 broadcast-suppression cir cbs (VSI view).....	6726
10.7.3 bfd bind pw vsi.....	6727
10.7.4 bfd for vsi-pw enable.....	6729
10.7.5 bgp-ad.....	6731
10.7.6 description (VSI view).....	6731
10.7.7 display bgp l2vpn-ad routing-table.....	6732
10.7.8 display bgp vpls.....	6740
10.7.9 display l2vpn ccc-interface vc-type.....	6743
10.7.10 display l2vpn vsi-list tunnel-policy.....	6745
10.7.11 display loop-detect.....	6746
10.7.12 display mpls l2vpn resource.....	6747
10.7.13 display mpls label-stack vpls vsi.....	6749
10.7.14 display oam-mac list.....	6750
10.7.15 display oam-mac statistics.....	6751
10.7.16 display traffic-statistics vsi.....	6753
10.7.17 display traffic-statistics vsi peer.....	6754
10.7.18 display traffic-statistics vsi peer ldp129.....	6756
10.7.19 display traffic-statistics vsi peer negotiation-vc-id.....	6757
10.7.20 display traffic-statistics vsi peer remote-site.....	6759
10.7.21 display vpls connection.....	6761
10.7.22 display vpls forwarding-info.....	6767
10.7.23 display vpls multicast-ping statistics.....	6771
10.7.24 display vpls multicast-trace statistics.....	6772
10.7.25 display vpls-ping statistics.....	6773
10.7.26 display vpls-trace statistics.....	6774
10.7.27 display vsi.....	6775
10.7.28 display vsi bgp-ad.....	6790
10.7.29 display vsi bgp-ad remote.....	6792
10.7.30 display vsi mac-withdraw loop-detect.....	6793
10.7.31 display vsi protect-group.....	6795
10.7.32 display vsi pw out-interface.....	6799
10.7.33 display vsi remote.....	6800
10.7.34 display vsi services.....	6806
10.7.35 display vsi statistics.....	6808
10.7.36 encapsulation (VSI view).....	6809
10.7.37 encapsulation rfc4761-compatible.....	6811
10.7.38 flow-label (VSI-LDP view).....	6812
10.7.39 flow-label (VSI-LDP-PW view).....	6814

10.7.40 holdoff (protect-group view).....	6816
10.7.41 hub-mode enable.....	6818
10.7.42 ignore-ac-state.....	6819
10.7.43 ignore-mtu-match (VSI view).....	6820
10.7.44 ignore-stp-loopcheck.....	6821
10.7.45 ingress-lsp protect-mode.....	6822
10.7.46 interface-parameter-type vccv (VSI-LDP-PW view).....	6823
10.7.47 interface-status-change mac-withdraw enable.....	6824
10.7.48 isolate spoken.....	6825
10.7.49 l2 binding.....	6827
10.7.50 l2vpn-ad-family.....	6828
10.7.51 loop-detect enable.....	6829
10.7.52 loop-detect detection pe-vid ce-vid.....	6831
10.7.53 loop-detect detection vid.....	6832
10.7.54 loop-detect recovery-time.....	6834
10.7.55 local-mac remove all-but-mine.....	6835
10.7.56 mac-address static vlanif.....	6836
10.7.57 mac-address static vsi.....	6839
10.7.58 mac-diagnose enable.....	6842
10.7.59 mac-learning.....	6843
10.7.60 mac-limit (VSI view).....	6844
10.7.61 mac-populate.....	6846
10.7.62 mac-purge.....	6847
10.7.63 mac-withdraw enable.....	6849
10.7.64 mac-withdraw propagate enable.....	6851
10.7.65 mpls l2vpn default vlan.....	6852
10.7.66 mpls l2vpn ip-parse enable.....	6853
10.7.67 mpls l2vpn mac-withdraw disable.....	6854
10.7.68 mpls l2vpn vlan-stacking.....	6855
10.7.69 mpls l2vpn vsi-pw limit threshold-alarm.....	6857
10.7.70 mtu (VSI view).....	6858
10.7.71 mtu-negotiate disable.....	6859
10.7.72 multi-homing-preference.....	6860
10.7.73 multicast-suppression cir cbs (VSI view).....	6862
10.7.74 npe-upe mac-withdraw enable.....	6863
10.7.75 peer (VSI-LDP view).....	6865
10.7.76 peer preference (protect-group view).....	6868
10.7.77 peer pw.....	6869
10.7.78 peer signaling.....	6871
10.7.79 peer static-npe.....	6873
10.7.80 peer static-upe.....	6875
10.7.81 ping vpls.....	6876

10.7.82 ping vpls mac vsi.....	6882
10.7.83 ping vpls multicast.....	6884
10.7.84 ping vpn-config.....	6887
10.7.85 protect-group (VSI-LDP view).....	6891
10.7.86 protect-mode (protect-group view).....	6892
10.7.87 protect-switch (protect-group view).....	6893
10.7.88 pw.....	6895
10.7.89 pwsignal.....	6896
10.7.90 pw spoke-mode (VSI-BGPAD view).....	6897
10.7.91 remote-vpn-target refresh.....	6898
10.7.92 reroute (protect-group view).....	6899
10.7.93 reset bgp l2vpn-ad.....	6901
10.7.94 reset oam-mac statistics.....	6902
10.7.95 reset vpls multicast-ping statistics.....	6903
10.7.96 reset vpls multicast-trace statistics.....	6904
10.7.97 reset vpls-ping statistics.....	6905
10.7.98 reset vpls-trace statistics.....	6905
10.7.99 reset traffic-statistics vsi all.....	6906
10.7.100 reset traffic-statistics vsi name.....	6907
10.7.101 reset traffic-statistics vsi name peer.....	6907
10.7.102 reset traffic-statistics vsi name peer ldp129.....	6908
10.7.103 reset traffic-statistics vsi name peer negotiation-vc-id.....	6909
10.7.104 reset traffic-statistics vsi name peer remote-site.....	6911
10.7.105 route-distinguisher (VSI-BGP view).....	6912
10.7.106 shutdown (VSI view).....	6915
10.7.107 signaling.....	6916
10.7.108 site.....	6917
10.7.109 stream-dual-receiving.....	6919
10.7.110 tnl-policy (VSI view).....	6920
10.7.111 track hub-pw (VSI-LDP-PW view).....	6921
10.7.112 traffic-statistics enable (VSI-LDP view).....	6923
10.7.113 traffic-statistics enable (VSI-BGPAD view).....	6924
10.7.114 traffic-statistics peer remote-site enable (Kompella).....	6925
10.7.115 traffic-statistics peer enable (Martini).....	6926
10.7.116 traffic-statistics peer enable (VSI-BGPAD).....	6927
10.7.117 trace vpls mac vsi.....	6928
10.7.118 tracer vpls.....	6932
10.7.119 tracer vpls multicast.....	6935
10.7.120 unknown-frame.....	6938
10.7.121 unknown-unicast-suppression cir cbs (VSI view).....	6939
10.7.122 upe-npe mac-withdraw enable.....	6940
10.7.123 upe-upe mac-withdraw enable.....	6942

10.7.124 vpls bgp encapsulation.....	6943
10.7.125 vpls ignore-ac-state.....	6944
10.7.126 vpls-family.....	6945
10.7.127 vpls-id.....	6946
10.7.128 vpls mac-withdraw loop-detect enable.....	6949
10.7.129 vpn-target (VSI-BGP view).....	6950
10.7.130 vpn-target (VSI-BGPAD view).....	6953
10.7.131 vsi.....	6956
10.7.132 vsi-id.....	6958
10.8 L2VPN Access to L3VPN Configuration Commands.....	6959
10.8.1 Command Support.....	6959
10.8.2 display virtual-ethernet ve-group.....	6959
10.8.3 display mpls l2vpn track route.....	6960
10.8.4 mpls l2vpn track route.....	6962
10.8.5 statistic enable (VE interface view).....	6963
10.8.6 ve-group.....	6965
11 WLAN-AC Commands.....	6967
11.1 WLAN Service Configuration Commands.....	6968
11.1.1 Command Support.....	6968
11.1.2 ac sysnetid.....	6968
11.1.3 active-dull-client enable.....	6969
11.1.4 active-dull-client force enable.....	6970
11.1.5 advertise-ap-name enable.....	6971
11.1.6 agile-antenna-polarization.....	6972
11.1.7 antenna-gain.....	6973
11.1.8 ap auth-mode.....	6975
11.1.9 ap blacklist.....	6976
11.1.10 ap data-collection enable.....	6977
11.1.11 ap data-collection interval.....	6978
11.1.12 ap modify.....	6979
11.1.13 ap rtu load.....	6980
11.1.14 ap whitelist.....	6982
11.1.15 ap-confirm.....	6983
11.1.16 ap-id.....	6984
11.1.17 ap-mac.....	6986
11.1.18 association-timeout.....	6987
11.1.19 auto-off service.....	6988
11.1.20 beacon-2g-rate.....	6990
11.1.21 beacon-5g-rate.....	6992
11.1.22 beacon-6g-rate.....	6993
11.1.23 beacon-interval.....	6994
11.1.24 beamforming disable.....	6995

11.1.25 beamforming enable.....	6996
11.1.26 capwap control-link-priority.....	6997
11.1.27 capwap dtls control-link encrypt.....	6999
11.1.28 capwap dtls cert-mandatory-match disable.....	7000
11.1.29 capwap dtls no-auth enable.....	7001
11.1.30 capwap dtls psk.....	7002
11.1.31 capwap echo.....	7004
11.1.32 capwap dtls cbc.....	7005
11.1.33 capwap dtls version1.0.....	7006
11.1.34 capwap echo-timeout trace logging.....	7007
11.1.35 capwap message-integrity psk.....	7008
11.1.36 capwap message-integrity check disable.....	7010
11.1.37 capwap sensitive-info psk.....	7011
11.1.38 capwap source interface.....	7013
11.1.39 channel.....	7015
11.1.40 channel-switch announcement disable.....	7017
11.1.41 channel-switch mode.....	7018
11.1.42 copy-from.....	7020
11.1.43 country-code.....	7021
11.1.44 coverage distance.....	7026
11.1.45 cpe-tunnel-profile (WLAN view).....	7027
11.1.46 cpe-tunnel-profile (VAP profile view).....	7028
11.1.47 deny-broadcast-probe enable.....	7029
11.1.48 destination (soft GRE profile view).....	7030
11.1.49 dhcp client option12.....	7032
11.1.50 dhcp option82 insert enable.....	7033
11.1.51 dhcp option82 format (VAP profile view).....	7034
11.1.52 display ac global configuration.....	7037
11.1.53 display ap.....	7038
11.1.54 display ap blacklist.....	7048
11.1.55 display ap config-info.....	7049
11.1.56 display ap configurable channel.....	7063
11.1.57 display ap global configuration.....	7065
11.1.58 display ap non-factory all.....	7066
11.1.59 display ap offline-record.....	7068
11.1.60 display ap online-fail-record.....	7075
11.1.61 display ap radio-mode all.....	7083
11.1.62 display ap-rtu-status all.....	7084
11.1.63 display ap sta-signal strength.....	7086
11.1.64 display ap statistics.....	7087
11.1.65 display ap unauthorized record.....	7088
11.1.66 display ap whitelist.....	7089

11.1.67 display ap-group.....	7091
11.1.68 display capwap configuration.....	7098
11.1.69 display cpe-tunnel-profile.....	7101
11.1.70 display radio.....	7103
11.1.71 display radio-2g-profile.....	7106
11.1.72 display radio-5g-profile.....	7115
11.1.73 display references radio-2g-profile.....	7123
11.1.74 display references radio-5g-profile.....	7125
11.1.75 display references regulatory-domain-profile.....	7126
11.1.76 display references softgre-profile.....	7127
11.1.77 display references ssid-profile.....	7128
11.1.78 display references vap-profile.....	7129
11.1.79 display references vlan pool.....	7130
11.1.80 display regulatory-domain-profile.....	7131
11.1.81 display softgre-profile.....	7134
11.1.82 display softgre-tunnel-status.....	7136
11.1.83 display ssid-profile.....	7137
11.1.84 display sta-offline-delay configuration.....	7146
11.1.85 display station.....	7148
11.1.86 display station assoc-info ap-offline-record.....	7157
11.1.87 display station online-fail-record.....	7159
11.1.88 display station offline-record.....	7173
11.1.89 display station online-track.....	7186
11.1.90 display station statistics.....	7187
11.1.91 display vap.....	7195
11.1.92 display vap create-fail-record.....	7197
11.1.93 display vap-profile.....	7202
11.1.94 display vap-service-backup auth-server-down.....	7216
11.1.95 display wlan config-errors.....	7218
11.1.96 dot11a basic-rate.....	7218
11.1.97 dot11a basic-rate (SSID profile view).....	7220
11.1.98 dot11a supported-rate.....	7222
11.1.99 dot11a supported-rate (SSID profile view).....	7223
11.1.100 dot11bg basic-rate.....	7225
11.1.101 dot11bg basic-rate (SSID profile view).....	7227
11.1.102 dot11bg supported-rate.....	7229
11.1.103 dot11bg supported-rate (SSID profile view).....	7231
11.1.104 dtim-interval.....	7233
11.1.105 eirp.....	7234
11.1.106 er-su disable.....	7236
11.1.107 forward-mode.....	7237
11.1.108 fragmentation-threshold.....	7238

11.1.109 frequency.....	7240
11.1.110 guard-interval-mode.....	7242
11.1.111 he mcs-map (SSID Profile).....	7243
11.1.112 a-mpdu disable.....	7244
11.1.113 ht a-mpdu max-length-exponent.....	7245
11.1.114 keepalive (soft GRE profile view).....	7247
11.1.115 keep-service enable (VAP profile view).....	7248
11.1.116 legacy-station disable.....	7250
11.1.117 max-sta-number (SSID profile view).....	7252
11.1.118 mlo enable.....	7253
11.1.119 mu-ba-trigger mode.....	7255
11.1.120 mu-mimo disable.....	7256
11.1.121 mu-mimo optimize enable.....	7257
11.1.122 ofdma downlink disable.....	7258
11.1.123 ofdma uplink disable.....	7258
11.1.124 probe-response-retry.....	7259
11.1.125 qbss-load enable.....	7260
11.1.126 radio.....	7261
11.1.127 radio disable.....	7262
11.1.128 radio-2g-profile (WLAN view).....	7263
11.1.129 radio-2g-profile.....	7265
11.1.130 radio-5g-profile (WLAN view).....	7266
11.1.131 radio-5g-profile.....	7267
11.1.132 radio-mode.....	7268
11.1.133 radio-type (2G radio profile view).....	7271
11.1.134 radio-type (5G radio profile view).....	7272
11.1.135 reach-max-sta.....	7273
11.1.136 regulatory-domain-profile (WLAN view).....	7274
11.1.137 regulatory-domain-profile.....	7276
11.1.138 report-disassoc-request disable.....	7277
11.1.139 report-sta-assoc enable.....	7278
11.1.140 report-sta-info enable.....	7279
11.1.141 reset ap offline-record.....	7280
11.1.142 reset ap online-fail-record.....	7281
11.1.143 reset ap unauthorized record.....	7282
11.1.144 reset channel switch-record.....	7282
11.1.145 reset station assoc-info ap-offline-record.....	7283
11.1.146 reset station offline-record.....	7285
11.1.147 reset station online-fail-record.....	7286
11.1.148 reset station statistics.....	7287
11.1.149 rf-ping.....	7287
11.1.150 rts-cts-mode.....	7289

11.1.151 rts-cts-threshold.....	7291
11.1.152 rx-stbc disable.....	7292
11.1.153 service-mode disable.....	7293
11.1.154 service-vlan (VAP profile view).....	7294
11.1.155 short-preamble disable.....	7295
11.1.156 single-txchain enable.....	7296
11.1.157 softgre-profile (WLAN view).....	7297
11.1.158 ssid.....	7298
11.1.159 ssid-hide enable.....	7300
11.1.160 ssid-profile (WLAN view).....	7301
11.1.161 ssid-profile (VAP profile view).....	7302
11.1.162 sta-ipv6-service enable.....	7303
11.1.163 sta-network-detect disable.....	7305
11.1.164 sta-network-detect assoc enable.....	7306
11.1.165 sta-offline-delay aging-time.....	7307
11.1.166 sta-offline-delay enable.....	7308
11.1.167 sta-offline-delay full-sta-reject enable.....	7309
11.1.168 sta-offline-delay max-number.....	7310
11.1.169 station connectivity-detect disable.....	7312
11.1.170 twt enable.....	7312
11.1.171 type (VAP profile view).....	7313
11.1.172 u-apsd enable.....	7316
11.1.173 undo ap.....	7317
11.1.174 untagged vlan (soft GRE profile view).....	7318
11.1.175 utmost-power.....	7319
11.1.176 vap-profile (WLAN view).....	7320
11.1.177 vap-profile.....	7322
11.1.178 vap-service-backup auth-server-down.....	7324
11.1.179 vht a-mpdu max-length-exponent.....	7325
11.1.180 a-msdu enable.....	7328
11.1.181 vht a-msdu max-frame-num.....	7329
11.1.182 vht mcs-map.....	7331
11.1.183 vht mcs-map (SSID profile).....	7332
11.1.184 vip-user bandwidth reservation-ratio.....	7334
11.1.185 wlan.....	7335
11.2 AP Management Configuration Commands.....	7335
11.2.1 Command Support.....	7336
11.2.2 access-user syslog-restrain enable.....	7336
11.2.3 access-user syslog-restrain period.....	7337
11.2.4 ac-list (AP view).....	7338
11.2.5 ac-list (AP provisioning view).....	7339
11.2.6 address-mode (AP view).....	7340

11.2.7 address-mode (AP provisioning view).....	7341
11.2.8 alarm-restriction disable.....	7342
11.2.9 alarm-restriction period.....	7343
11.2.10 ap lldp enable.....	7344
11.2.11 ap manufacturer-config.....	7345
11.2.12 ap update ftp-server.....	7346
11.2.13 ap update ftp-server max-connect-number.....	7348
11.2.14 ap update load.....	7350
11.2.15 ap update mode.....	7351
11.2.16 ap update multi-load.....	7352
11.2.17 ap update multi-reset.....	7354
11.2.18 ap update reset.....	7357
11.2.19 ap update sftp-server.....	7358
11.2.20 ap update sftp-server max-connect-number.....	7360
11.2.21 ap update update-filename.....	7361
11.2.22 ap update schedule-task.....	7363
11.2.23 ap username.....	7367
11.2.24 ap-group.....	7369
11.2.25 ap-group (AP view).....	7371
11.2.26 ap-group all vap-profile.....	7372
11.2.27 ap-group all wids-profile.....	7374
11.2.28 ap-group all wired-port-profile.....	7375
11.2.29 ap-mode.....	7376
11.2.30 ap-name.....	7377
11.2.31 ap-name (AP provisioning view).....	7378
11.2.32 ap-name (AP view).....	7379
11.2.33 ap password policy.....	7381
11.2.34 ap-patch update load.....	7382
11.2.35 ap-patch update multi-load.....	7383
11.2.36 ap-patch update update-filename.....	7386
11.2.37 ap-ping.....	7387
11.2.38 ap-pki-profile (WLAN view).....	7389
11.2.39 ap-pki-profile (AP group view and AP view).....	7390
11.2.40 ap-regroup.....	7391
11.2.41 ap-rename.....	7393
11.2.42 ap-reset.....	7395
11.2.43 ap-system-profile (WLAN view).....	7396
11.2.44 ap-system-profile (AP group view and AP view).....	7398
11.2.45 ap-type.....	7399
11.2.46 auto create ap-type.....	7400
11.2.47 broadcast-suppression auto-detect (AP system profile view).....	7402
11.2.48 capwap dtls server-auth (AP provisioning view).....	7403

11.2.49 capwap dtls server-auth cn (AP provisioning view).....	7404
11.2.50 channel-load-mode indoor.....	7406
11.2.51 clear configuration this.....	7407
11.2.52 commit (AP provisioning view).....	7408
11.2.53 console ble-mode (AP system profile view).....	7410
11.2.54 console disable.....	7411
11.2.55 coordinate.....	7412
11.2.56 cpu-usage threshold.....	7414
11.2.57 cpu-defend packet-type.....	7415
11.2.58 crc-alarm enable.....	7416
11.2.59 dai enable (AP wired port profile view).....	7417
11.2.60 description (AP wired port profile view).....	7418
11.2.61 display ap around-ssid-list.....	7419
11.2.62 display ap asyn-message err-info.....	7421
11.2.63 display ap coordinate.....	7422
11.2.64 display ap elabel.....	7423
11.2.65 display ap fan.....	7426
11.2.66 display ap lldp neighbor.....	7427
11.2.67 display ap led.....	7435
11.2.68 display ap neighbor.....	7436
11.2.69 display ap optical-info.....	7438
11.2.70 display ap performance statistics.....	7443
11.2.71 display ap provision.....	7447
11.2.72 display ap pki certificate.....	7449
11.2.73 display ap pki status.....	7450
11.2.74 display ap port.....	7452
11.2.75 display ap power-workmode.....	7455
11.2.76 display ap power.....	7458
11.2.77 display ap resource.....	7459
11.2.78 display ap run-info.....	7460
11.2.79 display ap service-config acl.....	7464
11.2.80 display ap traffic statistics wireless.....	7465
11.2.81 display ap uncontrol all.....	7470
11.2.82 display ap update configuration.....	7471
11.2.83 display ap update schedule-task.....	7474
11.2.84 display ap update status.....	7475
11.2.85 display ap update status partition.....	7486
11.2.86 display ap username.....	7487
11.2.87 display ap version.....	7489
11.2.88 display ap wired-port.....	7495
11.2.89 display ap-pki-profile.....	7499
11.2.90 display ap-system-profile.....	7501

11.2.91 display ap-type.....	7519
11.2.92 display ap-type undefined record.....	7525
11.2.93 display ap-type attributes abnormal-check-record.....	7526
11.2.94 display channel switch-record.....	7527
11.2.95 display distribute-ap.....	7531
11.2.96 display mac-address ap-all.....	7538
11.2.97 display mac-address { ap-id ap-name }.....	7540
11.2.98 display port-link-profile.....	7541
11.2.99 display provision-ap parameter-list.....	7546
11.2.100 display references ap-pki-profile.....	7548
11.2.101 display references ap-system-profile.....	7549
11.2.102 display references port-link-profile.....	7550
11.2.103 display references wired-port-profile.....	7551
11.2.104 display wired-port-profile.....	7553
11.2.105 display wlan ble-link-info.....	7559
11.2.106 display wlan console ble statistics.....	7560
11.2.107 disk-usage threshold.....	7562
11.2.108 eapol-response dest-address transform-condition.....	7563
11.2.109 eapol-response dest-address transform-to.....	7564
11.2.110 eapol-start dest-address transform-condition.....	7566
11.2.111 eapol-start dest-address transform-to.....	7567
11.2.112 eth-trunk (AP wired port profile view).....	7568
11.2.113 high-temperature threshold.....	7570
11.2.114 ipsg enable (AP wired port profile view).....	7571
11.2.115 ip-address (AP view).....	7572
11.2.116 ip-address (AP provisioning view).....	7574
11.2.117 ip domain-name.....	7575
11.2.118 igmp-snooping enable (AP wired port profile view).....	7576
11.2.119 keep-service enable.....	7578
11.2.120 keep-service enable allow new-access.....	7579
11.2.121 learn-client-address enable (AP wired port profile view).....	7580
11.2.122 led blink-time.....	7581
11.2.123 led off.....	7583
11.2.124 lldp admin-status.....	7584
11.2.125 lldp dot3-tlv power (AP wired port link profile view).....	7585
11.2.126 lldp enable.....	7586
11.2.127 lldp message-transmission delay (AP system profile view).....	7587
11.2.128 lldp message-transmission hold-multiplier (AP system profile view).....	7589
11.2.129 lldp message-transmission interval (AP system profile view).....	7591
11.2.130 lldp report enable.....	7593
11.2.131 lldp report-interval.....	7594
11.2.132 lldp restart-delay.....	7595

11.2.133 lldp tlv-enable (AP wired port link profile view).....	7596
11.2.134 lldp tlv-enable legacy-tlv four-pair-power (AP wired port link profile view).....	7598
11.2.135 lldp tlv-enable legacy-tlv power-capability (AP wired port link profile view).....	7599
11.2.136 location.....	7600
11.2.137 log-record-level.....	7601
11.2.138 log-server.....	7602
11.2.139 low-temperature threshold.....	7604
11.2.140 mac-learning (AP wired port profile view).....	7605
11.2.141 management-vlan (AP system profile view, AP provisioning view, AP view).....	7607
11.2.142 memory-usage threshold.....	7610
11.2.143 mld-snooping enable (AP wired port profile view).....	7611
11.2.144 mode (AP wired port profile view).....	7612
11.2.145 mtu.....	7614
11.2.146 multicast-rate.....	7616
11.2.147 multicast-suppression auto-detect (AP system profile view).....	7618
11.2.148 np capwap-reassembly (AP system profile view).....	7619
11.2.149 np fast-forwarding disable (AP system profile view).....	7620
11.2.150 password alert before-expire (AP password policy view).....	7621
11.2.151 password alert original (AP password policy view).....	7622
11.2.152 password expire (AP password policy view).....	7623
11.2.153 password history record number (AP password policy view).....	7625
11.2.154 pki realm (AP PKI realm profile view).....	7626
11.2.155 poe af-inrush enable (AP system profile view).....	7628
11.2.156 poe disable (AP wired port link profile view).....	7629
11.2.157 poe force-power (AP wired port link profile view).....	7630
11.2.158 poe high-inrush enable (AP system profile view).....	7631
11.2.159 poe legacy enable (AP wired port link profile view).....	7632
11.2.160 poe max-power (AP system profile view).....	7633
11.2.161 poe power-reserved (AP system profile view).....	7634
11.2.162 poe power-threshold (AP system profile view).....	7636
11.2.163 poe priority (AP wired port link profile view).....	7637
11.2.164 port-link-profile (WLAN view).....	7638
11.2.165 port-link-profile (AP wired port profile view).....	7640
11.2.166 port-security enable (AP wired port profile view).....	7641
11.2.167 port-security mac-address sticky (AP wired port profile view).....	7642
11.2.168 port-security max-mac-num (AP wired port profile view).....	7643
11.2.169 port-security protect-action (AP wired port profile view).....	7645
11.2.170 power force work-mode.....	7646
11.2.171 provision-ap.....	7648
11.2.172 reset ap-type undefined record.....	7648
11.2.173 reset mac-address.....	7649
11.2.174 reset statistics.....	7650

11.2.175 reset wlan console ble statistics.....	7652
11.2.176 sample-time.....	7653
11.2.177 sftp server disable.....	7654
11.2.178 shutdown (AP wired port link profile view).....	7654
11.2.179 ssh client first-time enable (AP system profile view).....	7655
11.2.180 speed (AP wired port link profile view).....	7656
11.2.181 stelnet server disable.....	7658
11.2.182 stp auto-shutdown enable (AP wired port profile view).....	7659
11.2.183 stp auto-shutdown recovery-time (AP wired port profile view).....	7660
11.2.184 stp enable (AP wired port profile view).....	7661
11.2.185 telnet enable.....	7662
11.2.186 temporary-management disable (AP system profile view).....	7663
11.2.187 temporary-management enable (VAP profile view).....	7666
11.2.188 temporary-management psk.....	7667
11.2.189 traffic-filter (AP wired port profile view).....	7669
11.2.190 traffic-remark (AP wired port profile view).....	7671
11.2.191 traffic-optimize (AP wired port profile view).....	7674
11.2.192 traffic-optimize broadcast-suppression disable (AP system profile view).....	7675
11.2.193 traffic-optimize broadcast-suppression rate-threshold (AP system profile view).....	7677
11.2.194 undo capwap dtls server-auth (AP view).....	7680
11.2.195 undo capwap dtls server-auth cn (AP view).....	7681
11.2.196 unicast-suppression auto-detect (AP system profile view).....	7682
11.2.197 usb enable (AP system profile view).....	7683
11.2.198 user-interface vty acl.....	7684
11.2.199 user-interface vty idle-timeout.....	7686
11.2.200 user-interface vty screen-length.....	7687
11.2.201 user-isolate (AP wired port profile view).....	7688
11.2.202 vlan pvid (AP wired port profile view).....	7689
11.2.203 vlan (AP wired port profile view).....	7691
11.2.204 wifi-light.....	7693
11.2.205 wired-port-profile (WLAN view).....	7695
11.2.206 wired-port-profile (AP group view and AP view).....	7696
11.3 Cloud-based Management Configuration Commands.....	7697
11.3.1 Command Support.....	7698
11.3.2 ap manage-mode force-tradition.....	7698
11.3.3 ap up-report-cloud.....	7699
11.3.4 ap-id synchronize.....	7700
11.3.5 display cloud license.....	7701
11.4 WLAN Radio Resource Management Configuration Commands	7703
11.4.1 Command Support.....	7703
11.4.2 agc-threshold.....	7703
11.4.3 amc-policy.....	7704

11.4.4 air-scan-profile.....	7706
11.4.5 air-scan-profile (radio profile view).....	7707
11.4.6 antenna-mode.....	7708
11.4.7 anti-interference disable.....	7709
11.4.8 anti-interference agc-check disable.....	7711
11.4.9 anti-interference per-packet-tpc disable.....	7712
11.4.10 band-steer balance gap-threshold.....	7713
11.4.11 band-steer balance start-threshold.....	7714
11.4.12 band-steer client-band-expire.....	7715
11.4.13 band-steer deny-threshold.....	7717
11.4.14 band-steer disable.....	7718
11.4.15 band-steer snr-threshold.....	7719
11.4.16 bss-color disable.....	7720
11.4.17 btm-fail-times.....	7721
11.4.18 calibrate auto-bandwidth-select.....	7723
11.4.19 calibrate auto-channel-select.....	7724
11.4.20 calibrate auto-txpower-select.....	7725
11.4.21 calibrate enable { auto manual schedule time }.....	7726
11.4.22 calibrate environment-deterioration-blacklist.....	7729
11.4.23 calibrate retransmission-rate-check.....	7730
11.4.24 calibrate retransmission-rate-threshold.....	7731
11.4.25 calibrate flexible-radio.....	7732
11.4.26 calibrate flexible-radio disable.....	7734
11.4.27 calibrate flexible-radio manual-recognize.....	7735
11.4.28 calibrate grouping interference-threshold.....	7736
11.4.29 calibrate max-tx-power.....	7738
11.4.30 calibrate min-tx-power.....	7739
11.4.31 calibrate manual startup.....	7740
11.4.32 calibrate noise-floor-threshold.....	7742
11.4.33 calibrate policy.....	7743
11.4.34 calibrate reference 3d-data.....	7744
11.4.35 calibrate reference data-analysis disable.....	7745
11.4.36 calibrate reference data-analysis.....	7746
11.4.37 calibrate reference rogue-ap-interference disable.....	7747
11.4.38 calibrate sensitivity.....	7748
11.4.39 calibrate tpc threshold.....	7750
11.4.40 calibrate virtual-group-size.....	7751
11.4.41 cca-threshold.....	7752
11.4.42 co-sr disable.....	7753
11.4.43 dca-channel bandwidth.....	7754
11.4.44 dca-channel channel-set.....	7756
11.4.45 deauth-fail-times.....	7758

11.4.46 dfs radar-filter sensitivity.....	7759
11.4.47 dfs recover-delay.....	7760
11.4.48 dfs smart-selection disable.....	7761
11.4.49 display air-scan-profile.....	7763
11.4.50 display anti-interference config.....	7764
11.4.51 display flexible-radio status.....	7766
11.4.52 display flexible-radio switch-record.....	7767
11.4.53 display interference-visualization configuration.....	7769
11.4.54 display references air-scan-profile.....	7770
11.4.55 display references rrm-profile.....	7771
11.4.56 display references scene.....	7773
11.4.57 display rrm-profile.....	7776
11.4.58 display sta-load-balance static-group.....	7790
11.4.59 display sta-load-balance fairness.....	7793
11.4.60 display station neighbor.....	7794
11.4.61 display station neighbor all.....	7796
11.4.62 display station steer-history.....	7797
11.4.63 display station steer-info.....	7800
11.4.64 display station steer-statistics.....	7802
11.4.65 display station unsteerable.....	7804
11.4.66 display sta-profiling.....	7805
11.4.67 display wlan calibrate channel-set.....	7807
11.4.68 display wlan calibrate global configuration.....	7808
11.4.69 display wlan calibrate statistics.....	7811
11.4.70 display wlan scene.....	7812
11.4.71 dynamic-edca enable.....	7815
11.4.72 dynamic-edca threshold.....	7816
11.4.73 sta-number gap-threshold.....	7817
11.4.74 high-density amc-optimize enable.....	7819
11.4.75 interference adjacent-channel threshold.....	7820
11.4.76 interference co-channel threshold.....	7821
11.4.77 interference detect-enable.....	7822
11.4.78 interference station threshold.....	7823
11.4.79 interference-visualization enable.....	7824
11.4.80 member (static load balancing group view).....	7825
11.4.81 power auto-adjust enable.....	7827
11.4.82 radio-reload time-range.....	7828
11.4.83 reset ap traffic statistics wireless.....	7829
11.4.84 reset station steer-history.....	7830
11.4.85 reset flexible-radio switch-record.....	7831
11.4.86 reset station steer-statistics.....	7831
11.4.87 reset wlan calibrate statistics.....	7832

11.4.88 rrm-profile (WLAN view).....	7833
11.4.89 rrm-profile (radio profile view).....	7835
11.4.90 rssi-diff-gap.....	7835
11.4.91 rssi-threshold.....	7837
11.4.92 rx-sensitivity.....	7838
11.4.93 scan-channel-set.....	7839
11.4.94 scan-disable.....	7840
11.4.95 scan-enhancement.....	7841
11.4.96 scan-interval.....	7842
11.4.97 scan-period.....	7843
11.4.98 scene.....	7844
11.4.99 smart-antenna { enable disable }.....	7848
11.4.100 smart-antenna throughput-triggered-training.....	7849
11.4.101 smart-antenna training-interval.....	7850
11.4.102 smart-antenna training-mpdu-number.....	7851
11.4.103 smart-antenna valid-per-scope.....	7852
11.4.104 smart-roam advanced-scan disable.....	7854
11.4.105 smart-roam { disable enable ai-mode }.....	7855
11.4.106 smart-roam quick-kickoff back-off-time.....	7856
11.4.107 smart-roam quick-kickoff-threshold disable.....	7858
11.4.108 smart-roam quick-kickoff-threshold { check-snr check-rate }.....	7859
11.4.109 smart-roam quick-kickoff-snr check-interval.....	7860
11.4.110 smart-roam quick-kickoff-snr p-n criteria.....	7861
11.4.111 smart-roam quick-kickoff-threshold.....	7863
11.4.112 smart-roam roam-threshold { check-snr check-rate }.....	7864
11.4.113 smart-roam roam-threshold { snr rate }.....	7866
11.4.114 smart-roam snr-margin.....	7868
11.4.115 smart-roam unable-roam-client expire-time.....	7869
11.4.116 spatial-reuse disable.....	7871
11.4.117 sta-load-balance dynamic btm-fail-times.....	7872
11.4.118 sta-load-balance dynamic deauth-fail-times.....	7873
11.4.119 sta-load-balance dynamic disable.....	7874
11.4.120 sta-load-balance dynamic sta-number gap-threshold.....	7875
11.4.121 sta-load-balance dynamic sta-number start-threshold.....	7877
11.4.122 sta-load-balance static-group.....	7878
11.4.123 sta-number start-threshold.....	7879
11.4.124 sta-load-balance dynamic probe-report interval.....	7880
11.4.125 sta-load-balance dynamic rssi-diff-gap.....	7881
11.4.126 sta-load-balance dynamic rssi-threshold.....	7883
11.4.127 sta-load-balance dynamic steer-restrict auth-threshold.....	7884
11.4.128 sta-load-balance dynamic steer-restrict probe-threshold.....	7885
11.4.129 sta-load-balance dynamic steer-restrict restrict-time.....	7886

11.4.130 sta-profiling disable.....	7887
11.4.131 steer-restrict auth-threshold.....	7888
11.4.132 steer-restrict probe-threshold.....	7890
11.4.133 steer-restrict restrict-time.....	7891
11.4.134 terminal-identify disable.....	7892
11.4.135 uac enable.....	7893
11.4.136 uac client-number threshold.....	7894
11.4.137 uac client-snr threshold.....	7896
11.4.138 uac reach-access-threshold.....	7897
11.5 WLAN Spectrum Analysis Configuration Commands.....	7899
11.5.1 Command Support.....	7899
11.5.2 channel-monitor enable.....	7899
11.5.3 display spectrum-analysis server-reporter.....	7900
11.5.4 display wlan non-wifi-device.....	7902
11.5.5 display wlan non-wifi-device history.....	7904
11.5.6 spectrum-analysis enable.....	7907
11.5.7 spectrum-analysis non-wifi-device aging-time.....	7908
11.5.8 spectrum-analysis server.....	7909
11.5.9 spectrum-analysis source.....	7911
11.5.10 spectrum-report.....	7912
11.5.11 reset wlan non-wifi-device.....	7914
11.5.12 reset wlan non-wifi-device history.....	7916
11.6 WLAN Roaming Commands.....	7917
11.6.1 Command Support.....	7917
11.6.2 beacon disable.....	7917
11.6.3 capwap dtls inter-controller control-link encrypt.....	7918
11.6.4 capwap dtls inter-controller psk.....	7919
11.6.5 capwap inter-controller sensitive-info psk.....	7921
11.6.6 cts delay.....	7923
11.6.7 cts disable.....	7924
11.6.8 display mobility-group.....	7925
11.6.9 display station roam-statistics.....	7926
11.6.10 display station roam-track.....	7928
11.6.11 dot11r enable.....	7930
11.6.12 dot11r proprietary.....	7931
11.6.13 dot11r reassociate-timeout.....	7932
11.6.14 member (mobility group view).....	7933
11.6.15 mobility-group.....	7935
11.6.16 mobility-server local.....	7936
11.6.17 sfn-roam enable.....	7937
11.6.18 sfn-roam report-interval.....	7938
11.6.19 sfn-roam roam-check better-times.....	7939

11.6.20 sfn-roam roam-check check-interval.....	7940
11.6.21 sfn-roam roam-check gap-rssi.....	7941
11.6.22 sfn-roam roam-check high-threshold.....	7942
11.6.23 sfn-roam roam-check low-threshold.....	7943
11.6.24 sfn-roam roam-check rssi-accumulate.....	7944
11.6.25 sfn-roam roam-check sta-holding times.....	7945
11.6.26 inter-ac roam disable.....	7946
11.7 WLAN QoS Configuration Commands.....	7947
11.7.1 Command Support.....	7947
11.7.2 airtime-fair-schedule enable.....	7947
11.7.3 app-share remark.....	7949
11.7.4 display references traffic-profile.....	7952
11.7.5 display service-experience-analysis monitor-list.....	7953
11.7.6 display traffic-profile.....	7954
11.7.7 display ucc-profile.....	7963
11.7.8 file-transfer remark.....	7965
11.7.9 game-turbo disable.....	7969
11.7.10 lync acl.....	7970
11.7.11 lync listener.....	7971
11.7.12 multimedia-air-optimize congestion-control tcp-window-tuning disable.....	7972
11.7.13 multimedia-air-optimize downlink-delay-guarantee.....	7973
11.7.14 multimedia-air-optimize disable.....	7975
11.7.15 multimedia-air-optimize threshold.....	7978
11.7.16 priority-map downstream dot1p.....	7979
11.7.17 priority-map downstream dscp.....	7981
11.7.18 priority-map downstream trust.....	7983
11.7.19 priority-map tunnel-upstream dot11e dscp.....	7984
11.7.20 priority-map tunnel-upstream dot11e dot1p.....	7986
11.7.21 priority-map tunnel-upstream dscp dot1p.....	7988
11.7.22 priority-map tunnel-upstream dscp tunnel-dscp.....	7990
11.7.23 priority-map tunnel-upstream trust.....	7992
11.7.24 priority-map upstream trust.....	7993
11.7.25 qos car (SSID profile view).....	7995
11.7.26 rate-limit.....	7998
11.7.27 rate-limit client dynamic.....	7999
11.7.28 rate-limit client dynamic disable.....	8001
11.7.29 rate-limit client time-range.....	8002
11.7.30 rate-limit dynamic interval.....	8004
11.7.31 svp-voice enable.....	8005
11.7.32 service-experience-analysis enable.....	8006
11.7.33 service-experience-analysis monitor interval.....	8007
11.7.34 service-experience-analysis monitor application.....	8008

11.7.35 service-experience-analysis monitor ucl-group.....	8010
11.7.36 service-experience-analysis sip-snooping port.....	8011
11.7.37 traffic-filter (traffic profile view).....	8013
11.7.38 traffic-profile (WLAN view).....	8015
11.7.39 traffic-profile (VAP profile view).....	8017
11.7.40 traffic-remark (traffic profile view).....	8018
11.7.41 ucc-profile (system view).....	8020
11.7.42 ucc-profile (VAP profile view).....	8021
11.7.43 user-isolate (traffic profile view).....	8022
11.7.44 video remark.....	8023
11.7.45 voice remark.....	8027
11.7.46 wlan-slice high-reliability enable.....	8030
11.7.47 wlan-slice high-reliability frer-enhance.....	8032
11.7.48 wlan-slice high-reliability rtt.....	8033
11.7.49 wlan-slice high-reliability time-ratio.....	8035
11.7.50 wlan-slice high-reliability acl.....	8036
11.7.51 wmm edca-ap.....	8038
11.7.52 wmm edca-client (SSID profile view).....	8041
11.7.53 wmm mu-edca-client (SSID profile view).....	8044
11.7.54 wmm disable (radio profile view).....	8047
11.7.55 wmm mandatory enable.....	8048
11.8 DFI Configuration Commands.....	8049
11.8.1 Command Support.....	8049
11.8.2 dynamic flow inspection.....	8049
11.9 Application Identification Configuration Commands.....	8050
11.9.1 Command Support.....	8050
11.9.2 application-group car (SAC profile view).....	8050
11.9.3 application-group deny (SAC profile view).....	8052
11.9.4 application-group remark (SAC profile view).....	8053
11.9.5 category sub-category (AP user-defined application view).....	8055
11.9.6 defence engine enable ap-group.....	8056
11.9.7 description (AP user-defined application rule view).....	8057
11.9.8 description (AP user-defined application view).....	8058
11.9.9 destination-port (AP user-defined application rule view).....	8059
11.9.10 display ap application.....	8060
11.9.11 display ap application-group.....	8061
11.9.12 display apsa-sdb.....	8063
11.9.13 display defence engine configuration.....	8065
11.9.14 display references sac-profile.....	8066
11.9.15 display wlan sac-profile.....	8067
11.9.16 display sac application user-defined.....	8069
11.9.17 ip-address (AP user-defined application rule view).....	8072

11.9.18 priority-remark-default.....	8074
11.9.19 protocol (AP user-defined application rule view).....	8075
11.9.20 rule name (AP user-defined application view).....	8076
11.9.21 sac-profile.....	8077
11.9.22 signature (AP user-defined application rule view).....	8078
11.9.23 sac-profile (VAP profile view).....	8080
11.9.24 upgrade local apsa-sdb.....	8081
11.9.25 user-defined-application (WLAN view).....	8082
11.9.26 user-protocol-statistic enable.....	8083
11.9.27 vap-protocol-statistic enable.....	8084
11.10 WLAN Location Configuration Commands.....	8085
11.10.1 Command Support.....	8085
11.10.2 aeroscout compound-time.....	8086
11.10.3 aeroscout local.....	8088
11.10.4 aeroscout mu-enable.....	8089
11.10.5 aeroscout server.....	8089
11.10.6 aeroscout tag-enable.....	8091
11.10.7 ble low-power-threshold.....	8092
11.10.8 ble monitoring-list.....	8093
11.10.9 ble report interval.....	8095
11.10.10 ble source.....	8096
11.10.11 ble-profile (AP group view and AP view).....	8097
11.10.12 ble-profile (WLAN view).....	8098
11.10.13 broadcaster enable.....	8100
11.10.14 broadcasting-content.....	8101
11.10.15 broadcasting-content (AP group view).....	8104
11.10.16 broadcasting-content (AP view).....	8105
11.10.17 broadcasting-interval.....	8108
11.10.18 display ble-profile.....	8109
11.10.19 display location-profile.....	8113
11.10.20 display references ble-profile.....	8118
11.10.21 display wlan ble global configuration.....	8119
11.10.22 display wlan ble monitoring-list.....	8120
11.10.23 display wlan ble site-info.....	8121
11.10.24 display wlan location config-info aeroscout.....	8123
11.10.25 display wlan location device-info tag.....	8126
11.10.26 display wlan location global configuration.....	8127
11.10.27 ekahau server.....	8128
11.10.28 ekahau tag-enable.....	8130
11.10.29 location source.....	8130
11.10.30 location-profile.....	8132
11.10.31 location-profile (WLAN view).....	8134

11.10.32 private mu protocol-version.....	8135
11.10.33 private mu-enable.....	8136
11.10.34 private report-frequency.....	8136
11.10.35 private report-protocol.....	8137
11.10.36 private server.....	8139
11.10.37 report enable.....	8141
11.10.38 report-mode.....	8141
11.10.39 report-to-server.....	8143
11.10.40 reset wlan ble site-info.....	8144
11.10.41 reset wlan location device-info tag.....	8145
11.10.42 sniffer enable.....	8146
11.10.43 source (location profile view).....	8148
11.10.44 source (BLE profile view).....	8149
11.10.45 tx-power (BLE profile view).....	8150
11.11 WLAN Security Configuration Commands.....	8152
11.11.1 Command Support.....	8152
11.11.2 anti-attack flood blacklist enable.....	8152
11.11.3 anti-attack flood disable.....	8153
11.11.4 anti-attack flood sta-rate-threshold.....	8155
11.11.5 arp anti-attack check user-bind enable.....	8157
11.11.6 attack-device trap enable.....	8158
11.11.7 brute-force-detect interval.....	8159
11.11.8 brute-force-detect quiet-time.....	8161
11.11.9 brute-force-detect threshold.....	8162
11.11.10 contain.....	8163
11.11.11 contain-mode.....	8165
11.11.12 device report-interval.....	8166
11.11.13 dhcp trust port.....	8167
11.11.14 display ap radio-environment.....	8168
11.11.15 display references wids-whitelist-profile.....	8171
11.11.16 display references wids-profile.....	8172
11.11.17 display references wids-spoof-profile.....	8173
11.11.18 display wids-whitelist-profile.....	8174
11.11.19 display wids-profile.....	8176
11.11.20 display wids-spoof-profile.....	8180
11.11.21 display references security-profile.....	8181
11.11.22 display references sta-blacklist-profile.....	8182
11.11.23 display references sta-whitelist-profile.....	8183
11.11.24 display security-profile.....	8184
11.11.25 display sta-blacklist-profile.....	8191
11.11.26 display station dynamic-blacklist.....	8192
11.11.27 display sta-whitelist-profile.....	8195

11.11.28 display wlan ids attack-detected.....	8196
11.11.29 display wlan ids attack-detected statistics.....	8200
11.11.30 display wlan ids attack-history.....	8202
11.11.31 display wlan ids contain.....	8205
11.11.32 display wlan ids device-detected.....	8209
11.11.33 display wlan ids device-detected statistics.....	8216
11.11.34 display wlan dynamic-blacklist.....	8218
11.11.35 display wlan ids rogue-history.....	8220
11.11.36 display wlan ids spoof-ssid fuzzy-match.....	8223
11.11.37 display wlan wapi certificate.....	8225
11.11.38 dynamic-blacklist aging-time.....	8227
11.11.39 dynamic-blacklist disable.....	8228
11.11.40 flood-detect interval.....	8229
11.11.41 flood-detect quiet-time.....	8230
11.11.42 flood-detect threshold.....	8231
11.11.43 ip source check user-bind enable.....	8233
11.11.44 learn-client-address dhcp-strict.....	8233
11.11.45 learn-client-address { dhcpv6-strict dhcpv6-slaac }.....	8235
11.11.46 learn-client-address disable (VAP profile view).....	8236
11.11.47 nd trust port.....	8238
11.11.48 oui.....	8239
11.11.49 permit-ap.....	8240
11.11.50 permit-ap oui-ssid-match.....	8245
11.11.51 pmf.....	8246
11.11.52 reset wlan ids attack-detected.....	8248
11.11.53 reset wlan ids attack-detected statistics.....	8249
11.11.54 reset wlan ids attack-history.....	8250
11.11.55 reset wlan dynamic-blacklist.....	8251
11.11.56 reset wlan ids rogue-history.....	8252
11.11.57 rogue-device log enable.....	8254
11.11.58 security dot1x.....	8255
11.11.59 security enhanced-open.....	8257
11.11.60 security open.....	8258
11.11.61 security psk.....	8259
11.11.62 security wapi.....	8263
11.11.63 security wep.....	8265
11.11.64 security wpa2-wpa3 psk-sae.....	8268
11.11.65 security wpa2-wpa3 dot1x.....	8270
11.11.66 security wpa3 dot1x.....	8271
11.11.67 security wpa3 sae.....	8272
11.11.68 security-profile (WLAN view).....	8274
11.11.69 security-profile (VAP profile view).....	8275

11.11.70 spoof-detect quiet-time.....	8276
11.11.71 spoof-ssid.....	8277
11.11.72 sta arp-nd-proxy before-assoc.....	8279
11.11.73 sta-access-mode.....	8280
11.11.74 sta-blacklist-profile.....	8281
11.11.75 sta-mac.....	8283
11.11.76 sta-whitelist-profile.....	8284
11.11.77 wapi asu.....	8285
11.11.78 wapi bk.....	8286
11.11.79 wapi cert-retrans-count.....	8288
11.11.80 wapi import certificate.....	8289
11.11.81 wapi import private-key.....	8291
11.11.82 wapi key-update.....	8292
11.11.83 wapi msk.....	8294
11.11.84 wapi sa-timeout.....	8295
11.11.85 wapi source interface.....	8296
11.11.86 wapi usk.....	8297
11.11.87 weak-iv-detect quiet-time.....	8298
11.11.88 wep default-key.....	8299
11.11.89 wep key.....	8300
11.11.90 wids attack detect.....	8303
11.11.91 wids manual-contain.....	8306
11.11.92 wids contain enable.....	8307
11.11.93 wids device detect enable.....	8308
11.11.94 wids-whitelist-profile (WLAN view).....	8310
11.11.95 wids-profile (WLAN view).....	8311
11.11.96 wids-spoof-profile (WLAN view).....	8313
11.11.97 work-mode.....	8314
11.11.98 wpa ptk-update enable.....	8316
11.11.99 wpa ptk-update ptk-update-interval.....	8317
11.12 WLAN WDS Configuration Commands.....	8318
11.12.1 Command Support.....	8318
11.12.2 dhcp trust port (WDS profile view).....	8318
11.12.3 display references wds-profile.....	8319
11.12.4 display references wds-whitelist-profile.....	8320
11.12.5 display wds-profile.....	8322
11.12.6 display wds-whitelist-profile.....	8325
11.12.7 display wds vap.....	8326
11.12.8 display wlan wds link.....	8328
11.12.9 nd trust port (WDS profile view).....	8330
11.12.10 peer-ap mac (WDS whitelist profile view).....	8331
11.12.11 priority-map dscp (WDS profile view).....	8332

11.12.12 priority-map trust (WDS profile view).....	8333
11.12.13 security-profile (WDS profile view).....	8334
11.12.14 vlan tagged (WDS profile view).....	8336
11.12.15 wds-mode.....	8337
11.12.16 wds-name.....	8338
11.12.17 wds-profile.....	8339
11.12.18 wds-profile radio.....	8340
11.12.19 wds-profile (AP group radio view or AP radio view).....	8342
11.12.20 wds-whitelist-profile.....	8343
11.12.21 wds-whitelist-profile (AP group radio view or AP radio view).....	8344
11.13 WLAN Mesh Configuration Commands.....	8345
11.13.1 Command Support.....	8345
11.13.2 dhcp trust port (Mesh profile view).....	8345
11.13.3 display mesh-profile.....	8346
11.13.4 display mesh-whitelist-profile.....	8351
11.13.5 display mesh vap.....	8353
11.13.6 display references mesh-profile.....	8354
11.13.7 display references mesh-whitelist-profile.....	8356
11.13.8 display wlan mesh link.....	8357
11.13.9 display wlan mesh route.....	8360
11.13.10 fwa wmm edca-client.....	8361
11.13.11 fwa wmm edca-mode.....	8366
11.13.12 fwa enable.....	8368
11.13.13 link-aging-time.....	8369
11.13.14 link-report-interval.....	8370
11.13.15 link-rssi-threshold.....	8371
11.13.16 max-link-number.....	8372
11.13.17 mesh-id.....	8374
11.13.18 mesh-profile.....	8375
11.13.19 mesh-profile radio.....	8376
11.13.20 mesh-profile (AP group radio view or AP radio view).....	8377
11.13.21 mesh-role.....	8378
11.13.22 mesh-route aging-time.....	8380
11.13.23 mesh-whitelist-profile.....	8381
11.13.24 mesh-whitelist-profile (AP group radio view or AP radio view).....	8382
11.13.25 mpp-active-reselection disable.....	8383
11.13.26 nd trust port (Mesh profile view).....	8384
11.13.27 peer-ap mac (Mesh whitelist profile view).....	8385
11.13.28 priority-map dscp (Mesh profile view).....	8386
11.13.29 priority-map trust (Mesh profile view).....	8388
11.13.30 security-profile (Mesh profile view).....	8389
11.13.31 vlan tagged (Mesh profile view).....	8390

11.13.32 wideband enable.....	8392
11.14 Vehicle-Ground Fast Link Handover Configuration Commands.....	8394
11.14.1 Command Support.....	8394
11.14.2 antenna-output.....	8394
11.14.3 client-mode enable.....	8395
11.14.4 display mesh-handover-profile.....	8396
11.14.5 display mesh-neighbor-rssi.....	8398
11.14.6 display references mesh-handover-profile.....	8400
11.14.7 doppler-optimize disable.....	8402
11.14.8 doppler-optimize level.....	8403
11.14.9 hal half-band disable.....	8404
11.14.10 location-based-algorithm enable.....	8405
11.14.11 link-probe-interval.....	8406
11.14.12 mesh-handover-profile.....	8407
11.14.13 mesh-handover-profile (Mesh profile view).....	8408
11.15 Hotspot 2.0 Configuration Commands.....	8409
11.15.1 Command Support.....	8409
11.15.2 cellular-network-profile.....	8409
11.15.3 cellular-network-profile (Hotspot2.0 profile view).....	8411
11.15.4 connection-capability-profile.....	8412
11.15.5 connection-capability-profile (Hotspot2.0 profile view).....	8413
11.15.6 connection-capability.....	8414
11.15.7 display cellular-network-profile.....	8416
11.15.8 display connection-capability-profile.....	8417
11.15.9 display hotspot2-profile.....	8420
11.15.10 display nai-realm-profile.....	8423
11.15.11 display operating-class-profile.....	8425
11.15.12 display operator-domain-profile.....	8426
11.15.13 display operator-name-profile.....	8428
11.15.14 display references cellular-network-profile.....	8429
11.15.15 display references connection-capability-profile.....	8431
11.15.16 display references hotspot2-profile.....	8432
11.15.17 display references nai-realm-profile.....	8433
11.15.18 display references operating-class-profile.....	8434
11.15.19 display references operator-domain-profile.....	8435
11.15.20 display references operator-name-profile.....	8436
11.15.21 display references roaming-consortium-profile.....	8437
11.15.22 display references venue-name-profile.....	8439
11.15.23 display roaming-consortium-profile.....	8440
11.15.24 display venue-name-profile.....	8442
11.15.25 domain-name.....	8443
11.15.26 hessid.....	8444

11.15.27 hotspot2-profile.....	8446
11.15.28 hotspot2-profile (VAP profile view).....	8447
11.15.29 ipv4-address-avail.....	8448
11.15.30 ipv6-address-avail.....	8450
11.15.31 nai-realm-profile.....	8451
11.15.32 nai-realm-profile (Hotspot2.0 profile view).....	8452
11.15.33 nai-realm.....	8453
11.15.34 network-authen-type.....	8455
11.15.35 network-type.....	8456
11.15.36 operating-class-indication.....	8458
11.15.37 operating-class-profile.....	8459
11.15.38 operating-class-profile (Hotspot2.0 profile view).....	8460
11.15.39 operator-domain-profile.....	8461
11.15.40 operator-domain-profile (Hotspot2.0 profile view).....	8462
11.15.41 operator-friendly-name.....	8463
11.15.42 operator-name-profile.....	8465
11.15.43 operator-name-profile (Hotspot2.0 profile view).....	8466
11.15.44 p2p-cross-connect disable.....	8467
11.15.45 plmn-id.....	8468
11.15.46 roaming-consortium-oi.....	8469
11.15.47 roaming-consortium-profile.....	8470
11.15.48 roaming-consortium-profile (Hotspot2.0 profile view).....	8472
11.15.49 venue-name-profile.....	8473
11.15.50 venue-name-profile (Hotspot2.0 profile view).....	8474
11.15.51 venue-name.....	8475
11.15.52 venue-type.....	8477
11.16 IoT AP Configuration Commands.....	8478
11.16.1 Command Support.....	8478
11.16.2 antenna-status.....	8479
11.16.3 baud-rate.....	8480
11.16.4 card connect-type.....	8481
11.16.5 config-agent permit ip-address.....	8482
11.16.6 display ap card.....	8484
11.16.7 display ap-card statistics.....	8487
11.16.8 display ap-card all.....	8488
11.16.9 display iot-card iot-command-result.....	8490
11.16.10 display iot-profile.....	8493
11.16.11 display references iot-profile.....	8496
11.16.12 card.....	8497
11.16.13 iconnect enable.....	8498
11.16.14 iot-card reboot.....	8499
11.16.15 iot-card reset-factory-configuration.....	8500

11.16.16	iot-card reset-network-configuration.....	8500
11.16.17	iot-card switch-firmware.....	8501
11.16.18	iot-profile (WLAN view).....	8502
11.16.19	iot-profile (IoT card interface view).....	8503
11.16.20	management-server.....	8505
11.16.21	reset ap-card statistics.....	8507
11.16.22	share-key.....	8508
11.16.23	type (IoT profile view).....	8510
11.16.24	wired-port-profile (IoT card interface view).....	8511
11.17	WLAN Traffic Optimization Commands.....	8512
11.17.1	Command Support.....	8512
11.17.2	display wlan igmp-snooping vap-cac.....	8512
11.17.3	igmp-snooping group-bandwidth (AP system profile view).....	8513
11.17.4	igmp-snooping max-bandwidth (traffic profile view).....	8515
11.17.5	igmp-snooping max-user (traffic profile view).....	8516
11.17.6	igmp-snooping enable (traffic profile view).....	8517
11.17.7	igmp-snooping report-suppress (Traffic profile view).....	8518
11.17.8	mld-snooping enable (traffic profile view).....	8520
11.17.9	service-guarantee.....	8521
11.17.10	traffic-optimize arp-proxy enable.....	8522
11.17.11	traffic-optimize bcmc deny all.....	8523
11.17.12	traffic-optimize bcmc unicast-send.....	8524
11.17.13	traffic-optimize bcmc unicast-send mismatch-action drop.....	8525
11.17.14	traffic-optimize broadcast-suppression.....	8526
11.17.15	traffic-optimize multicast-suppression.....	8528
11.17.16	traffic-optimize multicast-unicast enable.....	8529
11.17.17	traffic-optimize multicast-unicast dynamic-adaptive disable.....	8530
11.17.18	traffic-optimize nd-proxy enable.....	8531
11.17.19	traffic-optimize sta-bridge-forward disable.....	8532
11.17.20	traffic-optimize tcp adjust-mss.....	8533
11.17.21	traffic-optimize unicast-suppression.....	8534
11.18	Centralized License Control Commands.....	8535
11.18.1	Command Support.....	8536
11.18.2	license centralized enable.....	8536
11.18.3	license server.....	8536
11.18.4	license client source.....	8538
11.18.5	display license centralized configuration.....	8539
11.18.6	display license resource usage detail.....	8540
11.19	WLAN Reliability Commands.....	8542
11.19.1	Command Support.....	8543
11.19.2	ac protect alarm-restrain enable.....	8543
11.19.3	ac protect cold-backup kickoff-station.....	8544

11.19.4 ac protect link-switch packet-loss echo-probe-time.....	8545
11.19.5 ac protect link-switch mode.....	8546
11.19.6 ac protect link-switch packet-loss.....	8548
11.19.7 ac protect enable.....	8549
11.19.8 ac protect priority.....	8550
11.19.9 ac protect protect-ac.....	8551
11.19.10 ac protect restore disable.....	8552
11.19.11 backup-access.....	8553
11.19.12 display ac protect.....	8555
11.19.13 primary-access.....	8556
11.19.14 priority.....	8558
11.19.15 protect-ac.....	8559
11.20 WMI Commands.....	8560
11.20.1 Command Support.....	8560
11.20.2 ap log module.....	8560
11.20.3 collect-item (WMI profile view).....	8561
11.20.4 collect-location-data enable.....	8566
11.20.5 collect-location-data rssi-threshold.....	8566
11.20.6 display references wmi-server.....	8567
11.20.7 display wmi-server.....	8568
11.20.8 keepalive (WMI profile view).....	8575
11.20.9 max-packet-size (WMI profile view).....	8576
11.20.10 mdns-snooping enable.....	8577
11.20.11 pki realm (WMI profile view).....	8577
11.20.12 report-interval (WMI profile view).....	8578
11.20.13 server (WMI profile view).....	8579
11.20.14 server backup (WMI profile view).....	8581
11.20.15 wmi-server (AP system profile view).....	8582
11.20.16 wmi-server (WLAN view).....	8583
11.21 Configuration Commands for the Zero-Roaming Distributed Wi-Fi Solution.....	8584
11.21.1 display ap oru status.....	8584
11.21.2 distribute-mode enable.....	8587
11.21.3 oru reboot.....	8588
11.21.4 fastpass users.....	8589
12 Reliability Commands.....	8591
12.1 BFD Configuration Commands.....	8591
12.1.1 Command Support.....	8591
12.1.2 authentication-mode (BFD).....	8591
12.1.3 bfd.....	8593
12.1.4 bfd bind peer-ip.....	8594
12.1.5 bfd bind peer-ip default-ip.....	8598
12.1.6 bfd bind peer-ip source-ip auto.....	8601

12.1.7 bfd bind peer-ipv6.....	8603
12.1.8 bfd bind peer-ipv6 source-ipv6 auto.....	8607
12.1.9 bfd one-arm-echo.....	8610
12.1.10 bfd session-name.....	8612
12.1.11 bfd session nonexistent-config-check.....	8613
12.1.12 commit.....	8614
12.1.13 dampening timer-interval.....	8616
12.1.14 default-ip-address.....	8617
12.1.15 description (BFD session view).....	8619
12.1.16 detect-multiplier.....	8620
12.1.17 discriminator.....	8621
12.1.18 display bfd configuration.....	8622
12.1.19 display bfd interface.....	8632
12.1.20 display bfd session.....	8634
12.1.21 display bfd statistics.....	8646
12.1.22 display bfd statistics session.....	8649
12.1.23 display bfd ttl.....	8655
12.1.24 min-echo-rx-interval.....	8656
12.1.25 min-rx-interval.....	8658
12.1.26 min-tx-interval.....	8660
12.1.27 multi-hop.....	8661
12.1.28 oam-bind ingress bfd-session trigger if-down egress interface.....	8663
12.1.29 peer-ip ttl.....	8665
12.1.30 process-interface-status.....	8666
12.1.31 process-pst.....	8669
12.1.32 receiving-admindown trigger if-down.....	8670
12.1.33 reset bfd statistics.....	8671
12.1.34 session-damping disable.....	8672
12.1.35 shutdown (BFD session view).....	8674
12.1.36 snmp-agent bfd trap-interval.....	8675
12.1.37 tos-exp.....	8676
12.1.38 trigger if-down delay.....	8677
12.1.39 unlimited-negotiate.....	8678
12.1.40 wtr.....	8679
12.2 VRRP Configuration Commands.....	8680
12.2.1 Command Support.....	8680
12.2.2 admin-vrrp vrid.....	8680
12.2.3 admin-vrrp6 vrid.....	8682
12.2.4 arp learning passive enable.....	8683
12.2.5 clear admin-vrrp.....	8684
12.2.6 clear admin-vrrp6.....	8686
12.2.7 display vrrp.....	8687

12.2.8 display vrrp admin-vrrp.....	8692
12.2.9 display vrrp binding admin-vrrp.....	8693
12.2.10 display vrrp binding admin-vrrp member-vrrp.....	8695
12.2.11 display vrrp protocol-information.....	8697
12.2.12 display vrrp state-change interface vrid.....	8698
12.2.13 display vrrp statistics.....	8700
12.2.14 display vrrp track bfd gratuitous-arp information.....	8704
12.2.15 display vrrp6.....	8705
12.2.16 display vrrp6 admin-vrrp6.....	8709
12.2.17 display vrrp6 binding admin-vrrp6.....	8710
12.2.18 display vrrp6 binding admin-vrrp6 member-vrrp.....	8712
12.2.19 display vrrp6 state-change interface vrid.....	8714
12.2.20 display vrrp6 statistics.....	8716
12.2.21 reset vrrp statistics.....	8719
12.2.22 reset vrrp6 statistics.....	8721
12.2.23 set vrrp max-group-number.....	8722
12.2.24 vrrp advertise send-mode.....	8724
12.2.25 vrrp arp send-mode simple.....	8726
12.2.26 vrrp gratuitous-arp timeout.....	8728
12.2.27 vrrp gratuitous-arp timeout disable.....	8729
12.2.28 vrrp recover-delay.....	8730
12.2.29 vrrp smooth-switching timer.....	8731
12.2.30 vrrp timer-advertise learning enable.....	8733
12.2.31 vrrp track bfd gratuitous-arp send enable.....	8734
12.2.32 vrrp un-check ttl.....	8735
12.2.33 vrrp version.....	8736
12.2.34 vrrp version-3 send-packet-mode.....	8737
12.2.35 vrrp virtual-ip ping enable.....	8739
12.2.36 vrrp virtual-ip route-advertise disable.....	8740
12.2.37 vrrp vrid authentication-mode.....	8741
12.2.38 vrrp vrid backup-forward.....	8744
12.2.39 vrrp vrid preempt-mode disable.....	8746
12.2.40 vrrp vrid preempt-mode timer delay.....	8747
12.2.41 vrrp vrid priority.....	8749
12.2.42 vrrp vrid timer advertise.....	8750
12.2.43 vrrp vrid track admin-vrrp vrid.....	8752
12.2.44 vrrp vrid track bfd-session.....	8754
12.2.45 vrrp vrid track interface.....	8757
12.2.46 vrrp vrid track ip route.....	8760
12.2.47 vrrp vrid track nqa.....	8762
12.2.48 vrrp vrid version-3 send-packet-mode.....	8764
12.2.49 vrrp vrid virtual-ip.....	8766

12.2.50 vrrp6 nd send-mode simple.....	8768
12.2.51 vrrp6 un-check hop-limit.....	8769
12.2.52 vrrp6 vrid preempt-mode disable.....	8770
12.2.53 vrrp6 vrid preempt-mode timer delay.....	8772
12.2.54 vrrp6 vrid priority.....	8773
12.2.55 vrrp6 vrid timer advertise.....	8775
12.2.56 vrrp6 vrid track admin-vrrp6 vrid.....	8776
12.2.57 vrrp6 vrid track bfd-session.....	8778
12.2.58 vrrp6 vrid track interface.....	8781
12.2.59 vrrp6 vrid virtual-ip.....	8783
12.3 HSB Configuration Commands.....	8785
12.3.1 Command Support.....	8785
12.3.2 bind-service.....	8786
12.3.3 display hsb statistics hsb-group.....	8787
12.3.4 display hsb statistics hsb-service.....	8793
12.3.5 display hsb-group.....	8795
12.3.6 display hsb-service.....	8797
12.3.7 display hsb-resource map.....	8798
12.3.8 display hsb-service-type dhcp hsb-group.....	8799
12.3.9 hsb enable.....	8800
12.3.10 hsb-group.....	8801
12.3.11 hsb-resource map.....	8802
12.3.12 hsb-service.....	8803
12.3.13 hsb-service-type dhcp hsb-group.....	8804
12.3.14 key.....	8805
12.3.15 reset hsb statistics hsb-group.....	8807
12.3.16 reset hsb statistics hsb-service.....	8807
12.3.17 service-ip-port.....	8808
12.3.18 service-keep-alive detect.....	8810
12.3.19 track vrrp.....	8811
12.3.20 track vrrp6.....	8813
12.4 DLDAP Configuration Commands.....	8814
12.4.1 Command Support.....	8814
12.4.2 display dldap.....	8814
12.4.3 display dldap statistics.....	8819
12.4.4 dldap authentication-mode.....	8821
12.4.5 dldap compatible-mode enable.....	8824
12.4.6 dldap compatible-mode local-mac.....	8825
12.4.7 dldap delaydown-timer.....	8827
12.4.8 dldap enable.....	8828
12.4.9 dldap interval.....	8829
12.4.10 dldap reset.....	8831

12.4.11 dldp unidirectional-shutdown.....	8832
12.4.12 dldp work-mode.....	8834
12.4.13 reset dldp statistics.....	8835
12.5 Smart Link And Monitor Link Configuration Commands.....	8837
12.5.1 Command Support.....	8837
12.5.2 display monitor-link group.....	8837
12.5.3 display monitor-link protocol-parameter group.....	8839
12.5.4 display smart-link flush.....	8841
12.5.5 display smart-link group.....	8843
12.5.6 display smart-link protocol-parameter group.....	8846
12.5.7 flush send.....	8849
12.5.8 load-balance instance.....	8851
12.5.9 monitor-link group.....	8853
12.5.10 port (Monitor Link group view).....	8855
12.5.11 port (Smart Link group view).....	8857
12.5.12 protected-vlan reference-instance.....	8859
12.5.13 reset smart-link flush.....	8861
12.5.14 restore enable.....	8862
12.5.15 smart-link.....	8863
12.5.16 smart-link enable.....	8864
12.5.17 smart-link flush receive.....	8865
12.5.18 smart-link flush receive password.....	8867
12.5.19 smart-link hold-time.....	8869
12.5.20 smart-link group.....	8870
12.5.21 smart-link group uplink.....	8871
12.5.22 smart-link link-switch send-broadcast enable.....	8873
12.5.23 smart-link manual switch.....	8874
12.5.24 smart-link { vpls-notify vll-notify } enable.....	8875
12.5.25 timer recover-time.....	8876
12.5.26 timer wtr.....	8877
12.6 MAC Swap Loopback Configuration Commands.....	8879
12.6.1 Command Support.....	8879
12.6.2 display loopback swap-mac information.....	8879
12.6.3 loopback local swap-mac.....	8881
12.6.4 loopback remote swap-mac.....	8884
12.6.5 loopback swap-mac.....	8887
12.7 EFM Configuration Commands.....	8888
12.7.1 Command Support.....	8888
12.7.2 clear mgr inactive-configuration slot.....	8889
12.7.3 display efm.....	8890
12.7.4 display efm link-event local.....	8897
12.7.5 display efm session.....	8899

12.7.6 display test-packet result.....	8900
12.7.7 efm enable.....	8901
12.7.8 efm error-code notification enable.....	8903
12.7.9 efm error-code period.....	8904
12.7.10 efm error-code threshold.....	8905
12.7.11 efm error-frame notification enable.....	8907
12.7.12 efm error-frame period.....	8908
12.7.13 efm error-frame threshold.....	8909
12.7.14 efm error-frame-second notification enable.....	8911
12.7.15 efm error-frame-second period.....	8912
12.7.16 efm error-frame-second threshold.....	8913
12.7.17 efm holdup-timer.....	8915
12.7.18 efm loopback.....	8916
12.7.19 efm loopback ignore-request.....	8919
12.7.20 efm mode.....	8920
12.7.21 efm packet max-size.....	8922
12.7.22 efm src-mac.....	8923
12.7.23 efm timeout.....	8924
12.7.24 efm threshold-event trigger error-down.....	8926
12.7.25 efm trigger clear-arp vlan.....	8927
12.7.26 efm trigger error-down.....	8928
12.7.27 efm trigger if-down.....	8932
12.7.28 efm trigger mac-renew.....	8933
12.7.29 oam-bind efm interface efm interface.....	8934
12.7.30 oam-bind efm interface trigger if-down interface.....	8938
12.7.31 oam-bind ingress efm interface egress efm interface.....	8941
12.7.32 oam-bind ingress efm interface trigger if-down egress interface.....	8945
12.7.33 oam-bind ingress interface egress efm interface trigger if-down.....	8947
12.7.34 oam-bind interface efm interface trigger if-down.....	8950
12.7.35 oam-mgr.....	8953
12.7.36 test-packet start.....	8954
12.8 CFM Configuration Commands.....	8955
12.8.1 Command Support.....	8955
12.8.2 active time.....	8955
12.8.3 alarm finish time.....	8957
12.8.4 alarm occur time.....	8958
12.8.5 alarm rdi track-action disable.....	8959
12.8.6 alarm suppression track-action oam-mgr enable.....	8960
12.8.7 ccm-interval.....	8961
12.8.8 cfm default md.....	8963
12.8.9 cfm destination-mac.....	8964
12.8.10 cfm enable (system view).....	8965

12.8.11 cfm if-down trigger ccm-send-stop.....	8966
12.8.12 cfm md.....	8967
12.8.13 cfm mip.....	8970
12.8.14 cfm portid-tlv type.....	8971
12.8.15 cfm protocol.....	8972
12.8.16 cfm trigger if-down.....	8973
12.8.17 cfm trigger clear-arp vlan.....	8975
12.8.18 cfm trigger vlan mac-renew.....	8977
12.8.19 cfm version.....	8978
12.8.20 display cfm default md.....	8979
12.8.21 display cfm error-info.....	8980
12.8.22 display cfm ma.....	8982
12.8.23 display cfm md.....	8987
12.8.24 display cfm mep.....	8989
12.8.25 display cfm mip.....	8994
12.8.26 display cfm mp-info.....	8995
12.8.27 display cfm remote-mep.....	9000
12.8.28 display mip create-type.....	9005
12.8.29 display oam global configuration.....	9007
12.8.30 ma.....	9009
12.8.31 map.....	9011
12.8.32 mep mep-id.....	9012
12.8.33 mep alarm disable.....	9014
12.8.34 mep ccm-send enable.....	9015
12.8.35 mip create-type (MD view).....	9017
12.8.36 mip create-type (system view).....	9018
12.8.37 oam-bind cfm md ma efm interface.....	9020
12.8.38 oam-bind cfm md ma trigger if-down interface.....	9023
12.8.39 oam-bind ingress cfm md ma egress interface.....	9026
12.8.40 oam-bind ingress cfm md ma egress sep segment.....	9029
12.8.41 oam-bind ingress cfm md ma egress efm interface.....	9031
12.8.42 oam-bind ingress efm interface egress cfm md ma.....	9033
12.8.43 oam-bind ingress interface egress cfm md ma trigger if-down.....	9036
12.8.44 oam-bind interface cfm md ma trigger if-down.....	9040
12.8.45 oam-mgr.....	9043
12.8.46 packet-priority.....	9044
12.8.47 ping mac-8021ag.....	9045
12.8.48 remote-mep.....	9049
12.8.49 remote-mep ccm-receive enable.....	9050
12.8.50 senderid-tlv-type.....	9051
12.8.51 trace mac-8021ag.....	9052
12.8.52 vlan (default MD view).....	9057

12.9 Y.1731 Configuration Commands.....	9058
12.9.1 Command Support.....	9058
12.9.2 ais enable.....	9059
12.9.3 ais interval.....	9060
12.9.4 ais level.....	9061
12.9.5 ais link-status.....	9062
12.9.6 ais suppress-alarm.....	9064
12.9.7 ais vlan.....	9065
12.9.8 delay-measure one-way continual.....	9067
12.9.9 delay-measure one-way continual receive.....	9069
12.9.10 delay-measure one-way send.....	9071
12.9.11 delay-measure one-way receive.....	9073
12.9.12 delay-measure one-way threshold.....	9074
12.9.13 delay-measure two-way continual.....	9075
12.9.14 delay-measure two-way continual send test-id.....	9078
12.9.15 delay-measure two-way delay-threshold test-id.....	9079
12.9.16 delay-measure two-way send.....	9081
12.9.17 delay-measure two-way receive.....	9083
12.9.18 delay-measure two-way receive test-id.....	9084
12.9.19 delay-measure two-way send test-id.....	9086
12.9.20 delay-measure two-way threshold.....	9087
12.9.21 delay-measure two-way trigger if-down.....	9088
12.9.22 delay-measure two-way variation-threshold test-id.....	9090
12.9.23 display y1731 statistic-type.....	9092
12.9.24 display y1731 test-info.....	9102
12.9.25 loss-measure dual-ended continual.....	9107
12.9.26 loss-measure single-ended continual send.....	9109
12.9.27 loss-measure single-ended continual send test-id.....	9111
12.9.28 loss-measure single-ended receive.....	9112
12.9.29 loss-measure single-ended receive test-id.....	9113
12.9.30 loss-measure single-ended send.....	9114
12.9.31 loss-measure single-ended send test-id.....	9116
12.9.32 loss-measure single-ended-synthetic continual send.....	9117
12.9.33 loss-measure single-ended-synthetic local-ratio-threshold test-id.....	9119
12.9.34 loss-measure single-ended-synthetic receive.....	9121
12.9.35 loss-measure single-ended-synthetic remote-ratio-threshold test-id.....	9122
12.9.36 loss-measure single-ended-synthetic send.....	9124
12.9.37 loss-measure single-ended-synthetic trigger if-down.....	9126
12.9.38 ping mac multicast.....	9128
12.9.39 reset y1731 statistic-type.....	9130
12.9.40 test-id.....	9131
13 User Access and Authentication Commands.....	9134

13.1 AAA Configuration Commands.....	9134
13.1.1 Command Support.....	9134
13.1.2 aaa.....	9134
13.1.3 aaa abnormal-offline-record.....	9135
13.1.4 aaa offline-record.....	9136
13.1.5 aaa online-fail-record.....	9137
13.1.6 aaa-authen-bypass.....	9138
13.1.7 aaa-author-bypass.....	9139
13.1.8 aaa-author-cmd-bypass.....	9141
13.1.9 aaa-author session-timeout invalid-value enable.....	9142
13.1.10 aaa-quiet administrator except-list.....	9143
13.1.11 access-limit user-name max-num.....	9145
13.1.12 accounting dual-stack separate.....	9146
13.1.13 accounting interim-fail.....	9147
13.1.14 accounting realtime.....	9149
13.1.15 accounting start-fail.....	9151
13.1.16 accounting-mode.....	9152
13.1.17 accounting-scheme (AAA domain view).....	9154
13.1.18 accounting-scheme (AAA view).....	9155
13.1.19 access-user remote authen-fail.....	9157
13.1.20 administrator remote authen-fail.....	9158
13.1.21 admin-user privilege level.....	9160
13.1.22 assignment.....	9162
13.1.23 authentication-mode (authentication scheme view).....	9163
13.1.24 authentication-scheme (AAA domain view).....	9166
13.1.25 authentication-scheme (AAA view).....	9167
13.1.26 authentication-super.....	9169
13.1.27 authentication-type radius chap access-type admin.....	9170
13.1.28 authorization-cmd.....	9173
13.1.29 authorization-info check-fail policy.....	9174
13.1.30 authorization-mode.....	9175
13.1.31 authorization-modify mode.....	9177
13.1.32 authorization-scheme (AAA domain view).....	9179
13.1.33 authorization-scheme (AAA view).....	9180
13.1.34 cmd recording-scheme.....	9182
13.1.35 cut access-user.....	9183
13.1.36 display aaa.....	9186
13.1.37 display aaa configuration.....	9195
13.1.38 display aaa statistics offline-reason.....	9199
13.1.39 display aaa-quiet administrator except-list.....	9200
13.1.40 display access-user (all views).....	9201
13.1.41 display access-user user-name-table statistics.....	9212

13.1.42 display accounting-scheme.....	9214
13.1.43 display authentication-scheme.....	9217
13.1.44 display authorization-scheme.....	9220
13.1.45 display domain.....	9222
13.1.46 display local-user.....	9225
13.1.47 display local-user expire-time.....	9231
13.1.48 display local-aaa-user password policy.....	9233
13.1.49 display recording-scheme.....	9235
13.1.50 display remote-user authen-fail.....	9236
13.1.51 display security weak-password-dictionary.....	9238
13.1.52 display service-scheme.....	9239
13.1.53 display vlan pool.....	9242
13.1.54 dhcp update vlan assignment.....	9244
13.1.55 dhcp update vlan assignment interval.....	9246
13.1.56 dhcp update vlan assignment threshold.....	9247
13.1.57 dns (service scheme view).....	9249
13.1.58 domain (AAA view).....	9250
13.1.59 domain (system view).....	9252
13.1.60 domain-location.....	9253
13.1.61 domain-name-delimiter.....	9255
13.1.62 domainname-parse-direction.....	9256
13.1.63 hash mac-vlan lease.....	9258
13.1.64 idle-cut (service scheme view).....	9259
13.1.65 local-aaa-user wrong-password.....	9261
13.1.66 local-user.....	9262
13.1.67 local-user change-password.....	9272
13.1.68 local-aaa-user change-password verify.....	9273
13.1.69 local-user device-type.....	9274
13.1.70 local-user expire-date.....	9276
13.1.71 local-user ftp-privilege.....	9278
13.1.72 local-user password.....	9280
13.1.73 local-user password change-offline enable.....	9282
13.1.74 local-aaa-user password policy access-user.....	9283
13.1.75 local-aaa-user password policy administrator.....	9284
13.1.76 local-user service-type.....	9285
13.1.77 local-user time-range.....	9289
13.1.78 local-user user-type netmanager.....	9291
13.1.79 load security weak-password-dictionary.....	9293
13.1.80 navigator first-login enable.....	9294
13.1.81 outbound recording-scheme.....	9295
13.1.82 password alert before-expire.....	9297
13.1.83 password alert original.....	9298

13.1.84 password expire.....	9299
13.1.85 password history record number.....	9300
13.1.86 permit-domain.....	9302
13.1.87 priority (service scheme view).....	9303
13.1.88 recording-mode hwtacacs.....	9305
13.1.89 recording-scheme.....	9306
13.1.90 redirect-acl.....	9307
13.1.91 remote-user authen-fail unblock.....	9309
13.1.92 reset aaa.....	9310
13.1.93 reset aaa statistics offline-reason.....	9311
13.1.94 reset access-user statistics.....	9311
13.1.95 reset local-user password history record.....	9312
13.1.96 server no-response accounting.....	9313
13.1.97 server no-response authorization.....	9314
13.1.98 security-name enable.....	9315
13.1.99 security-name-delimiter.....	9316
13.1.100 service-scheme (aaa domain view).....	9318
13.1.101 service-scheme (AAA view).....	9319
13.1.102 state (AAA domain view).....	9320
13.1.103 statistic enable (AAA domain view).....	9322
13.1.104 system recording-scheme.....	9324
13.1.105 unload security weak-password-dictionary.....	9325
13.1.106 user-group (AAA domain view).....	9325
13.1.107 user-password complexity-check.....	9327
13.1.108 vlan block-time.....	9328
13.1.109 vlan pool.....	9329
13.1.110 vlan (VLAN pool view).....	9331
13.2 RADIUS Configuration Commands.....	9333
13.2.1 Command Support.....	9333
13.2.2 accounting-copy radius-server.....	9333
13.2.3 called-station-id mac-format.....	9334
13.2.4 called-station-id wlan-user-format.....	9336
13.2.5 calling-station-id mac-format.....	9338
13.2.6 display radius-attribute.....	9340
13.2.7 display radius-attribute check.....	9342
13.2.8 display radius-attribute disable.....	9344
13.2.9 display radius-attribute translate.....	9345
13.2.10 display radius-server accounting-stop-packet.....	9347
13.2.11 display radius-server authorization configuration.....	9349
13.2.12 display radius-server configuration.....	9352
13.2.13 display radius-server dead-interval dead-count detect-cycle.....	9358
13.2.14 display radius-server item.....	9359

13.2.15 display radius-server max-unresponsive-interval.....	9362
13.2.16 display radius-server session-manage configuration.....	9363
13.2.17 radius-attribute check.....	9364
13.2.18 radius-attribute cut hw-portal-url.....	9365
13.2.19 radius-server max-unresponsive-interval.....	9366
13.2.20 radius-attribute disable.....	9368
13.2.21 radius-attribute nas-ip.....	9369
13.2.22 radius-attribute nas-ipv6.....	9371
13.2.23 radius-attribute service-type with-authenonly-reauthen.....	9372
13.2.24 radius-attribute set.....	9373
13.2.25 radius-attribute translate.....	9376
13.2.26 radius-reject local.....	9380
13.2.27 radius-server (aaa domain view).....	9381
13.2.28 radius-server accounting.....	9382
13.2.29 radius-server accounting-stop-packet resend.....	9386
13.2.30 radius-server algorithm.....	9387
13.2.31 radius-server attribute message-authenticator access-request.....	9389
13.2.32 radius-server attribute translate.....	9390
13.2.33 radius-server authentication.....	9391
13.2.34 radius-server authorization.....	9396
13.2.35 radius-server authorization attribute-decode-sameastemplate.....	9399
13.2.36 radius-server authorization attribute-encode-sameastemplate.....	9400
13.2.37 radius-server authorization calling-station-id decode-mac-format.....	9402
13.2.38 radius-server authorization hw-ext-specific command bounce-port disable.....	9404
13.2.39 radius-server authorization hw-ext-specific command down-port disable.....	9406
13.2.40 radius-server authorization match-type.....	9407
13.2.41 radius-server authorization port.....	9409
13.2.42 radius-server authorization server-source.....	9410
13.2.43 radius-server dead-detect-condition by-server-ip.....	9411
13.2.44 radius-server dead-interval dead-count detect-cycle.....	9412
13.2.45 radius-server detect-server interval.....	9414
13.2.46 radius-server detect-server timeout.....	9415
13.2.47 radius-server detect-server up-server interval.....	9418
13.2.48 radius-server dead-time.....	9419
13.2.49 radius-server encapsulation ipv4 traffic-statistics enable.....	9420
13.2.50 radius-server format-attribute.....	9421
13.2.51 radius-server framed-ip-address no-user-ip enable.....	9425
13.2.52 radius-server hw-ap-info-format include-ap-ip.....	9426
13.2.53 radius-server hw-dhcp-option-format.....	9427
13.2.54 radius-server nas-identifier-format.....	9429
13.2.55 radius-server nas-port-format.....	9430
13.2.56 radius-server nas-port-id-format.....	9432

13.2.57 radius-server retransmit timeout.....	9434
13.2.58 radius-server session-manage.....	9435
13.2.59 radius-server session-manage server-source.....	9437
13.2.60 radius-server shared-key (RADIUS server template view).....	9439
13.2.61 radius-server shared-key (system view).....	9441
13.2.62 radius-server support chargeable-user-identity.....	9442
13.2.63 radius-server template.....	9444
13.2.64 radius-server testuser.....	9445
13.2.65 radius-server traffic-unit.....	9446
13.2.66 radius-server user-name domain-included.....	9447
13.2.67 reset radius-server accounting-stop-packet.....	9449
13.2.68 test-aaa.....	9450
13.3 HWTACACS Configuration Commands.....	9455
13.3.1 Command Support.....	9455
13.3.2 display hwtacacs-server accounting-stop-packet.....	9455
13.3.3 display hwtacacs-server template.....	9457
13.3.4 display hwtacacs-server template verbose.....	9461
13.3.5 hwtacacs enable.....	9469
13.3.6 hwtacacs-server.....	9470
13.3.7 hwtacacs-server accounting.....	9471
13.3.8 hwtacacs-server accounting-stop-packet resend.....	9474
13.3.9 hwtacacs-server authentication.....	9475
13.3.10 hwtacacs-server authentication user-name in-authentication-start.....	9478
13.3.11 hwtacacs-server authorization.....	9479
13.3.12 hwtacacs-server shared-key.....	9482
13.3.13 hwtacacs-server source-ip.....	9484
13.3.14 hwtacacs-server source-ipv6.....	9485
13.3.15 hwtacacs-server template.....	9486
13.3.16 hwtacacs-server timer quiet.....	9488
13.3.17 hwtacacs-server timer response-timeout.....	9489
13.3.18 hwtacacs-server traffic-unit.....	9490
13.3.19 hwtacacs-server user-name domain-included.....	9491
13.3.20 hwtacacs-user change-password hwtacacs-server.....	9493
13.3.21 reset hwtacacs-server accounting-stop-packet.....	9494
13.3.22 reset hwtacacs-server statistics.....	9495
13.4 HACA Configuration Commands.....	9496
13.4.1 Command Support.....	9496
13.4.2 display haca-server accounting-stop-packet all.....	9496
13.4.3 display haca-server configuration.....	9497
13.4.4 display haca-server statistics.....	9502
13.4.5 haca enable.....	9509
13.4.6 haca-server (AAA domain view).....	9510

13.4.7 haca-server accounting-stop-packet resend.....	9511
13.4.8 haca-server server-address.....	9512
13.4.9 haca-server server-address dynamic.....	9514
13.4.10 haca-server source-ip.....	9515
13.4.11 haca-server template.....	9516
13.4.12 haca-server timer down-delay.....	9517
13.4.13 haca-server timer heart-beat.....	9518
13.4.14 haca-server timer reconnection.....	9519
13.4.15 haca-server timer register-sync.....	9520
13.4.16 haca-server timer response-timeout.....	9521
13.4.17 haca-server timer user-syn.....	9522
13.4.18 haca-server user-name.....	9523
13.4.19 reset haca-server statistics.....	9525
13.4.20 reset haca-server accounting-stop-packet all.....	9526
13.5 NAC Configuration Commands (Unified Mode).....	9527
13.5.1 Command Support.....	9527
13.5.2 access-context profile enable.....	9527
13.5.3 access-context profile name.....	9529
13.5.4 access-author policy global.....	9530
13.5.5 access-author policy name.....	9531
13.5.6 access-domain.....	9533
13.5.7 access-user arp-detect.....	9535
13.5.8 authentication arp-reply trigger.....	9537
13.5.9 access-user arp-detect default ip-address.....	9538
13.5.10 access-user dot1x-identity speed-limit.....	9540
13.5.11 access-user arp-detect delay.....	9541
13.5.12 access-user arp-detect fallback.....	9542
13.5.13 access-user car-mode.....	9544
13.5.14 access-user https speed-limit.....	9545
13.5.15 access-user portal speed-limit.....	9546
13.5.16 access-user syslog-restrain enable.....	9547
13.5.17 access-user syslog-restrain period.....	9548
13.5.18 acl authorization statistics enable.....	9549
13.5.19 acl-id (service scheme view).....	9550
13.5.20 authentication handshake.....	9552
13.5.21 authentication control-direction.....	9554
13.5.22 authentication device-type voice authorize.....	9556
13.5.23 authentication device-type iconnect authorize.....	9558
13.5.24 authentication dot1x-mac-bypass.....	9559
13.5.25 authentication drop dhcp-packet user-no-online enable.....	9560
13.5.26 authentication event action authorize.....	9562
13.5.27 authentication event authen-server-down action close re-authen.....	9566

13.5.28 authentication event authen-server-up action re-authen.....	9567
13.5.29 authentication event client-no-response action authorize.....	9568
13.5.30 authentication event portal-server-down action authorize.....	9570
13.5.31 authentication event portal-server-up action re-authen.....	9571
13.5.32 authentication https-redirect enable.....	9573
13.5.33 authentication ip-address in-accounting-start.....	9574
13.5.34 authentication ipv4-address in-accounting-start mandatory.....	9575
13.5.35 authentication ip-conflict-check enable.....	9576
13.5.36 authentication ipv6-control enable.....	9578
13.5.37 authentication mode.....	9584
13.5.38 authentication mac-authen-first force.....	9587
13.5.39 authentication mac-move enable.....	9588
13.5.40 authentication mac-move detect enable.....	9591
13.5.41 authentication mac-move detect retry-interval retry-time.....	9592
13.5.42 authentication mac-move quiet-log enable.....	9593
13.5.43 authentication mac-move quiet-times quiet-period.....	9594
13.5.44 authentication mac-move quiet-user-alarm enable.....	9595
13.5.45 authentication mac-move quiet-user-alarm percentage.....	9596
13.5.46 authentication no-ip-check.....	9598
13.5.47 authentication no-replace dot1x.....	9599
13.5.48 authentication order mac dot1x.....	9600
13.5.49 authentication pre-authen-access enable.....	9601
13.5.50 authentication port-vlan-modify user-online.....	9603
13.5.51 authentication { roam-accounting update-info-accounting update-ip-accounting } * enable.....	9604
13.5.52 authentication roam pre-authen mac-authen enable.....	9606
13.5.53 authentication redirect-acl original-url enable.....	9607
13.5.54 authentication single-access.....	9608
13.5.55 authentication single-stack-control enable.....	9609
13.5.56 authentication speed-limit auto.....	9610
13.5.57 authentication termination-action reauthenticate.....	9611
13.5.58 authentication timer handshake-period.....	9612
13.5.59 authentication timer authen-fail-aging.....	9614
13.5.60 authentication timer authorize-keep-aging.....	9615
13.5.61 authentication timer pre-authen-aging.....	9616
13.5.62 authentication timer re-authen.....	9618
13.5.63 authentication traffic-control strict.....	9620
13.5.64 authentication trigger-condition (802.1X authentication).....	9621
13.5.65 authentication trigger-condition (MAC address authentication).....	9623
13.5.66 authentication trigger-condition dhcp dhcp-option.....	9626
13.5.67 authentication unified-mode.....	9627
13.5.68 authentication user-alarm percentage.....	9628
13.5.69 authentication-profile (Interface view or VAP profile view).....	9630

13.5.70 authentication-profile (system view).....	9632
13.5.71 band-width share-mode.....	9634
13.5.72 capwap fragment.....	9635
13.5.73 capwap unknown-unicast.....	9637
13.5.74 cut access-user ucl-group.....	9638
13.5.75 device-type.....	9639
13.5.76 device-profile.....	9640
13.5.77 device-sensor dhcp option.....	9642
13.5.78 device-sensor lldp tlv.....	9643
13.5.79 device-sensor cdp tlv.....	9645
13.5.80 display aaa statistics access-type-authenreq.....	9646
13.5.81 display access-context profile.....	9647
13.5.82 display access-author policy.....	9649
13.5.83 display access-user.....	9650
13.5.84 display access-user dot1x-identity statistics.....	9655
13.5.85 display access-user https statistics.....	9656
13.5.86 display access-user portal statistics.....	9657
13.5.87 display access-user roam-table.....	9658
13.5.88 display access-user-num.....	9660
13.5.89 display ap port-auth-state.....	9661
13.5.90 display authentication mac-move configuration.....	9663
13.5.91 display authentication mac-move quiet-user.....	9665
13.5.92 display authentication interface.....	9667
13.5.93 display authentication mode.....	9668
13.5.94 display authentication user-alarm configuration.....	9669
13.5.95 display authentication-profile configuration.....	9670
13.5.96 display device-profile.....	9682
13.5.97 display dot1x.....	9684
13.5.98 display dot1x-access-profile configuration.....	9692
13.5.99 display dot1x-client-profile configuration.....	9697
13.5.100 display dot1x-client statistics.....	9699
13.5.101 display dot1x-client status.....	9701
13.5.102 display dot1x quiet-user.....	9703
13.5.103 display dns snooping interface enable-list.....	9704
13.5.104 display dns snooping dn-ip-cache.....	9705
13.5.105 display dns snooping dn-rule-list.....	9706
13.5.106 display free-rule.....	9707
13.5.107 display free-rule-template configuration.....	9708
13.5.108 display mac-address authen.....	9710
13.5.109 display mac-address pre-authen.....	9711
13.5.110 display mac-access-profile configuration.....	9713
13.5.111 display mac-authen.....	9719

13.5.112 display mac-authen quiet-user.....	9725
13.5.113 display portal.....	9726
13.5.114 display portal https-redirect blacklist.....	9731
13.5.115 display portal https-redirect whitelist.....	9732
13.5.116 display portal-access-profile configuration.....	9733
13.5.117 display portal quiet-user.....	9736
13.5.118 display portal url-encode configuration.....	9738
13.5.119 display portal user-logout.....	9739
13.5.120 display portal-server state.....	9740
13.5.121 display server-detect state.....	9742
13.5.122 display static-user.....	9744
13.5.123 display ucl-group all.....	9747
13.5.124 display ucl-group ip domain.....	9748
13.5.125 display url-template.....	9752
13.5.126 display web-auth-server configuration.....	9755
13.5.127 display webmng configuration.....	9763
13.5.128 domain mac-authen force.....	9765
13.5.129 dot1x abnormal-track cache-record-num.....	9767
13.5.130 dot1x authentication-method.....	9768
13.5.131 dot1x authentication-reject response eap-success.....	9770
13.5.132 dot1x eap-notify-packet.....	9771
13.5.133 dot1x-client-profile (AP wired port profile view).....	9772
13.5.134 dot1x-client-profile (interface view).....	9773
13.5.135 dot1x-client-profile (system view).....	9775
13.5.136 dot1x mc-trigger.....	9776
13.5.137 dot1x mc-trigger port-up-send enable.....	9777
13.5.138 dot1x no-response authorize authen-server-down.....	9778
13.5.139 dot1x port-control.....	9779
13.5.140 dot1x quiet-period.....	9781
13.5.141 dot1x quiet-times.....	9782
13.5.142 dot1x reauthenticate mac-address.....	9783
13.5.143 dot1x reauthenticate.....	9784
13.5.144 dot1x receive-packet vlan-ignore.....	9785
13.5.145 dot1x retry.....	9786
13.5.146 dot1x send-packet untagged.....	9788
13.5.147 dot1x send-packet vlan.....	9789
13.5.148 dot1x timer.....	9790
13.5.149 dot1x timer mac-bypass-delay.....	9792
13.5.150 dot1x timer quiet-period.....	9793
13.5.151 dot1x trigger dhcp-binding.....	9794
13.5.152 dot1x timer tx-period.....	9796
13.5.153 dot1x unicast-trigger.....	9797

13.5.154 dot1x url.....	9799
13.5.155 dot1x-access-profile (authentication profile view).....	9800
13.5.156 dot1x-access-profile (system view).....	9801
13.5.157 dns snooping enable.....	9803
13.5.158 dns snooping server-ip-address.....	9804
13.5.159 dns snooping ttl delay-time.....	9805
13.5.160 eap-method.....	9806
13.5.161 enable (terminal type identification profile view).....	9807
13.5.162 free-rule.....	9808
13.5.163 free-rule-template (authentication profile view).....	9814
13.5.164 free-rule-template (system view).....	9815
13.5.165 http parse user-agent enable.....	9816
13.5.166 http get-method enable.....	9818
13.5.167 http-method post.....	9819
13.5.168 force-push.....	9824
13.5.169 if-match vlan-id.....	9826
13.5.170 if-match.....	9827
13.5.171 ip-static-user enable.....	9829
13.5.172 link-down offline delay.....	9831
13.5.173 lldp sensor-ap authentication disable.....	9832
13.5.174 load-file (WLAN view).....	9834
13.5.175 mac-access-profile (authentication profile view).....	9835
13.5.176 mac-access-profile (system view).....	9836
13.5.177 mac-authen authentication-method.....	9838
13.5.178 mac-authen offline dhcp-release.....	9839
13.5.179 mac-authen permit mac-address.....	9840
13.5.180 mac-authen quiet-times.....	9841
13.5.181 mac-authen reauthenticate mac-address.....	9843
13.5.182 mac-authen reauthenticate.....	9844
13.5.183 mac-authen reauthenticate dhcp-renew.....	9845
13.5.184 mac-authen timer quiet-period.....	9846
13.5.185 mac-authen timer reauthenticate-period.....	9848
13.5.186 mac-authen trigger dhcp-binding.....	9849
13.5.187 mac-authen username.....	9851
13.5.188 match access-context-profile action.....	9856
13.5.189 match access-context-profile action access-domain.....	9859
13.5.190 mdns snooping enable.....	9861
13.5.191 parameter.....	9861
13.5.192 pki key-pair-with-cert.....	9863
13.5.193 pki-realm.....	9865
13.5.194 port (Portal server template view).....	9866
13.5.195 portal auth-network.....	9867

13.5.196 portal captive-adaptive enable.....	9869
13.5.197 portal captive-bypass enable.....	9871
13.5.198 portal https-redirect blacklist.....	9872
13.5.199 portal https-redirect blacklist aging-time.....	9874
13.5.200 portal https-redirect blacklist packet-rate.....	9875
13.5.201 portal https-redirect blacklist retry-times interval.....	9877
13.5.202 portal https-redirect tls1.1 enable.....	9878
13.5.203 portal https-redirect whitelist.....	9880
13.5.204 portal https-redirect wired enable.....	9882
13.5.205 portal logout different-server enable.....	9883
13.5.206 portal logout resend timeout.....	9884
13.5.207 portal max-user.....	9885
13.5.208 portal pass dns enable.....	9886
13.5.209 portal quiet-period.....	9887
13.5.210 portal quiet-times.....	9888
13.5.211 portal redirect-302 enable.....	9889
13.5.212 portal redirect js enable.....	9890
13.5.213 portal redirect-http-port.....	9891
13.5.214 portal timer quiet-period.....	9893
13.5.215 portal timer offline-detect.....	9894
13.5.216 portal url-encode enable.....	9895
13.5.217 portal user-alarm percentage.....	9896
13.5.218 portal web-authen-server.....	9898
13.5.219 portal web-authen-server server-source.....	9899
13.5.220 portal-access-profile (authentication profile view).....	9901
13.5.221 portal-access-profile (system view).....	9902
13.5.222 protocol (Portal server template view).....	9904
13.5.223 qos-profile (service scheme view).....	9905
13.5.224 reset aaa statistics access-type-authenreq.....	9906
13.5.225 reset access-user dot1x-identity statistics.....	9907
13.5.226 reset access-user https statistics.....	9908
13.5.227 reset access-user portal statistics.....	9909
13.5.228 reset access-user traffic-statistics.....	9909
13.5.229 reset dot1x statistics.....	9910
13.5.230 reset dot1x-client statistics.....	9912
13.5.231 reset mac-authen statistics.....	9913
13.5.232 rule (terminal type identification profile view).....	9914
13.5.233 remote-access-user manage.....	9916
13.5.234 remote-access-user manage server-source.....	9918
13.5.235 server-detect.....	9920
13.5.236 server-detect type.....	9922
13.5.237 server-ip (Portal server template view).....	9924

13.5.238 server-source (Portal server template view).....	9926
13.5.239 shared-key (Portal server template view).....	9927
13.5.240 source-ip (Portal server template view).....	9928
13.5.241 source-interface (Portal server template view).....	9929
13.5.242 static-user.....	9931
13.5.243 static-user not-update-ip enable.....	9934
13.5.244 static-user password.....	9935
13.5.245 static-user username format-include.....	9937
13.5.246 static-user username macaddress format.....	9938
13.5.247 traffic-filter acl.....	9940
13.5.248 traffic-redirect acl.....	9942
13.5.249 ucl-group (service scheme view).....	9944
13.5.250 ucl-group domain.....	9945
13.5.251 ucl-group ip.....	9947
13.5.252 ucl-group (system view).....	9949
13.5.253 user-queue single-user-mode.....	9951
13.5.254 url (URL template view).....	9953
13.5.255 url (Portal server template view).....	9954
13.5.256 url-parameter mac-address format.....	9955
13.5.257 url-parameter.....	9956
13.5.258 url-parameter set.....	9962
13.5.259 url-template name.....	9963
13.5.260 url-template (Portal server template view).....	9964
13.5.261 user-sync.....	9965
13.5.262 user-vlan (service scheme view).....	9967
13.5.263 voice-vlan (service scheme view).....	9968
13.5.264 vpn-instance (Portal server template view).....	9969
13.5.265 web-auth-server listening-port.....	9971
13.5.266 web-auth-server (Portal access profile view).....	9972
13.5.267 web-auth-server reply-message.....	9974
13.5.268 web-auth-server (system view).....	9975
13.5.269 web-auth-server server-source (system view).....	9977
13.5.270 web-auth-server version.....	9978
13.5.271 web-redirection disable (Portal server template view).....	9979
13.6 NAC Configuration Commands (Common Mode).....	9980
13.6.1 Command Support.....	9980
13.6.2 access-user arp-detect.....	9980
13.6.3 access-user arp-detect default ip-address.....	9982
13.6.4 access-user arp-detect delay.....	9983
13.6.5 access-user arp-detect fallback.....	9984
13.6.6 access-user dot1x-identity speed-limit.....	9986
13.6.7 access-user syslog-restrain enable.....	9987

13.6.8 access-user syslog-restrain period.....	9988
13.6.9 acl authorization statistics enable.....	9989
13.6.10 acl-id (user group view).....	9990
13.6.11 authentication critical eapol-success.....	9991
13.6.12 authentication critical-vlan.....	9993
13.6.13 authentication device-type voice authorize.....	9995
13.6.14 authentication event.....	9996
13.6.15 authentication event response-fail.....	10000
13.6.16 authentication event session-timeout.....	10001
13.6.17 authentication guest-vlan.....	10003
13.6.18 authentication mac-move enable.....	10006
13.6.19 authentication mac-move detect enable.....	10008
13.6.20 authentication mac-move detect retry-interval retry-time.....	10009
13.6.21 authentication mac-move quiet-log enable.....	10010
13.6.22 authentication mac-move quiet-times quiet-period.....	10011
13.6.23 authentication mac-move quiet-user-alarm enable.....	10012
13.6.24 authentication mac-move quiet-user-alarm percentage.....	10013
13.6.25 authentication max-reauth-req.....	10014
13.6.26 authentication open.....	10016
13.6.27 authentication port-vlan-modify user-online.....	10017
13.6.28 authentication restrict-vlan.....	10018
13.6.29 authentication speed-limit auto.....	10020
13.6.30 authentication timer re-authen.....	10021
13.6.31 authentication user-alarm percentage.....	10023
13.6.32 band-width share-mode.....	10024
13.6.33 car (user group view).....	10025
13.6.34 cut access-user.....	10027
13.6.35 display aaa statistics access-type-authenreq.....	10028
13.6.36 display authentication mode.....	10029
13.6.37 display access-user.....	10030
13.6.38 display access-user dot1x-identity statistics.....	10035
13.6.39 display authentication mac-move configuration.....	10036
13.6.40 display authentication mac-move quiet-user.....	10039
13.6.41 display authentication user-alarm configuration.....	10040
13.6.42 display dot1x.....	10041
13.6.43 display dot1x quiet-user.....	10050
13.6.44 display mac-address authen.....	10051
13.6.45 display mac-address pre-authen.....	10053
13.6.46 display mac-authen.....	10054
13.6.47 display mac-authen quiet-user.....	10060
13.6.48 display port connection-type access all.....	10062
13.6.49 display portal.....	10063

13.6.50 display portal free-rule.....	10066
13.6.51 display portal https-redirect blacklist.....	10067
13.6.52 display portal https-redirect whitelist.....	10069
13.6.53 display portal quiet-user.....	10070
13.6.54 display portal user-logout.....	10072
13.6.55 display portal url-encode configuration.....	10074
13.6.56 display server-detect state.....	10075
13.6.57 display static-user.....	10076
13.6.58 display url-template.....	10079
13.6.59 display user-group.....	10081
13.6.60 display web-auth-server configuration.....	10083
13.6.61 device-sensor dhcp option.....	10091
13.6.62 device-sensor lldp tlv.....	10092
13.6.63 dot1x authentication-method.....	10094
13.6.64 dot1x dhcp-trigger.....	10096
13.6.65 dot1x domain.....	10097
13.6.66 dot1x eap-notify-packet.....	10098
13.6.67 dot1x enable.....	10099
13.6.68 dot1x free-ip.....	10102
13.6.69 dot1x mac-bypass.....	10103
13.6.70 dot1x mac-bypass access-port.....	10105
13.6.71 dot1x mac-bypass mac-auth-first.....	10106
13.6.72 dot1x max-user.....	10108
13.6.73 dot1x mc-trigger.....	10110
13.6.74 dot1x mc-trigger port-up-send enable.....	10111
13.6.75 dot1x port-control.....	10112
13.6.76 dot1x port-method.....	10115
13.6.77 dot1x quiet-period.....	10117
13.6.78 dot1x quiet-times.....	10118
13.6.79 dot1x reauthenticate.....	10119
13.6.80 dot1x reauthenticate mac-address.....	10121
13.6.81 dot1x retry.....	10122
13.6.82 dot1x timer.....	10124
13.6.83 dot1x timer arp-detect.....	10127
13.6.84 dot1x timer reauthenticate-period.....	10128
13.6.85 dot1x trigger dhcp-binding.....	10130
13.6.86 dot1x unicast-trigger.....	10131
13.6.87 dot1x url.....	10133
13.6.88 force-push.....	10134
13.6.89 http get-method enable.....	10136
13.6.90 http-method post.....	10137
13.6.91 link-down offline delay.....	10142

13.6.92 mac-authen.....	10143
13.6.93 mac-authen trigger.....	10146
13.6.94 mac-authen dhcp-trigger dhcp-option.....	10148
13.6.95 mac-authen domain.....	10150
13.6.96 mac-authen max-user.....	10153
13.6.97 mac-authen offline dhcp-release.....	10155
13.6.98 mac-authen permit mac-address.....	10157
13.6.99 mac-authen quiet-times.....	10158
13.6.100 mac-authen reauthenticate.....	10159
13.6.101 mac-authen reauthenticate dhcp-renew.....	10161
13.6.102 mac-authen reauthenticate mac-address.....	10163
13.6.103 mac-authen timer.....	10164
13.6.104 mac-authen timer reauthenticate-period.....	10166
13.6.105 mac-authen username.....	10167
13.6.106 parameter.....	10171
13.6.107 port connection-type access.....	10173
13.6.108 port (Portal server template view).....	10175
13.6.109 portal auth-network.....	10176
13.6.110 portal domain.....	10178
13.6.111 portal free-rule.....	10179
13.6.112 portal https-redirect blacklist.....	10183
13.6.113 portal https-redirect blacklist aging-time.....	10185
13.6.114 portal https-redirect blacklist packet-rate.....	10186
13.6.115 portal https-redirect blacklist retry-times interval.....	10187
13.6.116 portal https-redirect whitelist.....	10189
13.6.117 portal logout different-server enable.....	10191
13.6.118 portal logout resend timeout.....	10192
13.6.119 portal max-user.....	10193
13.6.120 portal quiet-period.....	10194
13.6.121 portal quiet-times.....	10195
13.6.122 portal redirect js enable.....	10196
13.6.123 portal timer offline-detect.....	10197
13.6.124 portal timer quiet-period.....	10198
13.6.125 portal url-encode enable.....	10199
13.6.126 portal user-alarm percentage.....	10200
13.6.127 portal web-authen-server.....	10202
13.6.128 protocol (Portal server template view).....	10203
13.6.129 remark.....	10204
13.6.130 reset aaa statistics access-type-authenreq.....	10205
13.6.131 reset access-user dot1x-identity statistics.....	10206
13.6.132 reset access-user traffic-statistics.....	10207
13.6.133 reset dot1x statistics.....	10208

13.6.134 reset mac-authen statistics.....	10210
13.6.135 server-detect.....	10211
13.6.136 server-detect type.....	10213
13.6.137 server-ip (Portal server template view).....	10214
13.6.138 shared-key (Portal server template view).....	10216
13.6.139 source-ip (Portal server template view).....	10217
13.6.140 static-user.....	10218
13.6.141 static-user not-update-ip enable.....	10220
13.6.142 static-user password.....	10221
13.6.143 static-user username format-include.....	10223
13.6.144 static-user username macaddress format.....	10224
13.6.145 url (Portal server template view).....	10226
13.6.146 url (URL template view).....	10227
13.6.147 url-parameter.....	10229
13.6.148 url-parameter mac-address format.....	10231
13.6.149 url-template (Portal server template view).....	10232
13.6.150 url-template name.....	10233
13.6.151 user-group.....	10234
13.6.152 user-group enable.....	10236
13.6.153 user-sync.....	10237
13.6.154 user-vlan (user group view).....	10238
13.6.155 vpn-instance (Portal server template view).....	10239
13.6.156 web-auth-server version.....	10241
13.6.157 web-auth-server (interface view).....	10242
13.6.158 web-auth-server listening-port.....	10244
13.6.159 web-auth-server reply-message.....	10245
13.6.160 web-auth-server (system view).....	10246
13.6.161 web-redirection disable (Portal server template view).....	10247
13.7 Policy Association Configuration Commands.....	10248
13.7.1 Command Support.....	10248
13.7.2 access-user arp-detect control-point mac-ip enable.....	10249
13.7.3 as access controller ip-address.....	10250
13.7.4 as access interface.....	10251
13.7.5 authentication access-point.....	10252
13.7.6 authentication access-point max-user.....	10253
13.7.7 authentication associate alarm-restrain enable.....	10255
13.7.8 authentication associate alarm-restrain period.....	10256
13.7.9 authentication control-point.....	10257
13.7.10 authentication open ucl-policy enable.....	10258
13.7.11 authentication speed-limit.....	10259
13.7.12 control-down offline delay (authentication access device).....	10261
13.7.13 control-down offline delay (authentication control device).....	10262

13.7.14 display access-user as-name.....	10264
13.7.15 display access-user arp-detect control-point mac-ip.....	10265
13.7.16 display associate-user.....	10266
13.7.17 display associate-user statistics.....	10269
13.7.18 display authentication associate.....	10270
13.7.19 display authentication associate alarm-restrain-table.....	10272
13.7.20 local-authorize.....	10273
13.7.21 remote-authorize.....	10276
13.7.22 user-detect.....	10277
13.7.23 user-sync (authentication access device).....	10279
13.7.24 user-sync (authentication control device).....	10280
13.8 Kerberos Snooping Configuration Commands.....	10281
13.8.1 Command Support.....	10281
13.8.2 display kerberos-snooping-profile.....	10282
13.8.3 display access-user access-type kerberos-snooping.....	10283
13.8.4 kerberos-snooping-profile (authentication profile view).....	10284
13.8.5 kerberos-snooping-profile (system view).....	10286
13.8.6 port (Kerberos snooping profile view).....	10287
13.8.7 server-ip (Kerberos snooping profile view).....	10288
14 Security Commands.....	10290
14.1 ACL Configuration Commands.....	10291
14.1.1 Command Support.....	10291
14.1.2 acl ip-pool.....	10291
14.1.3 acl ipv6 ip-pool.....	10293
14.1.4 acl ipv6 name.....	10294
14.1.5 acl ipv6 (system view).....	10297
14.1.6 acl name.....	10299
14.1.7 acl (system view).....	10302
14.1.8 acl threshold-alarm.....	10305
14.1.9 assign resource-template acl-mode { enhanced-acl nac normal }.....	10307
14.1.10 description.....	10309
14.1.11 display acl.....	10310
14.1.12 display acl ip-pool.....	10312
14.1.13 display acl ipv6 ip-pool.....	10314
14.1.14 display acl ipv6.....	10316
14.1.15 display acl resource.....	10318
14.1.16 display time-range.....	10325
14.1.17 ip address (ACL IP address pool view).....	10327
14.1.18 ipv6 address (ACL IPv6 address pool view).....	10329
14.1.19 reset acl counter.....	10331
14.1.20 reset acl ipv6 counter.....	10333
14.1.21 rule (advanced ACL view).....	10334

14.1.22 rule (advanced ACL6 view).....	10352
14.1.23 rule (basic ACL view).....	10371
14.1.24 rule (basic ACL6 view).....	10375
14.1.25 rule (layer 2 ACL view).....	10381
14.1.26 rule (user-defined ACL view).....	10387
14.1.27 rule (user ACL view).....	10396
14.1.28 rule (user ACL6 view).....	10407
14.1.29 rule description.....	10418
14.1.30 step.....	10419
14.1.31 time-range.....	10420
14.2 Local Attack Defense Configuration Commands.....	10424
14.2.1 Command Support.....	10424
14.2.2 auto-defend attack-packet sample.....	10425
14.2.3 auto-defend enable.....	10426
14.2.4 auto-defend action.....	10427
14.2.5 auto-defend alarm enable.....	10429
14.2.6 auto-defend protocol.....	10430
14.2.7 auto-defend threshold.....	10433
14.2.8 auto-defend trace-type.....	10434
14.2.9 auto-defend whitelist.....	10436
14.2.10 auto-port-defend aging-time.....	10438
14.2.11 auto-port-defend alarm enable.....	10440
14.2.12 auto-port-defend enable.....	10441
14.2.13 auto-port-defend protocol.....	10442
14.2.14 auto-port-defend protocol threshold.....	10444
14.2.15 auto-port-defend sample.....	10447
14.2.16 auto-port-defend whitelist.....	10449
14.2.17 blacklist.....	10451
14.2.18 car (attack defense policy view).....	10453
14.2.19 cpu-defend application-apperceive enable.....	10457
14.2.20 cpu-defend dynamic-adjust enable.....	10459
14.2.21 cpu-defend dynamic-car enable.....	10462
14.2.22 cpu-defend host-car.....	10464
14.2.23 cpu-defend host-car drop-packet cir.....	10465
14.2.24 cpu-defend host-car drop-packet monitor disable.....	10467
14.2.25 cpu-defend host-car enable.....	10468
14.2.26 cpu-defend host-car pps.....	10469
14.2.27 cpu-defend policy.....	10471
14.2.28 cpu-defend-policy.....	10472
14.2.29 cpu-defend trap drop-packet.....	10473
14.2.30 deny.....	10474
14.2.31 description (attack defense policy view).....	10476

14.2.32 display auto-defend attack-source.....	10477
14.2.33 display auto-defend configuration.....	10481
14.2.34 display auto-defend whitelist.....	10484
14.2.35 display auto-port-defend attack-source.....	10485
14.2.36 display auto-port-defend configuration.....	10487
14.2.37 display auto-port-defend statistics.....	10490
14.2.38 display auto-port-defend whitelist.....	10492
14.2.39 display cpu-defend applied.....	10493
14.2.40 display cpu-defend configuration.....	10495
14.2.41 display cpu-defend dynamic-adjust history-record.....	10500
14.2.42 display cpu-defend dynamic-car history-record.....	10503
14.2.43 display cpu-defend host-car statistics.....	10505
14.2.44 display cpu-defend policy.....	10506
14.2.45 display cpu-defend port-type.....	10509
14.2.46 display cpu-defend rate.....	10510
14.2.47 display cpu-defend statistics.....	10511
14.2.48 host-car disable.....	10515
14.2.49 linkup-car.....	10516
14.2.50 port type.....	10521
14.2.51 port-type.....	10523
14.2.52 reset auto-defend attack-source.....	10525
14.2.53 reset auto-defend attack-source trace-type.....	10526
14.2.54 reset auto-port-defend statistics.....	10528
14.2.55 reset cpu-defend dynamic-car history-record.....	10529
14.2.56 reset cpu-defend host-car statistics.....	10530
14.2.57 reset cpu-defend statistics.....	10531
14.2.58 user-defined-flow.....	10533
14.2.59 whitelist.....	10534
14.3 MFF Configuration Commands.....	10535
14.3.1 Command Support.....	10536
14.3.2 display mac-forced-forwarding.....	10536
14.3.3 mac-forced-forwarding arp-trigger.....	10538
14.3.4 mac-forced-forwarding dumb-terminal-compatible.....	10539
14.3.5 mac-forced-forwarding enable.....	10540
14.3.6 mac-forced-forwarding gateway-detect.....	10541
14.3.7 mac-forced-forwarding igmp-query discard.....	10543
14.3.8 mac-forced-forwarding ipv6-isolate.....	10544
14.3.9 mac-forced-forwarding network-port.....	10545
14.3.10 mac-forced-forwarding network-port-arp-trigger.....	10546
14.3.11 mac-forced-forwarding server.....	10547
14.3.12 mac-forced-forwarding static-gateway.....	10548
14.3.13 mac-forced-forwarding user-detect transparent.....	10550

14.4 Attack Defense Configuration Commands.....	10551
14.4.1 Command Support.....	10551
14.4.2 anti-attack abnormal enable.....	10551
14.4.3 anti-attack enable.....	10552
14.4.4 anti-attack fragment enable.....	10553
14.4.5 anti-attack fragment car.....	10554
14.4.6 anti-attack icmp-flood enable.....	10555
14.4.7 anti-attack icmp-flood car.....	10556
14.4.8 anti-attack tcp-syn enable.....	10558
14.4.9 anti-attack tcp-syn car.....	10559
14.4.10 anti-attack udp-flood enable.....	10560
14.4.11 display anti-attack statistics.....	10561
14.4.12 reset anti-attack statistics.....	10563
14.5 Traffic Suppression and Storm Control Configuration Commands.....	10564
14.5.1 Command Support.....	10564
14.5.2 broadcast-suppression (interface view).....	10564
14.5.3 broadcast-suppression block outbound.....	10569
14.5.4 broadcast-suppression (VLAN view).....	10570
14.5.5 display flow-suppression interface.....	10571
14.5.6 display storm-control.....	10573
14.5.7 icmp rate-limit.....	10576
14.5.8 icmp rate-limit enable.....	10577
14.5.9 known-multicast-suppression.....	10578
14.5.10 known-unicast-suppression.....	10582
14.5.11 multicast-suppression (interface view).....	10586
14.5.12 multicast-suppression block outbound.....	10591
14.5.13 storm-control.....	10593
14.5.14 storm-control action.....	10599
14.5.15 storm-control enable.....	10601
14.5.16 storm-control interval.....	10602
14.5.17 storm-control whitelist protocol.....	10603
14.5.18 suppression mode.....	10604
14.5.19 unicast-suppression (interface view).....	10606
14.5.20 unicast-suppression block outbound.....	10610
14.6 ARP Security Configuration Commands.....	10612
14.6.1 Command Support.....	10612
14.6.2 arp anti-attack check user-bind alarm enable.....	10612
14.6.3 arp anti-attack check user-bind alarm threshold.....	10613
14.6.4 arp anti-attack check user-bind check-item (interface view).....	10614
14.6.5 arp anti-attack check user-bind check-item (VLAN or BD view).....	10616
14.6.6 arp anti-attack check user-bind enable.....	10617
14.6.7 arp anti-attack entry-check enable.....	10618

14.6.8 arp anti-attack gateway-duplicate enable.....	10620
14.6.9 arp anti-attack log-trap-timer.....	10622
14.6.10 arp anti-attack packet-check.....	10623
14.6.11 arp anti-attack rate-limit.....	10624
14.6.12 arp anti-attack rate-limit alarm enable.....	10626
14.6.13 arp anti-attack rate-limit alarm threshold.....	10628
14.6.14 arp anti-attack rate-limit enable.....	10629
14.6.15 arp trust source.....	10630
14.6.16 arp gratuitous-arp send enable.....	10632
14.6.17 arp gratuitous-arp send interval.....	10633
14.6.18 arp learning dhcp-trigger.....	10634
14.6.19 arp learning disable.....	10635
14.6.20 arp learning strict (interface view).....	10636
14.6.21 arp learning strict (system view).....	10638
14.6.22 arp optimized-passby enable.....	10639
14.6.23 arp optimized-reply disable.....	10640
14.6.24 arp over-vpls enable.....	10643
14.6.25 arp snooping anti-attack check enable.....	10644
14.6.26 arp snooping anti-attack entry-check enable.....	10645
14.6.27 arp snooping enable.....	10648
14.6.28 arp snooping detect default-ip.....	10650
14.6.29 arp snooping detect ignored-ip.....	10651
14.6.30 arp speed-limit source-mac.....	10652
14.6.31 arp speed-limit source-ip.....	10654
14.6.32 arp validate (interface view).....	10656
14.6.33 arp-fake expire-time.....	10658
14.6.34 arp-limit.....	10659
14.6.35 arp-miss anti-attack rate-limit.....	10662
14.6.36 arp-miss anti-attack rate-limit alarm enable.....	10664
14.6.37 arp-miss anti-attack rate-limit alarm threshold.....	10665
14.6.38 arp-miss anti-attack rate-limit enable.....	10667
14.6.39 arp-miss speed-limit source-ip.....	10668
14.6.40 display arp anti-attack arpmiss-record-info.....	10672
14.6.41 display arp anti-attack configuration check user-bind.....	10674
14.6.42 display arp anti-attack configuration.....	10676
14.6.43 display arp anti-attack gateway-duplicate item.....	10681
14.6.44 display arp anti-attack packet-check statistics.....	10682
14.6.45 display arp anti-attack statistics check user-bind interface.....	10684
14.6.46 display arp learning strict.....	10685
14.6.47 display arp optimized-passby status.....	10687
14.6.48 display arp optimized-reply statistics.....	10688
14.6.49 display arp optimized-reply status.....	10690

14.6.50 display arp packet statistics.....	10691
14.6.51 display arp-limit.....	10693
14.6.52 display arp-miss speed-limit source-ip.....	10694
14.6.53 display arp snooping.....	10696
14.6.54 reset arp anti-attack packet-check statistics.....	10698
14.6.55 reset arp anti-attack statistics check user-bind.....	10698
14.6.56 reset arp anti-attack statistics rate-limit.....	10699
14.6.57 reset arp optimized-reply statistics.....	10700
14.6.58 reset arp packet statistics.....	10701
14.6.59 reset arp snooping.....	10701
14.7 Port Security Configuration Commands.....	10703
14.7.1 Command Support.....	10703
14.7.2 display mac-address sec-config.....	10703
14.7.3 display mac-address security.....	10705
14.7.4 display mac-address sticky.....	10707
14.7.5 display mac-address sticky-config.....	10709
14.7.6 display port-security.....	10711
14.7.7 port-security aging-time.....	10713
14.7.8 port-security enable.....	10715
14.7.9 port-security mac-address.....	10717
14.7.10 port-security mac-address sticky-config.....	10719
14.7.11 port-security mac-address sticky.....	10720
14.7.12 port-security max-mac-num.....	10722
14.7.13 port-security protect-action.....	10724
14.7.14 port-security static-flapping protect.....	10726
14.7.15 undo mac-address security.....	10727
14.8 DHCP Snooping Configuration Commands.....	10729
14.8.1 Command Support.....	10729
14.8.2 arp dhcp-snooping-detect enable.....	10729
14.8.3 dhcp option82 append vendor-specific.....	10730
14.8.4 dhcp option82 enable.....	10732
14.8.5 dhcp option82 encapsulation.....	10734
14.8.6 dhcp option82 format.....	10735
14.8.7 dhcp option82 subscriber-id format.....	10741
14.8.8 dhcp option82 vendor-specific format.....	10742
14.8.9 dhcp server detect.....	10744
14.8.10 dhcp snooping alarm dhcp-rate enable.....	10745
14.8.11 dhcp snooping alarm dhcpv6-rate enable.....	10747
14.8.12 dhcp snooping alarm dhcp-rate threshold.....	10748
14.8.13 dhcp snooping alarm dhcpv6-rate threshold.....	10749
14.8.14 dhcp snooping alarm enable.....	10751
14.8.15 dhcp snooping alarm threshold.....	10753

14.8.16 dhcp snooping check dhcp-giaddr enable.....	10755
14.8.17 dhcp snooping check dhcp-rate.....	10757
14.8.18 dhcp snooping check dhcpv6-rate.....	10759
14.8.19 dhcp snooping check dhcp-rate enable.....	10760
14.8.20 dhcp snooping check dhcpv6-rate enable.....	10762
14.8.21 dhcp snooping check dhcpv6-request mac.....	10763
14.8.22 dhcp snooping check dhcp-chaddr enable.....	10765
14.8.23 dhcp snooping check dhcp-request enable.....	10767
14.8.24 dhcp snooping check local-reply enable.....	10769
14.8.25 dhcp snooping check server-vlan enable.....	10770
14.8.26 dhcp snooping deny enable.....	10771
14.8.27 dhcp snooping disable.....	10772
14.8.28 dhcp snooping enable.....	10773
14.8.29 dhcp snooping enable no-user-binding.....	10776
14.8.30 dhcp snooping max-user-number.....	10778
14.8.31 dhcp snooping over-vpls enable.....	10782
14.8.32 dhcp snooping packet-flow log enable.....	10783
14.8.33 dhcp snooping trusted.....	10784
14.8.34 dhcp snooping user-alarm percentage.....	10786
14.8.35 dhcp snooping user-bind autosave.....	10787
14.8.36 dhcp snooping user-bind cache enable.....	10789
14.8.37 dhcp snooping user-bind ftp.....	10790
14.8.38 dhcp snooping user-bind ftp load.....	10792
14.8.39 dhcp snooping user-bind http https.....	10795
14.8.40 dhcp snooping user-bind http https load.....	10797
14.8.41 dhcp snooping user-bind sftp.....	10801
14.8.42 dhcp snooping user-bind sftp load.....	10803
14.8.43 dhcp snooping user-bind tftp.....	10805
14.8.44 dhcp snooping user-bind tftp load.....	10807
14.8.45 dhcp snooping user-offline remove mac-address.....	10809
14.8.46 dhcp snooping user-bind upload format ascii.....	10810
14.8.47 dhcp snooping user-transfer enable.....	10811
14.8.48 dhcpv6 interface-id format.....	10812
14.8.49 dhcpv6 option18 format.....	10815
14.8.50 dhcpv6 option37 format.....	10820
14.8.51 dhcpv6 { option18 option37 } enable.....	10823
14.8.52 dhcpv6 remote-id format.....	10825
14.8.53 dhcpv6 snooping check relay-forward enable.....	10830
14.8.54 dhcpv6 snooping relay-information enable.....	10832
14.8.55 dhcpv6 snooping user-bind detect confirm-client enable.....	10833
14.8.56 dhcpv6 snooping user-bind detect retransmit.....	10834
14.8.57 dhcpv6 snooping user-bind mac-conflict detect enable.....	10835

14.8.58 display dhcp option82 configuration.....	10837
14.8.59 display dhcp snooping.....	10839
14.8.60 display dhcp snooping configuration.....	10847
14.8.61 display dhcp snooping statistics.....	10848
14.8.62 display dhcp snooping user-bind.....	10852
14.8.63 display dhcpv6 snooping statistics.....	10856
14.8.64 display dhcpv6 snooping user-bind.....	10860
14.8.65 reset dhcp snooping statistics.....	10864
14.8.66 reset dhcp snooping user-bind.....	10865
14.8.67 reset dhcpv6 snooping statistics.....	10868
14.9 ND Snooping Configuration Commands.....	10868
14.9.1 Command Support.....	10868
14.9.2 display nd snooping configuration.....	10869
14.9.3 display nd snooping prefix.....	10869
14.9.4 display nd snooping statistics.....	10872
14.9.5 display nd snooping user-bind.....	10874
14.9.6 nd snooping alarm binding-table check enable.....	10876
14.9.7 nd snooping alarm binding-table check threshold.....	10878
14.9.8 nd snooping check enable.....	10879
14.9.9 nd snooping check dad-ns retransmit-rate rate.....	10880
14.9.10 nd snooping check dad-ns retransmit-rate enable.....	10881
14.9.11 nd snooping disable.....	10883
14.9.12 nd snooping enable.....	10884
14.9.13 nd snooping enable dhcpv6 only.....	10885
14.9.14 nd snooping max-user-number.....	10887
14.9.15 nd snooping static-prefix.....	10888
14.9.16 nd snooping trusted.....	10890
14.9.17 nd snooping trusted dhcpv6 only.....	10892
14.9.18 nd snooping user-alarm percentage.....	10894
14.9.19 nd snooping wait-time life-time.....	10895
14.9.20 nd user-bind detect.....	10897
14.9.21 nd user-bind detect enable.....	10898
14.9.22 reset nd snooping prefix.....	10899
14.9.23 reset nd snooping statistics.....	10901
14.9.24 reset nd snooping user-bind.....	10901
14.10 IPv6 RA Guard Configuration Command.....	10903
14.10.1 Command Support.....	10903
14.10.2 display nd raguard policy.....	10903
14.10.3 display nd raguard statistic.....	10906
14.10.4 hop-limit.....	10907
14.10.5 if-match source-mac-address.....	10908
14.10.6 if-match ipv6-source-address.....	10909

14.10.7 if-match prefix.....	10910
14.10.8 managed-address-flag.....	10912
14.10.9 nd rguard role.....	10913
14.10.10 nd rguard policy.....	10914
14.10.11 nd rguard attach-policy.....	10915
14.10.12 nd rguard log enable.....	10916
14.10.13 other-config-flag.....	10917
14.10.14 router-preference maximum.....	10918
14.10.15 reset nd rguard statistic.....	10919
14.11 PPPoE+ Configuration Commands.....	10920
14.11.1 Command Support.....	10920
14.11.2 display pppoe intermediate-agent information encapsulation.....	10920
14.11.3 display pppoe intermediate-agent information format.....	10921
14.11.4 display pppoe intermediate-agent information policy.....	10922
14.11.5 pppoe intermediate-agent information enable.....	10924
14.11.6 pppoe intermediate-agent information encapsulation.....	10925
14.11.7 pppoe intermediate-agent information format.....	10926
14.11.8 pppoe intermediate-agent information ignore-reply.....	10931
14.11.9 pppoe intermediate-agent information policy (interface view).....	10932
14.11.10 pppoe intermediate-agent information policy (system view).....	10934
14.11.11 pppoe intermediate-agent information vendor-id.....	10935
14.11.12 pppoe uplink-port trusted.....	10936
14.12 IP Source Guard Configuration Commands.....	10937
14.12.1 Command Support.....	10937
14.12.2 display dhcp static user-bind.....	10938
14.12.3 display dhcpv6 static user-bind.....	10940
14.12.4 display ip source check user-bind.....	10943
14.12.5 display mac-address snooping.....	10944
14.12.6 ip anti-attack source-ip equals destination-ip drop.....	10946
14.12.7 ip source check user-bind alarm enable.....	10947
14.12.8 ip source check user-bind alarm threshold.....	10948
14.12.9 ip source check user-bind check-item (interface view).....	10949
14.12.10 ip source check user-bind check-item (VLAN view).....	10951
14.12.11 ip source check user-bind enable.....	10952
14.12.12 user-bind static.....	10954
14.12.13 user-bind ip sticky-mac.....	10956
14.13 SAVI Configuration Commands.....	10958
14.13.1 Command Support.....	10958
14.13.2 savi max dad-delay.....	10958
14.13.3 savi max dad-prepare-delay.....	10960
14.13.4 savi max-binding-table.....	10962
14.13.5 savi enable.....	10963

14.14 URPf Configuration Commands.....	10964
14.14.1 Command Support.....	10964
14.14.2 urpf (interface view).....	10964
14.14.3 urpf (system view).....	10967
14.15 Keychain Configuration Commands.....	10969
14.15.1 Command Support.....	10969
14.15.2 algorithm.....	10969
14.15.3 default send-key-id.....	10972
14.15.4 display keychain.....	10973
14.15.5 keychain.....	10980
14.15.6 key-id.....	10982
14.15.7 key-string.....	10984
14.15.8 receive-time.....	10986
14.15.9 receive-tolerance.....	10989
14.15.10 send-time.....	10991
14.15.11 tcp-algorithm-id.....	10994
14.15.12 tcp-kind.....	10997
14.15.13 time mode.....	10998
14.16 MPAC Configuration Commands.....	10999
14.16.1 Command Support.....	10999
14.16.2 description (MPAC policy).....	10999
14.16.3 display service-security binding.....	11000
14.16.4 display service-security policy.....	11001
14.16.5 display service-security statistics.....	11003
14.16.6 reset service-security counters.....	11005
14.16.7 rule (MPAC policy).....	11006
14.16.8 service-security binding.....	11012
14.16.9 service-security global-binding.....	11013
14.16.10 service-security policy.....	11015
14.16.11 step (MPAC policy).....	11016
14.17 Traffic Isolation Between the Service and Management planes Configuration Commands.....	11017
14.17.1 Command Support.....	11017
14.17.2 management-plane isolate enable.....	11017
14.17.3 management-port isolate enable.....	11018
14.18 Security Risk Commands.....	11019
14.18.1 Command Support.....	11020
14.18.2 display security risk.....	11020
14.19 PKI Configuration Commands.....	11022
14.19.1 Command Support.....	11022
14.19.2 auto-enroll.....	11022
14.19.3 ca id.....	11024
14.19.4 cdp-url.....	11025

14.19.5 certificate-check.....	11026
14.19.6 certificate auto-update enable.....	11029
14.19.7 certificate update expire-time.....	11030
14.19.8 cmp-request authentication-cert.....	11031
14.19.9 cmp-request ca-name.....	11032
14.19.10 cmp-request entity.....	11033
14.19.11 cmp-request message-authentication-code.....	11034
14.19.12 cmp-request origin-authentication-method.....	11035
14.19.13 cmp-request realm.....	11036
14.19.14 cmp-request rsa local-key-pair.....	11037
14.19.15 cmp-request server url.....	11039
14.19.16 cmp-request signature-algorithm.....	11040
14.19.17 cmp-request timeout.....	11042
14.19.18 cmp-request verification-cert.....	11043
14.19.19 common-name.....	11044
14.19.20 country (PKI entity view).....	11045
14.19.21 crl auto-update enable.....	11046
14.19.22 crl cache.....	11047
14.19.23 crl http.....	11048
14.19.24 crl scep.....	11048
14.19.25 crl update-period.....	11049
14.19.26 display pki ca-capability.....	11050
14.19.27 display pki cert-req.....	11051
14.19.28 display pki certificate.....	11054
14.19.29 display pki certificate enroll-status.....	11057
14.19.30 display pki certificate filename.....	11059
14.19.31 display pki cmp statistics.....	11062
14.19.32 display pki credential-storage-path.....	11063
14.19.33 display pki crl.....	11064
14.19.34 display pki entity.....	11066
14.19.35 display pki ocsp cache statistics.....	11068
14.19.36 display pki ocsp cache detail.....	11070
14.19.37 display pki ocsp server down-information.....	11072
14.19.38 display pki peer-certificate.....	11073
14.19.39 display pki realm.....	11076
14.19.40 display pki rsa local-key-pair.....	11080
14.19.41 email.....	11082
14.19.42 enrollment self-signed.....	11083
14.19.43 enrollment-request signature message-digest-method.....	11085
14.19.44 enrollment-url.....	11086
14.19.45 entity.....	11088
14.19.46 fingerprint.....	11089

14.19.47 fqdn.....	11091
14.19.48 ip-address.....	11092
14.19.49 key-usage.....	11093
14.19.50 locality.....	11094
14.19.51 ocspp nonce enable.....	11095
14.19.52 ocspp signature enable.....	11096
14.19.53 ocspp url.....	11097
14.19.54 ocspp-url from-ca.....	11098
14.19.55 organization-unit.....	11099
14.19.56 organization.....	11100
14.19.57 password (PKI realm view).....	11102
14.19.58 pki cmp certificate-request session.....	11103
14.19.59 pki cmp initial-request session.....	11104
14.19.60 pki cmp keyupdate-request session.....	11105
14.19.61 pki cmp session.....	11106
14.19.62 pki create-certificate.....	11107
14.19.63 pki delete replaced-file to recycle-bin enable.....	11108
14.19.64 pki delete-certificate.....	11109
14.19.65 pki delete-crl.....	11111
14.19.66 pki enroll-certificate.....	11112
14.19.67 pki entity.....	11114
14.19.68 pki export-certificate.....	11115
14.19.69 pki export rsa-key-pair.....	11116
14.19.70 pki file-format.....	11119
14.19.71 pki get-certificate.....	11120
14.19.72 pki get-crl.....	11121
14.19.73 pki http.....	11122
14.19.74 pki import-certificate.....	11123
14.19.75 pki import-certificate peer.....	11126
14.19.76 pki import-crl.....	11128
14.19.77 pki import rsa-key-pair.....	11129
14.19.78 pki key enhance enable.....	11131
14.19.79 pki match-rsa-key.....	11132
14.19.80 pki ocspp response cache enable.....	11133
14.19.81 pki ocspp response cache number.....	11134
14.19.82 pki ocspp response cache refresh interval.....	11135
14.19.83 pki realm (system view).....	11136
14.19.84 pki release-certificate peer.....	11137
14.19.85 pki rsa local-key-pair create.....	11138
14.19.86 pki rsa local-key-pair destroy.....	11139
14.19.87 pki set-certificate expire-prewarning.....	11141
14.19.88 pki validate ocspp-server-certificate enable.....	11142

14.19.89 pki validate-certificate.....	11143
14.19.90 reset pki cmp statistics.....	11144
14.19.91 reset pki ocsf response cache.....	11144
14.19.92 reset pki ocsf server down-information.....	11145
14.19.93 rsa local-key-pair.....	11146
14.19.94 serial-number.....	11148
14.19.95 source.....	11148
14.19.96 state (PKI entity view).....	11150
14.19.97 undo pki cmp poll-request session.....	11151
14.19.98 vpn-instance.....	11152
14.20 OLC Configuration Commands.....	11153
14.20.1 Command Support.....	11154
14.20.2 cpu-overload-control.....	11154
14.20.3 cpu-overload-control alarm disable.....	11155
14.20.4 cpu-overload-control bucket-weight.....	11156
14.20.5 cpu-overload-control disable.....	11159
14.20.6 cpu-overload-control packet-type disable.....	11160
14.20.7 cpu-overload-control task enable.....	11163
14.20.8 display cpu-overload-control configuration.....	11164
14.20.9 display cpu-overload-control statistics.....	11169
14.20.10 reset cpu-overload-control statistics.....	11173
14.21 ECA Configuration Commands.....	11176
14.21.1 Command Support.....	11176
14.21.2 defence engine enable.....	11176
14.21.3 decoding uri-cache.....	11177
14.21.4 display decoding statistics.....	11178
14.21.5 display engine information.....	11180
14.21.6 display engine session statistics.....	11181
14.21.7 display engine session statistics app-type.....	11183
14.21.8 display engine session statistics interface.....	11185
14.21.9 display engine session table.....	11189
14.21.10 display engine statistics.....	11191
14.21.11 display flow-probe metadata-collect information.....	11193
14.21.12 display flow-probe metadata-collect statistics.....	11195
14.21.13 display fragment-reassemble configuration.....	11196
14.21.14 display fragment-reassemble session table.....	11198
14.21.15 display fragment-reassemble statistics.....	11200
14.21.16 display stream-reassemble configuration.....	11202
14.21.17 display update configuration.....	11204
14.21.18 display update host source.....	11206
14.21.19 display update information all-sdb.....	11207
14.21.20 display update status.....	11208

14.21.21 display version sa-sdb.....	11211
14.21.22 ec-analytics enable.....	11212
14.21.23 ec-analytics enhanced-mode disable.....	11213
14.21.24 ec-analytics whitelist.....	11214
14.21.25 engine configuration commit.....	11215
14.21.26 engine enhanced-detection.....	11216
14.21.27 engine pass-through enable.....	11217
14.21.28 engine session timeout active.....	11218
14.21.29 engine session timeout inactive.....	11219
14.21.30 flow-probe metadata-collect aging-time.....	11220
14.21.31 flow-probe metadata-collect enable.....	11221
14.21.32 flow-probe metadata-collect server.....	11222
14.21.33 flow-probe metadata-collect source.....	11224
14.21.34 fragment-reassemble enable.....	11225
14.21.35 fragment-reassemble overflow-mode.....	11226
14.21.36 fragment-reassemble user-configure.....	11227
14.21.37 reset decoding statistics.....	11228
14.21.38 reset engine session statistics.....	11229
14.21.39 reset engine session statistics app-type.....	11230
14.21.40 reset engine session statistics flow.....	11231
14.21.41 reset engine session table.....	11232
14.21.42 reset engine statistics.....	11233
14.21.43 reset flow-probe metadata-collect statistics.....	11234
14.21.44 reset fragment-reassemble statistics.....	11235
14.21.45 stream-reassemble enable.....	11235
14.21.46 stream-reassemble enhanced-mode.....	11236
14.21.47 stream-reassemble overflow-mode.....	11237
14.21.48 stream-reassemble overlap-mode.....	11238
14.21.49 stream-reassemble session-cache.....	11239
14.21.50 stream-reassemble session-timeout.....	11240
14.21.51 stream-reassemble tcp-option check.....	11241
14.21.52 stream-reassemble timestamp check.....	11242
14.21.53 stream-reassemble user-configure defense-check.....	11243
14.21.54 update abort.....	11244
14.21.55 update apply sa-sdb.....	11245
14.21.56 update confirm sa-sdb enable.....	11246
14.21.57 update download-server aging-time.....	11247
14.21.58 update force apply sa-sdb.....	11248
14.21.59 update force local sa-sdb.....	11249
14.21.60 update force online sa-sdb.....	11250
14.21.61 update force restore sdb-default sa-sdb.....	11251
14.21.62 update force rollback sa-sdb.....	11252

14.21.63 update host source.....	11253
14.21.64 update local sa-sdb.....	11255
14.21.65 update online sa-sdb.....	11256
14.21.66 update proxy.....	11256
14.21.67 update proxy enable.....	11258
14.21.68 update restore engine.....	11259
14.21.69 update restore sdb-default sa-sdb.....	11260
14.21.70 update rollback sa-sdb.....	11261
14.21.71 update schedule enable.....	11262
14.21.72 update schedule retry-download interval.....	11263
14.21.73 update schedule retry-load interval.....	11264
14.21.74 update schedule.....	11265
14.21.75 update server.....	11266
14.22 Network Deception Configuration Commands.....	11268
14.22.1 Command Support.....	11268
14.22.2 deception.....	11268
14.22.3 deception aci enable.....	11269
14.22.4 deception aci lack decoy.....	11270
14.22.5 deception aci suffix.....	11271
14.22.6 deception aci timeout.....	11272
14.22.7 deception arp-request rate.....	11273
14.22.8 deception decoy-network.....	11274
14.22.9 deception detect-network.....	11276
14.22.10 deception dns enable.....	11277
14.22.11 deception dns-request rate.....	11278
14.22.12 deception enable.....	11279
14.22.13 deception decoy.....	11280
14.22.14 deception ip-state detect rate.....	11281
14.22.15 deception mac-address aging-time.....	11282
14.22.16 deception mode strict.....	11283
14.22.17 deception syn-connect rate.....	11284
14.22.18 deception whitelist.....	11285
14.22.19 display deception aci.....	11287
14.22.20 display deception arp-proxy.....	11288
14.22.21 display deception arp-request.....	11289
14.22.22 display deception config-flow.....	11290
14.22.23 display deception decoy-network.....	11293
14.22.24 display deception detect-network.....	11294
14.22.25 display deception dns.....	11295
14.22.26 display deception flow.....	11296
14.22.27 display deception decoy status.....	11298
14.22.28 display deception instance.....	11300

14.22.29 display deception interface.....	11301
14.22.30 display deception ip-redirect.....	11302
14.22.31 display deception ip-state.....	11304
14.22.32 display deception port-redirect.....	11306
14.22.33 display deception port-state.....	11307
14.22.34 display deception statistics.....	11309
14.22.35 display deception syn-connect.....	11315
14.22.36 display deception version.....	11316
14.22.37 display deception whitelist.....	11317
14.22.38 reset deception aci.....	11318
14.22.39 reset deception arp-proxy.....	11319
14.22.40 reset deception ip-state.....	11319
14.22.41 reset deception port-redirect.....	11320
14.22.42 reset deception port-state.....	11321
14.22.43 reset deception statistics.....	11322
14.23 Terminal Anti-Spoofing Configuration Commands.....	11322
14.23.1 Command Support.....	11322
14.23.2 display terminal configuration.....	11323
14.23.3 display terminal information.....	11324
14.23.4 display terminal-inspect abnormal-reason.....	11326
14.23.5 display terminal-inspect cache-data.....	11327
14.23.6 display terminal-inspect category.....	11329
14.23.7 display terminal-inspect result.....	11330
14.23.8 display terminal-inspect supervised abnormal-reason.....	11332
14.23.9 display terminal-inspect terminal-list.....	11333
14.23.10 display terminal-isolate configuration.....	11335
14.23.11 reset terminal-inspect cache-data.....	11336
14.23.12 terminal.....	11337
14.23.13 terminal-inspect cache-data.....	11340
14.23.14 terminal-inspect category.....	11341
14.23.15 terminal-inspect flow enable.....	11344
14.23.16 terminal-isolate category.....	11345
14.23.17 terminal-isolate template.....	11347
14.23.18 terminal-isolate action.....	11348
14.23.19 terminal-isolate period.....	11349
14.24 Terminal Identification Configuration Commands.....	11351
14.24.1 Command Support.....	11351
14.24.2 display terminal identify result.....	11351
14.24.3 terminal-identify enable.....	11352
14.24.4 terminal-monitoring source-ip.....	11353
14.24.5 terminal-scan source-ip.....	11355
14.25 WEAKEA Command Reference.....	11357

14.25.1 ah authentication-algorithm.....	11358
14.25.2 dh.....	11359
14.25.3 esp authentication-algorithm.....	11360
14.25.4 esp encryption-algorithm.....	11361
14.25.5 load-module weakea.....	11362
14.25.6 pfs.....	11363
14.25.7 pki export rsa-key-pair.....	11364
14.25.8 set cipher-suite.....	11366
14.25.9 ssh client cipher.....	11367
14.25.10 ssh client hmac.....	11369
14.25.11 ssh client key-exchange.....	11370
14.25.12 ssh server cipher.....	11371
14.25.13 ssh server compatible-ssh1x enable.....	11372
14.25.14 sshd server.....	11373
14.25.15 ssh server hmac.....	11376
14.25.16 ssh server key-exchange.....	11377
14.25.17 ssl minimum version.....	11378
15 QoS Commands.....	11380
15.1 MQC Configuration Commands.....	11380
15.1.1 Command Support.....	11380
15.1.2 classifier behavior.....	11380
15.1.3 display acl division.....	11382
15.1.4 display traffic behavior.....	11384
15.1.5 display traffic classifier.....	11386
15.1.6 display traffic policy.....	11387
15.1.7 display traffic policy statistics.....	11391
15.1.8 display traffic policy user-defined.....	11399
15.1.9 display traffic-applied.....	11401
15.1.10 display traffic-policy applied-record.....	11405
15.1.11 if-match 8021p.....	11408
15.1.12 if-match acl.....	11409
15.1.13 if-match any.....	11412
15.1.14 if-match cvlan-8021p.....	11413
15.1.15 if-match cvlan-id.....	11415
15.1.16 if-match destination-mac.....	11417
15.1.17 if-match discard.....	11419
15.1.18 if-match double-tag.....	11420
15.1.19 if-match dscp.....	11421
15.1.20 if-match flow-id.....	11424
15.1.21 if-match inbound-interface.....	11425
15.1.22 if-match ip-precedence.....	11427
15.1.23 if-match l2-protocol.....	11428

15.1.24 if-match mpls-exp.....	11430
15.1.25 if-match outbound-interface.....	11432
15.1.26 if-match protocol.....	11433
15.1.27 if-match source-mac.....	11435
15.1.28 if-match tcp.....	11436
15.1.29 if-match vlan-id.....	11438
15.1.30 if-match vxlan.....	11440
15.1.31 remark flow-id.....	11441
15.1.32 reset traffic policy statistics.....	11443
15.1.33 rule-deny skip-action.....	11446
15.1.34 traffic behavior.....	11447
15.1.35 traffic classifier.....	11449
15.1.36 traffic policy.....	11451
15.1.37 traffic statistics interval.....	11456
15.1.38 traffic statistics mode by-bytes.....	11457
15.1.39 traffic-policy (interface view).....	11458
15.1.40 traffic-policy (AP group view).....	11460
15.1.41 traffic-policy (SSID profile view).....	11462
15.1.42 traffic-policy (VLAN view).....	11463
15.1.43 traffic-policy (VLANIF interface view).....	11465
15.1.44 traffic-policy fast-mode enable.....	11467
15.1.45 traffic-policy global.....	11468
15.1.46 traffic rate statistics enable.....	11470
15.2 Priority Mapping Commands.....	11472
15.2.1 Command Support.....	11472
15.2.2 8021p-inbound.....	11472
15.2.3 8021p-outbound.....	11475
15.2.4 dei enable.....	11477
15.2.5 diffserv domain.....	11479
15.2.6 display diffserv domain.....	11481
15.2.7 display qos local-precedence-queue-map.....	11485
15.2.8 display qos map-table.....	11487
15.2.9 input (DSCP mapping table view).....	11489
15.2.10 ip-dscp-inbound.....	11491
15.2.11 ip-dscp-outbound.....	11494
15.2.12 port priority.....	11497
15.2.13 qos local-precedence-queue-map.....	11498
15.2.14 qos map-table.....	11500
15.2.15 qos phb marking dscp enable (interface view).....	11501
15.2.16 qos phb marking 8021p enable.....	11502
15.2.17 qos phb marking enable.....	11503
15.2.18 remark 8021p.....	11505

15.2.19 remark 8021p (QoS profile view).....	11507
15.2.20 remark dscp.....	11508
15.2.21 remark dscp (QoS profile view).....	11510
15.2.22 remark ip-precedence.....	11512
15.2.23 remark local-precedence.....	11513
15.2.24 trust.....	11515
15.2.25 trust upstream.....	11517
15.3 Traffic Policing, Traffic Shaping, and Interface-based Rate Limiting Commands.....	11519
15.3.1 Command Support.....	11519
15.3.2 assign car-resource.....	11519
15.3.3 car (traffic behavior view).....	11521
15.3.4 car (QoS profile view).....	11527
15.3.5 car share.....	11529
15.3.6 display car-resource configuration.....	11530
15.3.7 display qos-profile.....	11532
15.3.8 display qos car.....	11536
15.3.9 display qos configuration.....	11537
15.3.10 display qos lr.....	11544
15.3.11 display qos statistics.....	11545
15.3.12 qos car.....	11548
15.3.13 qos-car exclude-interframe.....	11550
15.3.14 qos-profile.....	11551
15.3.15 qos-shaping exclude-interframe.....	11553
15.3.16 qos lr inbound.....	11554
15.3.17 qos lr inbound whitelist protocol.....	11558
15.3.18 qos lr outbound.....	11560
15.3.19 qos lr pps.....	11562
15.3.20 qos queue shaping.....	11564
15.3.21 reset qos statistics.....	11567
15.4 Congestion Avoidance and Congestion Management Commands.....	11568
15.4.1 Command Support.....	11568
15.4.2 color.....	11568
15.4.3 display drop-profile.....	11570
15.4.4 display qos micro-burst peak-buffer verbose interface.....	11573
15.4.5 display qos micro-burst statistics interface.....	11575
15.4.6 display qos micro-burst status all.....	11577
15.4.7 display qos queue statistics.....	11579
15.4.8 drop-profile.....	11585
15.4.9 qos burst-mode (interface view).....	11587
15.4.10 qos burst-mode (system view).....	11588
15.4.11 qos dynamic-buffer enable.....	11590
15.4.12 qos dynamic-buffer interval.....	11591

15.4.13 qos dynamic-buffer maximum.....	11592
15.4.14 qos micro-burst detection enable.....	11594
15.4.15 qos { pq wrr drr }.....	11595
15.4.16 qos queue buffer shared-ratio.....	11597
15.4.17 qos queue drr.....	11599
15.4.18 qos queue low-limit high-limit.....	11601
15.4.19 qos queue max-buffer.....	11602
15.4.20 qos queue max-length.....	11604
15.4.21 qos queue statistics interval.....	11606
15.4.22 qos queue wred.....	11607
15.4.23 qos queue wrr.....	11609
15.4.24 qos schedule-profile (interface view).....	11611
15.4.25 qos schedule-profile (system view).....	11612
15.4.26 qos tail-drop-profile (interface view).....	11613
15.4.27 qos tail-drop-profile (system view).....	11614
15.4.28 qos traffic-manage enable.....	11616
15.4.29 qos wred.....	11617
15.4.30 qos wred high-limit.....	11618
15.4.31 queue-depth (WRED drop profile view).....	11619
15.4.32 reset qos queue statistics.....	11621
15.4.33 stack-port qos { pq wrr drr }.....	11622
15.4.34 stack-port qos queue.....	11623
15.4.35 stack-port qos schedule-profile.....	11625
15.5 Filtering Configuration Commands.....	11626
15.5.1 Command Support.....	11626
15.5.2 deny permit.....	11626
15.6 Redirection Configuration Commands.....	11627
15.6.1 Command Support.....	11627
15.6.2 redirect cpu.....	11628
15.6.3 redirect interface.....	11629
15.6.4 redirect vpn-instance.....	11630
15.7 Statistics Configuration Commands.....	11631
15.7.1 Command Support.....	11631
15.7.2 statistic enable (traffic behavior view).....	11632
15.7.3 statistic enable (QoS profile view).....	11633
15.8 ACL-based Simplified Traffic Policy Commands.....	11634
15.8.1 Command Support.....	11634
15.8.2 display traffic-statistics.....	11634
15.8.3 reset traffic-statistics.....	11637
15.8.4 traffic-delete fast-mode enable.....	11640
15.8.5 traffic-filter (interface view).....	11641
15.8.6 traffic-filter (system view).....	11645

15.8.7 traffic-limit (interface view).....	11648
15.8.8 traffic-limit (system view).....	11655
15.8.9 traffic-mirror (interface view).....	11661
15.8.10 traffic-mirror (system view).....	11664
15.8.11 traffic-redirect (interface view).....	11667
15.8.12 traffic-redirect (system view).....	11672
15.8.13 traffic-remark (interface view).....	11676
15.8.14 traffic-remark (system view).....	11681
15.8.15 traffic-secure (interface view).....	11687
15.8.16 traffic-secure (system view).....	11690
15.8.17 traffic-statistic (interface view).....	11692
15.8.18 traffic-statistic (system view).....	11697
15.9 HQoS Commands.....	11700
15.9.1 Command Support.....	11700
15.9.2 color (flow queue WRED drop profile view).....	11700
15.9.3 display flow-queue-profile.....	11702
15.9.4 display flow-wred-profile.....	11705
15.9.5 display traffic-user-queue statistics.....	11707
15.9.6 flow-queue-profile.....	11710
15.9.7 flow-wred-profile.....	11712
15.9.8 qos queue (flow queue profile view).....	11713
15.9.9 queue-depth (flow queue WRED drop profile view).....	11715
15.9.10 reset traffic-user-queue statistics.....	11716
15.9.11 sac-profile (system view).....	11718
15.9.12 sac-profile (service scheme view).....	11719
15.9.13 traffic-user-queue (interface view).....	11720
15.9.14 user-queue (qos-profile view).....	11722
15.10 SAC Configuration Commands.....	11724
15.10.1 Command Support.....	11724
15.10.2 application name cache type aging-time.....	11724
15.10.3 category sub-category.....	11725
15.10.4 data-model.....	11728
15.10.5 description (user-defined application rule view).....	11729
15.10.6 description (user-defined application view).....	11730
15.10.7 detect max-bytes.....	11731
15.10.8 detect max-packets.....	11732
15.10.9 detect max-time.....	11733
15.10.10 detect uni-direction.....	11734
15.10.11 display application.....	11735
15.10.12 display application name aging-time.....	11738
15.10.13 display engine session application.....	11739
15.10.14 if-match application.....	11741

15.10.15 ip-address (user-defined application rule view).....	11742
15.10.16 label (User-defined application view).....	11744
15.10.17 port (user-defined application rule view).....	11745
15.10.18 port-identification packet-number-threshold.....	11746
15.10.19 protocol (user-defined application rule view).....	11747
15.10.20 rule name (user-defined application view).....	11748
15.10.21 sa.....	11750
15.10.22 sa cache enable.....	11751
15.10.23 service-awareness enable.....	11752
15.10.24 signature (user-defined application rule view).....	11753
15.10.25 user-defined-application name.....	11755
16 Network Management and Monitoring Commands.....	11757
16.1 SNMP Configuration Commands.....	11757
16.1.1 Command Support.....	11757
16.1.2 bulk-file.....	11758
16.1.3 bulk-stat enable.....	11759
16.1.4 clear configuration snmp-agent trap enable.....	11760
16.1.5 collect enable.....	11761
16.1.6 collect interval.....	11762
16.1.7 display bulk-stat.....	11763
16.1.8 display snmp dynamic-control threshold.....	11767
16.1.9 display snmp-agent.....	11768
16.1.10 display snmp-agent community.....	11769
16.1.11 display snmp-agent extend error-code status.....	11771
16.1.12 display snmp-agent group.....	11772
16.1.13 display snmp-agent heartbeat configuration.....	11773
16.1.14 display snmp-agent inform.....	11774
16.1.15 display snmp-agent mib-view.....	11778
16.1.16 display snmp-agent notification-log.....	11780
16.1.17 display snmp-agent notify-filter-profile.....	11783
16.1.18 display snmp-agent statistics.....	11785
16.1.19 display snmp-agent statistics mib.....	11787
16.1.20 display snmp-agent sys-info.....	11790
16.1.21 display snmp-agent target-host.....	11792
16.1.22 display snmp-agent trap all.....	11794
16.1.23 display snmp-agent trap feature-name all.....	11796
16.1.24 display snmp-agent usm-user.....	11798
16.1.25 enable snmp trap updown.....	11799
16.1.26 format (bulk file view).....	11800
16.1.27 object.....	11801
16.1.28 reset snmp-agent statistics mib.....	11803
16.1.29 set snmp dynamic-control threshold.....	11804

16.1.30 snmp-agent.....	11805
16.1.31 snmp-agent acl.....	11806
16.1.32 snmp-agent blacklist ip-block disable.....	11808
16.1.33 snmp-agent community.....	11809
16.1.34 snmp-agent community complexity-check disable.....	11813
16.1.35 snmp-agent community plaintext enable.....	11814
16.1.36 snmp-agent extend error-code enable.....	11815
16.1.37 snmp-agent group.....	11816
16.1.38 snmp-agent heartbeat enable.....	11820
16.1.39 snmp-agent heartbeat interval.....	11821
16.1.40 snmp-agent inform.....	11822
16.1.41 snmp-agent inform address.....	11824
16.1.42 snmp-agent local-engineid.....	11828
16.1.43 snmp-agent mib-view.....	11829
16.1.44 snmp-agent notification-log.....	11831
16.1.45 snmp-agent notification-log enable.....	11833
16.1.46 snmp-agent notify-filter-profile.....	11834
16.1.47 snmp-agent packet contextengineid-check enable.....	11836
16.1.48 snmp-agent packet max-size.....	11837
16.1.49 snmp-agent packet-priority.....	11838
16.1.50 snmp-agent protocol get-bulk timeout.....	11839
16.1.51 snmp-agent protocol ipv6 source-ip.....	11841
16.1.52 snmp-agent protocol server disable.....	11842
16.1.53 snmp-agent protocol source-interface.....	11843
16.1.54 snmp-agent protocol source-status.....	11844
16.1.55 snmp-agent protocol server message queue.....	11846
16.1.56 snmp-agent statistics mib disable.....	11847
16.1.57 snmp-agent sys-info.....	11848
16.1.58 snmp-agent target-host inform.....	11850
16.1.59 snmp-agent target-host trap.....	11856
16.1.60 snmp-agent target-host trap ipv6.....	11863
16.1.61 snmp-agent trap disable.....	11868
16.1.62 snmp-agent trap enable.....	11869
16.1.63 snmp-agent trap enable feature-name.....	11870
16.1.64 snmp-agent trap life.....	11872
16.1.65 snmp-agent trap queue-size.....	11873
16.1.66 snmp-agent trap start-trap resend disable.....	11874
16.1.67 snmp-agent trap source.....	11875
16.1.68 snmp-agent trap source-port.....	11876
16.1.69 snmp-agent trap type.....	11877
16.1.70 snmp-agent udp-port.....	11878
16.1.71 snmp-agent usm-user.....	11879

16.1.72 snmp-agent usm-user password complexity-check disable.....	11886
16.1.73 storage.....	11887
16.1.74 transfer.....	11888
16.1.75 transfer interval.....	11890
16.1.76 transfer remain-time.....	11891
16.1.77 transfer retry.....	11892
16.2 RMON and RMON2 Configuration Commands.....	11893
16.2.1 Command Support.....	11893
16.2.2 display rmon alarm.....	11893
16.2.3 display rmon event.....	11895
16.2.4 display rmon eventlog.....	11897
16.2.5 display rmon history.....	11899
16.2.6 display rmon prialarm.....	11902
16.2.7 display rmon statistics.....	11904
16.2.8 display rmon2 hlhostcontroltable.....	11907
16.2.9 display rmon2 nlhosttable.....	11909
16.2.10 display rmon2 protocoldirtable.....	11911
16.2.11 rmon alarm.....	11913
16.2.12 rmon event.....	11916
16.2.13 rmon history.....	11918
16.2.14 rmon prialarm.....	11919
16.2.15 rmon statistics.....	11922
16.2.16 rmon2 hlhostcontroltable.....	11923
16.2.17 rmon2 protocoldirtable.....	11925
16.2.18 rmon-statistics enable.....	11928
16.3 LLDP Configuration Commands.....	11929
16.3.1 Command Support.....	11929
16.3.2 cdp clear neighbor.....	11929
16.3.3 display cdp local.....	11931
16.3.4 display cdp neighbor.....	11933
16.3.5 display cdp neighbor brief.....	11935
16.3.6 display cdp neighbor device-id.....	11936
16.3.7 display cdp statistics.....	11937
16.3.8 display lldp device-classifier information.....	11939
16.3.9 display lldp local.....	11940
16.3.10 display lldp neighbor.....	11950
16.3.11 display lldp neighbor brief.....	11962
16.3.12 display lldp neighbor system-name.....	11963
16.3.13 display lldp statistics.....	11964
16.3.14 display lldp tlv-config.....	11966
16.3.15 ip domain-name.....	11970
16.3.16 lldp auto-vlan sensor ap.....	11971

16.3.17 lldp clear neighbor.....	11973
16.3.18 lldp compliance cdp receive.....	11974
16.3.19 lldp compliance cdp txrx.....	11975
16.3.20 lldp device-classifier enable.....	11976
16.3.21 lldp dot3-tlv power.....	11977
16.3.22 lldp enable (interface view).....	11979
16.3.23 lldp enable (system view).....	11980
16.3.24 lldp management-address.....	11982
16.3.25 lldp message-transmission delay.....	11983
16.3.26 lldp message-transmission hold-multiplier.....	11985
16.3.27 lldp message-transmission interval.....	11986
16.3.28 lldp restart-delay.....	11988
16.3.29 lldp tlv-enable (MEth interface view).....	11989
16.3.30 lldp tlv-enable basic-tlv.....	11992
16.3.31 lldp tlv-enable dot1-tlv.....	11994
16.3.32 lldp tlv-enable dot3-tlv.....	11996
16.3.33 lldp tlv-enable legacy-tlv esn.....	11998
16.3.34 lldp tlv-enable legacy-tlv poe.....	11999
16.3.35 lldp tlv-enable med-tlv.....	12000
16.3.36 lldp trap-interval.....	12004
16.3.37 reset cdp statistics.....	12006
16.3.38 reset lldp statistics.....	12007
16.4 Performance Management Commands.....	12008
16.4.1 Command Support.....	12008
16.4.2 binding.....	12008
16.4.3 display pm brief.....	12011
16.4.4 display pm measure-info.....	12013
16.4.5 display pm statistics.....	12015
16.4.6 display pm statistics-file.....	12018
16.4.7 display pm statistics-task.....	12019
16.4.8 measure disable.....	12021
16.4.9 path.....	12023
16.4.10 pm.....	12024
16.4.11 pm-server.....	12024
16.4.12 protocol (PM server view).....	12025
16.4.13 record-file disable.....	12027
16.4.14 record-interval.....	12028
16.4.15 reset pm current-data.....	12029
16.4.16 retry.....	12032
16.4.17 sample-interval.....	12033
16.4.18 statistics enable.....	12035
16.4.19 statistics-cycle.....	12036

16.4.20 statistics-task.....	12037
16.4.21 threshold-alarm enable.....	12038
16.4.22 threshold-alarm measure.....	12039
16.4.23 upload.....	12041
16.4.24 upload auto.....	12042
16.4.25 upload-config.....	12043
16.4.26 username password.....	12045
16.5 iPCA Configuration Commands.....	12046
16.5.1 Command Support.....	12046
16.5.2 ach.....	12046
16.5.3 authentication-mode (IPFPM-DCP view).....	12047
16.5.4 authentication-mode (IPFPM-DCP instance view).....	12048
16.5.5 authentication-mode (IPFPM-MCP view).....	12050
16.5.6 color-flag loss-measure.....	12051
16.5.7 dcp.....	12053
16.5.8 dcp id.....	12054
16.5.9 description (IPFPM-DCP instance view).....	12055
16.5.10 description (IPFPM-MCP instance view).....	12056
16.5.11 display ipfpm dcp.....	12057
16.5.12 display ipfpm mcp.....	12059
16.5.13 display ipfpm statistic-type.....	12061
16.5.14 display iplpm configuration brief.....	12063
16.5.15 display iplpm loss-measure statistics global.....	12065
16.5.16 display iplpm loss-measure statistics history-record.....	12066
16.5.17 display iplpm loss-measure statistics interface.....	12070
16.5.18 display iplpm loss-measure statistics port-flow interface.....	12072
16.5.19 display iplpm loss-measure statistics qos-queue interface.....	12074
16.5.20 flow (IPFPM-DCP instance view).....	12075
16.5.21 flow (IPFPM-MCP-ACH view).....	12078
16.5.22 in-group.....	12079
16.5.23 instance (IPFPM-DCP view).....	12080
16.5.24 instance (IPFPM-MCP view).....	12082
16.5.25 interval (IPFPM-DCP instance view).....	12083
16.5.26 ipfpm tlp.....	12084
16.5.27 iplpm global loss-measure alarm enable.....	12085
16.5.28 iplpm global loss-measure enable.....	12086
16.5.29 iplpm global loss-measure interval.....	12087
16.5.30 iplpm link authentication-mode.....	12088
16.5.31 iplpm link loss-measure alarm enable.....	12089
16.5.32 iplpm link loss-measure enable.....	12090
16.5.33 iplpm link loss-measure interval.....	12091
16.5.34 iplpm loss-measure color-flag.....	12092

16.5.35 loss-measure enable.....	12093
16.5.36 loss-measure enable continual.....	12095
16.5.37 loss-measure ratio-threshold.....	12096
16.5.38 mcp (IPFPM-DCP view).....	12097
16.5.39 mcp (IPFPM-DCP instance view).....	12099
16.5.40 mcp id.....	12101
16.5.41 measure disable (IPFPM-MCP instance view).....	12102
16.5.42 nqa ipfpm dcp.....	12103
16.5.43 nqa ipfpm mcp.....	12104
16.5.44 out-group.....	12105
16.5.45 protocol udp port.....	12106
16.5.46 tlp.....	12107
16.6 iPCA 2.0 Configuration Commands.....	12109
16.6.1 Command Support.....	12109
16.6.2 display s-ipfpm configuration.....	12109
16.6.3 s-ipfpm clear color-flag ingress.....	12113
16.6.4 s-ipfpm flow.....	12114
16.6.5 s-ipfpm flow application.....	12117
16.6.6 s-ipfpm flow source-ucl-group.....	12118
16.6.7 s-ipfpm measure application.....	12120
16.6.8 s-ipfpm measure color-flag.....	12122
16.6.9 s-ipfpm measure interval.....	12123
16.6.10 s-ipfpm measure auto-detect.....	12124
16.6.11 s-ipfpm measure flow (interface view).....	12126
16.6.12 s-ipfpm measure flow (VAP profile view).....	12128
16.6.13 s-ipfpm measure max-user-flow.....	12130
16.6.14 s-ipfpm measure ucl-group.....	12131
16.6.15 s-ipfpm report-loss-reason enable.....	12133
16.7 NQA Configuration Commands.....	12134
16.7.1 Command Support.....	12134
16.7.2 agetime.....	12134
16.7.3 clear-records.....	12135
16.7.4 community read cipher.....	12136
16.7.5 datafill.....	12137
16.7.6 datasize.....	12139
16.7.7 description (NQA view).....	12141
16.7.8 destination-address.....	12142
16.7.9 destination-port.....	12144
16.7.10 discovery-pmtu-max.....	12146
16.7.11 display nqa history.....	12147
16.7.12 display nqa results.....	12149
16.7.13 display nqa-agent.....	12157

16.7.14 display nqa-server.....	12158
16.7.15 dns-server.....	12159
16.7.16 fail-percent.....	12160
16.7.17 frequency.....	12162
16.7.18 ftp-filename.....	12163
16.7.19 ftp-filesize.....	12164
16.7.20 ftp-operation.....	12165
16.7.21 ftp-password.....	12167
16.7.22 ftp-username.....	12169
16.7.23 http-operation.....	12170
16.7.24 http-url.....	12171
16.7.25 icmp-jitter-mode.....	12172
16.7.26 interval (NQA view).....	12173
16.7.27 ip-forwarding.....	12174
16.7.28 jitter-packetnum.....	12175
16.7.29 local-pw-id.....	12177
16.7.30 local-pw-type.....	12178
16.7.31 label-type.....	12179
16.7.32 lsp-exp.....	12181
16.7.33 lsp-nexthop.....	12182
16.7.34 lsp-replymode.....	12184
16.7.35 lsp-tetunnel.....	12185
16.7.36 lsp-type.....	12187
16.7.37 lsp-version.....	12188
16.7.38 md.....	12189
16.7.39 mep.....	12190
16.7.40 nexthop.....	12191
16.7.41 nqa.....	12193
16.7.42 nqa-jitter tag-version.....	12194
16.7.43 nqa-server tcpconnect.....	12195
16.7.44 nqa-server udpecho.....	12197
16.7.45 peer-address (NQA view).....	12199
16.7.46 probe-count.....	12200
16.7.47 probe-failtimes.....	12201
16.7.48 records.....	12203
16.7.49 remote-pw-id.....	12204
16.7.50 restart (NQA view).....	12206
16.7.51 sendpacket passroute.....	12206
16.7.52 send-trap.....	12207
16.7.53 sender-address.....	12210
16.7.54 set-df.....	12211
16.7.55 source-address.....	12212

16.7.56 source-interface.....	12213
16.7.57 source-port.....	12214
16.7.58 start.....	12216
16.7.59 step (NQA view).....	12218
16.7.60 stop.....	12219
16.7.61 test-failtimes.....	12220
16.7.62 test-type.....	12221
16.7.63 timestamp-unit.....	12223
16.7.64 threshold.....	12224
16.7.65 timeout.....	12225
16.7.66 tos.....	12226
16.7.67 tracert-hopfailtimes.....	12227
16.7.68 tracert-lifetime.....	12228
16.7.69 ttl.....	12229
16.7.70 ttl-copymode.....	12231
16.7.71 undo no-control-word.....	12232
16.7.72 vc-type.....	12233
16.7.73 vpn-instance (NQA view).....	12234
16.8 Service Diagnosis Configuration Commands.....	12235
16.8.1 Command Support.....	12235
16.8.2 display trace information.....	12235
16.8.3 display trace instance.....	12238
16.8.4 display trace object.....	12240
16.8.5 reset trace instance.....	12243
16.8.6 save trace information.....	12244
16.8.7 trace enable.....	12245
16.8.8 trace object.....	12247
16.8.9 trace object duration threshold.....	12251
16.8.10 trace object output syslog-server.....	12252
16.8.11 trace object process enable.....	12254
16.8.12 trace syslog source.....	12255
16.9 Mirroring Configuration Commands.....	12256
16.9.1 Command Support.....	12256
16.9.2 display observe-port.....	12257
16.9.3 display port-mirroring.....	12259
16.9.4 mac-mirroring.....	12261
16.9.5 mirroring to observe-port (VLAN view).....	12262
16.9.6 mirroring to observe-port (traffic behavior view).....	12263
16.9.7 observe-port (local observing port).....	12264
16.9.8 observe-port (Layer 2 remote observing port).....	12267
16.9.9 observe-port dynamic-allocation enable.....	12270
16.9.10 observe-port forwarding disable.....	12271

16.9.11 port-mirroring to observe-port.....	12272
16.10 Packet Capture Configuration Commands.....	12274
16.10.1 Command Support.....	12274
16.10.2 capture-packet.....	12274
16.10.3 capture-packet cpu.....	12279
16.10.4 capture-packet stop.....	12283
16.11 NetStream Configuration Commands.....	12284
16.11.1 Command Support.....	12284
16.11.2 collect counter.....	12284
16.11.3 collect interface.....	12285
16.11.4 collect ip bgp-next-hop.....	12287
16.11.5 collect ip next-hop.....	12288
16.11.6 collect ip tcp-flag.....	12289
16.11.7 display ip netstream record.....	12290
16.11.8 display ip netstream statistics.....	12291
16.11.9 display netstream.....	12293
16.11.10 display netstream cache ip aggregation.....	12297
16.11.11 display netstream cache ip record.....	12300
16.11.12 display netstream cache vxlan record.....	12303
16.11.13 display netstream cache ip origin.....	12307
16.11.14 display netstream cache ipv6 record.....	12309
16.11.15 display netstream cache ipv6 origin.....	12313
16.11.16 enable.....	12315
16.11.17 export version.....	12316
16.11.18 ip netstream.....	12317
16.11.19 ip netstream aggregation.....	12319
16.11.20 ip netstream export host.....	12323
16.11.21 ip netstream export index-switch.....	12324
16.11.22 ip netstream export source.....	12326
16.11.23 ip netstream export template timeout-rate.....	12327
16.11.24 ip netstream export version.....	12328
16.11.25 ip netstream record.....	12330
16.11.26 ip netstream sampler.....	12331
16.11.27 ip netstream tcp-flag enable.....	12333
16.11.28 ip netstream timeout active.....	12334
16.11.29 ip netstream timeout inactive.....	12335
16.11.30 ipv6 netstream.....	12336
16.11.31 ipv6 netstream export host.....	12338
16.11.32 ipv6 netstream export index-switch.....	12339
16.11.33 ipv6 netstream export source.....	12340
16.11.34 ipv6 netstream export template timeout-rate.....	12341
16.11.35 ipv6 netstream export version.....	12342

16.11.36 ipv6 netstream sampler.....	12344
16.11.37 mask.....	12345
16.11.38 match (Flexible Flow Statistics Template View).....	12346
16.11.39 port ip netstream record.....	12349
16.11.40 refresh netstream template.....	12351
16.11.41 reset ip netstream cache.....	12351
16.11.42 reset ip netstream statistics.....	12352
16.11.43 template timeout-rate.....	12353
16.12 sFlow Configuration Commands.....	12354
16.12.1 Command Support.....	12354
16.12.2 display sflow.....	12355
16.12.3 display sflow statistics.....	12358
16.12.4 sflow agent.....	12360
16.12.5 sflow collector.....	12362
16.12.6 sflow counter-sampling collector.....	12364
16.12.7 sflow counter-sampling interval.....	12366
16.12.8 sflow flow-sampling.....	12367
16.12.9 sflow flow-sampling collector.....	12368
16.12.10 sflow flow-sampling max-header.....	12370
16.12.11 sflow flow-sampling rate.....	12371
16.13 Ping and Tracert Configuration Commands.....	12373
16.13.1 Command Support.....	12373
16.13.2 ping.....	12373
16.13.3 ping ipv6.....	12384
16.13.4 tracert.....	12389
16.13.5 tracert ipv6.....	12395
16.14 TWAMP Light Configuration Commands.....	12400
16.14.1 Command Support.....	12400
16.14.2 display twamp-light responder test-session.....	12401
16.14.3 nqa twamp-light.....	12403
16.14.4 responder.....	12404
16.14.5 test-session (TWAMP-Light-Responder view).....	12405
16.15 NETCONF Configuration Commands.....	12406
16.15.1 Command Support.....	12406
16.15.2 ap manage-mode force-tradition.....	12407
16.15.3 assign arp netconf number.....	12408
16.15.4 backup ip address (callhome template view).....	12410
16.15.5 bootstrap.....	12411
16.15.6 backup bootstrap.....	12413
16.15.7 callhome.....	12414
16.15.8 card register-permit.....	12415
16.15.9 certificate identity.....	12417

16.15.10 controller backup ip-address.....	12418
16.15.11 controller ip-address.....	12419
16.15.12 controller url.....	12421
16.15.13 display netconf alarm active.....	12422
16.15.14 display netconf configuration.....	12423
16.15.15 display netconf connect-status.....	12425
16.15.16 display netconf offline-record.....	12429
16.15.17 display netconf register-fail-record.....	12431
16.15.18 display netconf { rsa dsa } local-key-pair public.....	12433
16.15.19 display work-mode.....	12434
16.15.20 ip address (callhome template view).....	12435
16.15.21 lldp tlv-enable legacy-tlv pnp.....	12437
16.15.22 management-vlan (NETCONF view).....	12441
16.15.23 netconf.....	12442
16.15.24 netconf config enhanced.....	12443
16.15.25 netconf alarm upload enable.....	12445
16.15.26 netconf register abort.....	12445
16.15.27 pnp disable.....	12447
16.15.28 pnp startup-link-aggregation enable.....	12448
16.15.29 pnp startup-link-aggregation receive enable.....	12450
16.15.30 pnp startup-vlan.....	12451
16.15.31 pnp wireless startup-vlan.....	12455
16.15.32 pnp startup-vlan receive enable.....	12457
16.15.33 pnp startup-vlan send enable.....	12459
16.15.34 redirected-controller backup ip-address.....	12463
16.15.35 redirected-controller ip-address.....	12464
16.15.36 reset cloud-mng work-mode.....	12466
16.15.37 reset netconf db-configuration.....	12467
16.15.38 reset netconf register-fail-record.....	12468
16.15.39 { rsa dsa } local-key-pair create (NETCONF view).....	12468
16.15.40 set netconf db-configuration-file.....	12469
16.15.41 source ip.....	12471
16.15.42 source ipv6-address.....	12473
16.15.43 user assign { rsa dsa } public-key.....	12475
16.16 O&M information reporting Configuration Commands.....	12476
16.16.1 Command Support.....	12476
16.16.2 collect dynamic mac disable.....	12476
16.16.3 collect-item enable (SMI view).....	12477
16.16.4 collect-item interval (SMI view).....	12479
16.16.5 collect-item syslog enable (SMI view).....	12480
16.16.6 keepalive (SMI view).....	12484
16.16.7 max-packet-size (SMI view).....	12486

16.16.8 monitor application name.....	12487
16.16.9 monitor application period.....	12488
16.16.10 monitor source ucl-group.....	12489
16.16.11 report-interval (SMI view).....	12491
16.16.12 rtp-media monitor-period.....	12492
16.16.13 rtp-media monitor-type.....	12493
16.16.14 sea.....	12494
16.16.15 server backup ip-address (SMI view).....	12495
16.16.16 server ip-address (SMI view).....	12496
16.16.17 smi-server.....	12497
16.16.18 source ip-address (SMI View).....	12498
16.17 eMDI Configuration Commands.....	12500
16.17.1 Command Support.....	12500
16.17.2 display emdi.....	12500
16.17.3 display emdi statistics instance.....	12502
16.17.4 emdi.....	12505
16.17.5 alarm threshold.....	12506
16.17.6 emdi instance.....	12507
16.17.7 monitor-period.....	12508
16.17.8 end lifetime.....	12509
16.17.9 flow ipv4 tcp.....	12511
16.17.10 flow ipv4 udp.....	12512
16.17.11 reset emdi statistics instance.....	12514
16.17.12 start.....	12515
16.17.13 stop.....	12516
16.17.14 stop all.....	12517
17 Free Mobility Commands.....	12518
17.1 Free Mobility Configuration Commands.....	12518
17.1.1 Command Support.....	12518
17.1.2 display group-policy status.....	12518
17.1.3 group-policy controller.....	12520
17.1.4 group-policy version.....	12523
17.1.5 ip-group service timer heart-beat.....	12524
17.1.6 ip-group service timer reconnection.....	12525
17.1.7 ip-group service timer down-delay.....	12526
17.1.8 ip-group service timer up-delay.....	12528
17.1.9 ip-group service ip-address.....	12529
18 VXLAN Commands.....	12531
18.1 VXLAN Configuration Commands.....	12531
18.1.1 Command Support.....	12531
18.1.2 advertise l2vpn evpn.....	12531
18.1.3 arp broadcast disable (VBDIF interface view).....	12532

18.1.4 arp broadcast-suppress enable.....	12534
18.1.5 arp collect host enable.....	12535
18.1.6 arp distribute-gateway enable.....	12536
18.1.7 arp static bridge-domain.....	12537
18.1.8 arp static vni.....	12540
18.1.9 arp-proxy local enable.....	12542
18.1.10 bridge-domain (Layer 2 sub-interface view).....	12543
18.1.11 bridge-domain (system view).....	12544
18.1.12 broadcast-suppression (BD view).....	12545
18.1.13 description (EVPN instance view).....	12546
18.1.14 description (BD view).....	12547
18.1.15 display arp broadcast-suppress user bridge-domain.....	12548
18.1.16 display bgp evpn group.....	12550
18.1.17 display bgp evpn peer.....	12556
18.1.18 display bgp evpn routing-table.....	12567
18.1.19 display bgp evpn routing-table peer statistics.....	12572
18.1.20 display bgp evpn update-peer-group.....	12573
18.1.21 display bridge-domain.....	12575
18.1.22 display bridge-domain statistics.....	12578
18.1.23 display evpn mac routing-table.....	12579
18.1.24 display evpn vpn-instance.....	12581
18.1.25 display evpn vpn-instance bridge-domain.....	12583
18.1.26 display evpn vpn-instance import-vt.....	12584
18.1.27 display evpn vpn-instance peer-list.....	12586
18.1.28 display evpn vpn-instance tunnel-info.....	12587
18.1.29 display interface nve.....	12588
18.1.30 display interface vbdif.....	12590
18.1.31 display mac-address bridge-domain.....	12592
18.1.32 display mac-address evpn.....	12594
18.1.33 display nd multicast-suppress user bridge-domain.....	12595
18.1.34 display vxlan encapsulation.....	12598
18.1.35 display vxlan peer.....	12600
18.1.36 display vxlan statistics.....	12602
18.1.37 display vxlan tunnel.....	12604
18.1.38 display vxlan vni.....	12606
18.1.39 encapsulation (Layer 2 sub-interface view).....	12609
18.1.40 evpn binding vpn-instance.....	12612
18.1.41 evpn mac-route enable.....	12613
18.1.42 evpn vpn-instance bd-mode.....	12613
18.1.43 export route-policy evpn.....	12614
18.1.44 hub-mode enable (VXLAN).....	12616
18.1.45 import route-policy evpn.....	12617

18.1.46 interface nve.....	12618
18.1.47 interface vbdif.....	12619
18.1.48 ipv6 nd collect host enable.....	12620
18.1.49 ipv6 nd distribute-gateway enable.....	12621
18.1.50 ipv6 nd multicast-suppress enable.....	12623
18.1.51 ipv6 nd proxy enable.....	12624
18.1.52 ipv6 nd proxy local enable.....	12625
18.1.53 ipv6 neighbor (VXLAN).....	12626
18.1.54 isolate enable (BD View).....	12630
18.1.55 isolate remote enable (BD view).....	12630
18.1.56 l2 binding vlan.....	12631
18.1.57 l2vpn-family evpn.....	12633
18.1.58 l3-interface virtual-mac compression.....	12634
18.1.59 mac rib-only.....	12635
18.1.60 mac-address update host enable.....	12636
18.1.61 mac-address static bridge-domain.....	12637
18.1.62 mac-address static bridge-domain vni.....	12640
18.1.63 mac-address (VBDIF interface view).....	12642
18.1.64 mac-route no-advertise.....	12643
18.1.65 multicast-suppression (BD view).....	12644
18.1.66 peer advertise.....	12645
18.1.67 peer advertise route-reoriginated.....	12647
18.1.68 peer enable (BGP-EVPN address family view).....	12648
18.1.69 peer import reoriginate.....	12649
18.1.70 peer mac-limit.....	12651
18.1.71 peer route-policy (BGP-EVPN address family view).....	12652
18.1.72 policy vpn-target (BGP-EVPN address family view).....	12654
18.1.73 port nvo3 mode access.....	12655
18.1.74 refresh bgp evpn.....	12656
18.1.75 reset bgp evpn.....	12657
18.1.76 reset bridge-domain statistics.....	12658
18.1.77 reset vxlan statistics.....	12659
18.1.78 rewrite pop.....	12661
18.1.79 route-distinguisher.....	12662
18.1.80 service type vxlan-tunnel.....	12664
18.1.81 set vxlan resource super-mode.....	12665
18.1.82 source (NVE interface view).....	12666
18.1.83 statistics enable (BD view).....	12668
18.1.84 undo mac-address bridge-domain.....	12669
18.1.85 unknown-unicast-suppression (BD view).....	12670
18.1.86 vni head-end peer-list.....	12671
18.1.87 vpn-target (EVPN instance view).....	12673

18.1.88 vpn-target evpn.....	12675
18.1.89 vxlan fragment-reassemble enable.....	12678
18.1.90 vxlan regularly-refresh.....	12679
18.1.91 vxlan regularly-refresh disable.....	12681
18.1.92 vxlan statistics enable.....	12682
18.1.93 vxlan tunnel-status track exact-route.....	12683
18.1.94 vxlan vni (BD view).....	12684
18.1.95 vxlan vni (VPN instance view).....	12685
19 Upgrade-compatible Commands Reference.....	12687
19.1 Basic Configuration Compatible Commands.....	12688
19.1.1 set authentication password simple (upgrade-compatible command).....	12688
19.1.2 certificate load (upgrade-compatible command).....	12689
19.1.3 set device usb-deployment password (upgrade-compatible command).....	12692
19.1.4 set save-configuration backup-to-server server (upgrade-compatible command)	12692
19.1.5 set save-configuration (upgrade-compatible command)	12694
19.1.6 smart-upgrade information (upgrade-compatible command).....	12695
19.1.7 snmp-agent trap enable configuration (upgrade-compatible command)	12697
19.1.8 snmp-agent trap enable ssh (upgrade-compatible command)	12697
19.1.9 snmp-agent trap enable system (upgrade-compatible command)	12698
19.1.10 snmp-agent trap enable flash (upgrade-compatible command)	12699
19.1.11 super password (upgrade-compatible command).....	12699
19.1.12 trusted-ca load (upgrade-compatible command)	12701
19.2 Device Management Compatible Commands.....	12702
19.2.1 cpu-usage threshold (upgrade-compatible command).....	12702
19.2.2 display autosave config (upgrade-compatible command).....	12703
19.2.3 display fault-management (upgrade-compatible command).....	12704
19.2.4 display fault-management alarm information (upgrade-compatible command).....	12706
19.2.5 dual-active detect mode direct (upgrade-compatible command).....	12707
19.2.6 dual-active detect mode relay (upgrade-compatible command).....	12708
19.2.7 dual-active exclude (upgrade-compatible command).....	12709
19.2.8 dual-active relay (upgrade-compatible command).....	12710
19.2.9 dual-active restore (upgrade-compatible command).....	12710
19.2.10 fault-management alarm (upgrade-compatible command).....	12711
19.2.11 poe af-inrush enable (upgrade-compatible command).....	12714
19.2.12 reset fault-management (upgrade-compatible command).....	12715
19.2.13 ntp-service authentication-keyid (upgrade-compatible command).....	12716
19.3 Interface Management Compatible Commands.....	12717
19.3.1 Ethernet Interface Compatible Commands.....	12717
19.3.1.1 error-shutdown auto-recovery cause efm-threshold-event (upgrade-compatible command)	12717
19.3.1.2 error-shutdown auto-recovery interval (upgrade-compatible command)	12718
19.3.1.3 port-down holdoff-timer (upgrade-compatible command)	12720

19.3.1.4 snmp-agent trap enable port (upgrade-compatible command)	12721
19.4 Ethernet Switching Compatible Commands.....	12722
19.4.1 MAC Compatible Commands	12722
19.4.1.1 mac-address blackhole (upgrade-compatible command).....	12722
19.4.1.2 mac-address static (upgrade-compatible command).....	12723
19.4.2 Link Aggregation Compatible Commands	12724
19.4.2.1 mode lacp-static (upgrade-compatible command).....	12724
19.4.2.2 lacp e-trunk system-id (Eth-Trunk interface view) (upgrade-compatible command).....	12725
19.4.2.3 snmp-agent trap enable eth-trunk (upgrade-compatible command).....	12726
19.4.3 VLAN Compatible Commands	12726
19.4.3.1 port mux-vlan enable (upgrade-compatible command).....	12727
19.4.4 Voice VLAN Compatible Commands.....	12727
19.4.4.1 voice-vlan enable (upgrade-compatible command).....	12727
19.4.5 GVRP Compatible Commands	12728
19.4.5.1 garp leaveall timer (upgrade-compatible command).....	12728
19.4.6 STP Compatible Commands	12729
19.4.6.1 snmp-agent trap enable mstp (upgrade-compatible command).....	12729
19.4.6.2 snmp-agent trap enable feature-name mstp (upgrade-compatible command).....	12730
19.4.6.3 stp tc-protection (upgrade-compatible command).....	12731
19.4.7 L2PT Compatible Commands	12732
19.4.7.1 bpdu-tunnel (upgrade-compatible command).....	12732
19.4.7.2 bpdu-tunnel enable (upgrade-compatible command).....	12733
19.4.7.3 bpdu-tunnel group-mac (upgrade-compatible command).....	12734
19.4.7.4 bpdu-tunnel stp group-mac (upgrade-compatible command).....	12734
19.4.7.5 bpdu-tunnel stp vlan (upgrade-compatible command).....	12735
19.4.7.6 bpdu-tunnel vlan (upgrade-compatible command).....	12736
19.4.7.7 l2protocol-tunnel user-defined-protocol (upgrade-compatible command).....	12738
19.5 IP Service Compatible Commands.....	12740
19.5.1 DHCP Upgrade-compatible Commands.....	12740
19.5.1.1 expired (upgrade-compatible command).....	12740
19.5.1.2 dhcp server expired (upgrade-compatible command).....	12742
19.5.1.3 dhcp server forbidden-ip (upgrade-compatible command).....	12744
19.5.1.4 dhcp server ip-pool.....	12745
19.5.1.5 dhcp server ping.....	12746
19.5.1.6 dns-suffix.....	12747
19.5.1.7 ip relay address (upgrade-compatible command).....	12747
19.5.1.8 lease (upgrade-compatible command).....	12749
19.5.1.9 static-bind mac-address.....	12750
19.5.1.10 dhcpv6 relay destination (upgrade-compatible command).....	12750
19.6 IP Multicast Compatible Commands.....	12751
19.6.1 MLD Snooping Compatible Commands.....	12751
19.6.1.1 mld-snooping group-policy (interface view) (upgrade-compatible command).....	12751

19.6.1.2 mld-snooping group-policy (VLAN view) (upgrade-compatible command).....	12753
19.7 MPLS compatible command.....	12754
19.7.1 explicit-path (upgrade-compatible command).....	12754
19.7.2 mpls rsvp-te authentication handshake (upgrade-compatible command).....	12755
19.7.3 mpls rsvp-te send-message (upgrade-compatible command).....	12757
19.7.4 mpls te max-reservable-bandwidth (upgrade-compatible command).....	12758
19.7.5 mpls te bypass-tunnel bandwidth (upgrade-compatible command).....	12759
19.7.6 mpls te protect-switch manual (upgrade-compatible command).....	12760
19.7.7 snmp-agent trap enable (MPLS) (upgrade-compatible command).....	12761
19.7.8 snmp-agent trap enable feature-name ldp (upgrade-compatible command).....	12762
19.7.9 static-cr-lsp ingress bandwidth (upgrade-compatible command).....	12763
19.7.10 static-cr-lsp transit bandwidth (upgrade-compatible command).....	12765
19.7.11 undo mpls te auto-frr (upgrade-compatible command).....	12766
19.8 VPN compatible command.....	12767
19.8.1 display ipv6 prefix-limit statistics (upgrade-compatible command)	12767
19.8.2 display ipv6 vpn-instance (upgrade-compatible command).....	12769
19.8.3 ipv6 binding vpn6-instance (upgrade-compatible command)	12774
19.8.4 ipv6 vpn6-instance (upgrade-compatible command).....	12775
19.8.5 link-alive (upgrade-compatible command)	12776
19.8.6 snmp-agent trap enable feature-name l3vpn (upgrade-compatible command)	12777
19.8.7 snmp-agent trap enable l3vpn (upgrade-compatible command)	12778
19.8.8 sa authentication-hex (upgrade-compatible command).....	12779
19.8.9 sa encryption-hex (upgrade-compatible command).....	12781
19.8.10 sa string-key (upgrade-compatible command).....	12782
19.9 WLAN Compatible Commands.....	12783
19.9.1 agc-threshold low.....	12784
19.9.2 anti-attack broadcast-flood blacklist disable (upgrade-compatible command).....	12784
19.9.3 anti-attack broadcast-flood blacklist enable (upgrade-compatible command).....	12785
19.9.4 anti-attack broadcast-flood disable (upgrade-compatible command).....	12786
19.9.5 anti-attack broadcast-flood sta-rate-threshold (upgrade-compatible command).....	12787
19.9.6 ap-location (upgrade-compatible command).....	12787
19.9.7 calibrate auto-channel-select disable (upgrade-compatible command).....	12789
19.9.8 calibrate auto-txpower-select disable (upgrade-compatible command).....	12790
19.9.9 calibrate error-rate-threshold (upgrade-compatible command).....	12791
19.9.10 calibrate noise-threshold (upgrade-compatible command).....	12792
19.9.11 calibrate policy (upgrade-compatible command).....	12793
19.9.12 contain-mode (upgrade-compatible command).....	12794
19.9.13 dot11r private.....	12794
19.9.14 frame-format (serial profile view) (upgrade-compatible command).....	12796
19.9.15 frame-length (serial profile view) (upgrade-compatible command).....	12796
19.9.16 frame-start (serial profile view) (upgrade-compatible command).....	12797
19.9.17 frame-stop (serial profile view) (upgrade-compatible command).....	12798

19.9.18 gap-threshold (upgrade-compatible command).....	12799
19.9.19 sta-number gap-threshold (upgrade-compatible command).....	12800
19.9.20 learn-client-address disable (VAP profile view) (upgrade-compatible command).....	12801
19.9.21 parity (serial profile view) (upgrade-compatible command).....	12802
19.9.22 serial-profile (WLAN view) (upgrade-compatible command).....	12803
19.9.23 serial-profile (IoT card interface view) (upgrade-compatible command).....	12804
19.9.24 smart-roam enable (upgrade-compatible command).....	12805
19.9.25 speed (serial profile view) (upgrade-compatible command).....	12806
19.9.26 start-threshold (upgrade-compatible command).....	12807
19.9.27 sta-load-balance dynamic gap-threshold (upgrade-compatible command).....	12808
19.9.28 sta-load-balance dynamic sta-number gap-threshold (upgrade-compatible command).....	12809
19.9.29 sta-load-balance dynamic start-threshold (upgrade-compatible command).....	12810
19.9.30 stopbits (serial profile view) (upgrade-compatible command).....	12811
19.9.31 traffic-filter (AP wired port profile view) (upgrade-compatible command).....	12811
19.9.32 traffic-filter (traffic profile view) (upgrade-compatible command).....	12813
19.9.33 traffic-optimize broadcast-suppression enable (upgrade-compatible command).....	12815
19.9.34 traffic-optimize broadcast-suppression disable (AP system profile view)(upgrade-compatible command).....	12816
19.9.35 traffic-optimize broadcast-suppression rate-threshold (AP system profile view) (upgrade-compatible command).....	12817
19.9.36 vht mcs-map (upgrade-compatible command).....	12818
19.9.37 sniffer enable (upgrade-compatible command).....	12819
19.9.38 broadcasting-content (upgrade-compatible command).....	12820
19.9.39 radio-5g-profile (upgrade-compatible command).....	12821
19.9.40 vap-profile (upgrade-compatible command).....	12822
19.9.41 learn-client-address enable (AP wired port profile view) (upgrade-compatible command).....	12823
19.9.42 radio-2g-profile (upgrade-compatible command).....	12824
19.9.43 master controller (upgrade-compatible command).....	12825
19.9.44 mu-mimo enable (upgrade-compatible command).....	12826
19.9.45 mpp-active-reselection enable (upgrade-compatible command).....	12826
19.10 Reliability Compatible Commands.....	12827
19.10.1 BFD Compatible Commands.....	12827
19.10.1.1 bfd bind peer-ipv6 (upgrade-compatible command).....	12828
19.10.1.2 display bfd statistics session (upgrade-compatible command).....	12830
19.10.1.3 display bfd session (upgrade-compatible command).....	12830
19.10.1.4 display bfd configuration (upgrade-compatible command).....	12831
19.10.1.5 snmp-agent trap enable bfd (upgrade-compatible command).....	12832
19.10.2 DLDP Compatible Commands.....	12833
19.10.2.1 snmp-agent trap enable dldp (upgrade-compatible command).....	12833
19.10.2.2 dldp authentication-mode md5-compatible (upgrade-compatible command).....	12833
19.10.3 Ethernet OAM Compatible Commands.....	12834
19.10.3.1 ma format (upgrade-compatible command).....	12834
19.10.3.2 cfm md format (upgrade-compatible command).....	12836

19.10.3.3 delay-measure one-way continual receive (upgrade-compatible command).....	12837
19.10.3.4 delay-measure one-way receive (upgrade-compatible command).....	12837
19.10.3.5 delay-measure two-way receive (upgrade-compatible command).....	12838
19.10.3.6 efm threshold-event trigger error-shutdown (upgrade-compatible command).....	12839
19.10.3.7 efm trigger if-net (upgrade-compatible command).....	12839
19.10.3.8 oam-bind ingress interface egress cfm md ma (upgrade-compatible command).....	12840
19.10.3.9 oam-bind ingress interface egress efm interface (upgrade-compatible command).....	12841
19.10.3.10 snmp-agent trap enable efm (upgrade-compatible command).....	12842
19.10.3.11 snmp-agent trap enable eoam-1ag (upgrade-compatible command).....	12843
19.10.3.12 snmp-agent trap enable test-packet (upgrade-compatible command).....	12843
19.11 User Access and Authentication Compatible Commands.....	12844
19.11.1 AAA Compatible Commands.....	12844
19.11.1.1 adminuser-priority (upgrade-compatible command).....	12844
19.11.1.2 hwtaacs-server shared-key (upgrade-compatible command).....	12845
19.11.1.3 local-user (upgrade-compatible command).....	12846
19.11.1.4 local-user level (upgrade-compatible command).....	12851
19.11.1.5 radius-attribute encap optimize (upgrade-compatible command).....	12852
19.11.1.6 radius-server accounting (upgrade-compatible command).....	12852
19.11.1.7 radius-server authentication (upgrade-compatible command).....	12854
19.11.1.8 radius-server authorization (upgrade-compatible command).....	12857
19.11.1.9 radius-server shared-key (upgrade-compatible command).....	12858
19.11.1.10 radius-server testuser (upgrade-compatible command).....	12859
19.11.1.11 radius-server test-user (upgrade-compatible command).....	12860
19.11.1.12 radius-server test-user detect interval (upgrade-compatible command).....	12861
19.11.1.13 radius-server user-name domain-included force (upgrade-compatible command).....	12862
19.11.1.14 remote-aaa-user authen-fail (upgrade-compatible command).....	12863
19.11.2 NAC Compatible Commands.....	12864
19.11.2.1 authentication arp handshake.....	12864
19.11.2.2 authentication handshake (upgrade-compatible command).....	12865
19.11.2.3 authentication event action authorize (upgrade-compatible command).....	12865
19.11.2.4 authentication event authen-server-up action re-authen (upgrade-compatible command).....	12867
19.11.2.5 authentication event client-no-response action authorize (upgrade-compatible command).....	12868
19.11.2.6 authentication event portal-server-down action authorize (upgrade-compatible command).....	12869
19.11.2.7 authentication event portal-server-up action re-authen (upgrade-compatible command).....	12870
19.11.2.8 authentication timer arp handshake-period.....	12871
19.11.2.9 authentication timer handshake-period (upgrade-compatible command).....	12872
19.11.2.10 authentication timer authen-fail-user-aging (upgrade-compatible command).....	12873
19.11.2.11 authentication timer pre-authen-user-aging (upgrade-compatible command).....	12874
19.11.2.12 authentication timer re-authen (upgrade-compatible command).....	12874
19.11.2.13 authentication device-type voice authorize (upgrade-compatible command).....	12875
19.11.2.14 authentication free-rule (upgrade-compatible command).....	12876
19.11.2.15 authentication mode (upgrade-compatible command).....	12878

19.11.2.16 authentication (upgrade-compatible command).....	12880
19.11.2.17 authentication single-access (upgrade-compatible command).....	12881
19.11.2.18 authentication trigger-condition dhcp dhcp-option (upgrade-compatible command).....	12882
19.11.2.19 authentication trigger-condition (802.1X authentication) (upgrade-compatible command)	12883
19.11.2.20 authentication trigger-condition (MAC address authentication) (upgrade-compatible command).....	12883
19.11.2.21 domain (upgrade-compatible command).....	12884
19.11.2.22 dot1x authentication-method (upgrade-compatible command).....	12887
19.11.2.23 dot1x eap-notify-packet (upgrade-compatible command).....	12888
19.11.2.24 dot1x reauthenticate (upgrade-compatible command).....	12889
19.11.2.25 dot1x retry (upgrade-compatible command).....	12889
19.11.2.26 dot1x timer reauthenticate-period (upgrade-compatible command).....	12890
19.11.2.27 dot1x timer (upgrade-compatible command).....	12891
19.11.2.28 dot1x trigger dhcp-binding (upgrade-compatible command).....	12892
19.11.2.29 dot1x unicast-trigger (upgrade-compatible command).....	12893
19.11.2.30 mac-authen offline dhcp-release (upgrade-compatible command).....	12894
19.11.2.31 mac-authen permit mac-address (upgrade-compatible command).....	12895
19.11.2.32 mac-authen reauthenticate dhcp-renew (upgrade-compatible command).....	12896
19.11.2.33 mac-authen reauthenticate (upgrade-compatible command).....	12897
19.11.2.34 mac-authen timer reauthenticate-period (upgrade-compatible command).....	12897
19.11.2.35 mac-authen username (upgrade-compatible command).....	12898
19.11.2.36 portal auth-network (upgrade-compatible command).....	12901
19.11.2.37 portal https-redirect enable (upgrade-compatible command).....	12902
19.11.2.38 portal local-server anonymous (interface view) (upgrade-compatible command).....	12903
19.11.2.39 portal local-server ad-image load (upgrade-compatible command).....	12903
19.11.2.40 portal local-server anonymous (Portal access profile view) (upgrade-compatible command)	12905
19.11.2.41 portal local-server authentication-method (upgrade-compatible command).....	12906
19.11.2.42 portal local-server background-color (upgrade-compatible command).....	12907
19.11.2.43 portal local-server background-image load (upgrade-compatible command).....	12909
19.11.2.44 portal local-server enable (Portal access profile view) (upgrade-compatible command)....	12911
19.11.2.45 portal local-server enable (upgrade-compatible command).....	12912
19.11.2.46 portal local-server ip (upgrade-compatible command).....	12914
19.11.2.47 portal local-server keep-alive (upgrade-compatible command).....	12915
19.11.2.48 portal local-server load (upgrade-compatible command).....	12917
19.11.2.49 portal local-server logo load (upgrade-compatible command).....	12919
19.11.2.50 portal local-server (upgrade-compatible command).....	12921
19.11.2.51 portal local-server page-text load (upgrade-compatible command).....	12923
19.11.2.52 portal local-server policy-text load (upgrade-compatible command).....	12924
19.11.2.53 portal local-server timer session-timeout (upgrade-compatible command).....	12926
19.11.2.54 portal local-server syslog-limit enable (upgrade-compatible command).....	12927
19.11.2.55 portal local-server syslog-limit period (upgrade-compatible command).....	12928

19.11.2.56 portal timer offline-detect (upgrade-compatible command).....	12929
19.11.2.57 url-parameter.....	12930
19.11.2.58 url (URL template view) (upgrade-compatible command).....	12931
19.11.2.59 ucl-group (upgrade-compatible command).....	12932
19.11.2.60 voice-vlan (service scheme view) (upgrade-compatible command).....	12933
19.11.2.61 web-auth-server (interface view) (upgrade-compatible command).....	12934
19.12 Security Compatible Commands.....	12936
19.12.1 ACL Compatible Commands.....	12936
19.12.1.1 acl ipv6 (upgrade-compatible command).....	12936
19.12.1.2 acl (upgrade-compatible command).....	12938
19.12.1.3 rule (advanced ACL6 view) (upgrade-compatible command).....	12939
19.12.2 Local Attack Defense Compatible Commands.....	12942
19.12.2.1 blacklist (upgrade-compatible command).....	12943
19.12.2.2 car cpu-port (upgrade-compatible command).....	12944
19.12.2.3 deny (upgrade-compatible command).....	12945
19.12.3 Attack Defense Compatible Commands.....	12946
19.12.3.1 application-apperceive default drop (upgrade-compatible command).....	12946
19.12.4 Traffic Suppression Compatible Commands.....	12947
19.12.4.1 broadcast-suppression (upgrade-compatible command).....	12947
19.12.4.2 multicast-suppression (upgrade-compatible command).....	12948
19.12.4.3 unicast-suppression (upgrade-compatible command).....	12949
19.12.4.4 storm-control action (upgrade-compatible command).....	12950
19.12.5 ARP Security Compatible Commands.....	12951
19.12.5.1 arp anti-attack rate-limit (upgrade-compatible command).....	12951
19.12.5.2 arp filter source (upgrade-compatible command).....	12953
19.12.6 DHCP Snooping Compatible Commands.....	12954
19.12.6.1 dhcp option82 format (upgrade-compatible command).....	12954
19.12.6.2 dhcp snooping alarm { user-bind mac-address untrust-reply } enable (upgrade-compatible command).....	12955
19.12.6.3 dhcp snooping bind-table autosave (upgrade-compatible command).....	12956
19.12.6.4 dhcp snooping check enable (upgrade-compatible command).....	12957
19.12.6.5 dhcp snooping check dhcp-rate alarm enable (upgrade-compatible command).....	12959
19.12.6.6 dhcp snooping check dhcp-rate enable alarm dhcp-rate enable (upgrade-compatible command).....	12960
19.12.6.7 dhcp snooping check dhcp-rate enable alarm enable (upgrade-compatible command).....	12961
19.12.6.8 dhcp snooping check { dhcp-request dhcp-chaddr dhcp-giaddr } enable alarm.....	12963
19.12.6.9 dhcp snooping check enable alarm enable (upgrade-compatible command).....	12964
19.12.6.10 dhcp snooping global max-user-number (upgrade-compatible command).....	12966
19.12.6.11 dhcp snooping information circuit-id (upgrade-compatible command).....	12967
19.12.6.12 dhcp snooping information format (upgrade-compatible command).....	12968
19.12.6.13 dhcp snooping information remote-id (upgrade-compatible command).....	12968
19.12.6.14 dhcp snooping max-user-number global (upgrade-compatible command).....	12969
19.12.6.15 dhcp snooping sticky-mac (upgrade-compatible command).....	12970

19.12.6.16 dhcp snooping trusted interface no-user-binding (upgrade-compatible command).....	12972
19.12.6.17 dhcp snooping trusted no-user-binding (upgrade-compatible command).....	12973
19.12.7 Keychain Upgrade-compatible Commands.....	12974
19.12.7.1 receive-time (upgrade-compatible command).....	12974
19.12.7.2 send-time (upgrade-compatible command).....	12975
19.13 QoS Compatible Commands.....	12977
19.13.1 count (upgrade-compatible command).....	12977
19.14 Network Management Compatible Commands.....	12978
19.14.1 SNMP Compatible Commands.....	12978
19.14.1.1 snmp-agent group (upgrade-compatible command).....	12978
19.14.1.2 snmp-agent trap enable (upgrade-compatible command).....	12980
19.14.1.3 snmp-agent trap enable standard (upgrade-compatible command).....	12980
19.14.1.4 snmp-agent usm-user (upgrade-compatible command).....	12981
19.14.2 NQA Compatible Commands.....	12986
19.14.2.1 send-trap overthreshold (upgrade-compatible command).....	12986
19.14.3 Mirror Compatible Commands.....	12986
19.14.3.1 port-mirroring (upgrade-compatible command).....	12986