


About the Air Filter Package

Packing list:

1. Air filter
2. 30 sponge fixing strips (long and short)
3. Nuts for sponge fixing strips
4. Spring strips
5. Installation guide brochure



Air filter



Sponge fixing strip



Nut



Spring strip

Tools required:



Long measuring tape



Box cutter




Scissors

Note:

1. The air filter needs to be tailored based on the cabinet door size.
2. Only the front door (that is, the door plate on the air intake side) needs to be installed.
3. Redundant materials should be scrapped.
4. Both long and short sponge fixing strips and spring strips are provided for different installation scenarios. You can lay the corresponding number of sponge fixing strips based on the size of the door plate. If the remaining part on the door plate is insufficient for installing a long sponge fixing strip, use a short one instead.
5. Before installing an air filter, read Air Filter Installation Instructions carefully.
6. This package applies only to a cabinet door without any sponge air filter. Before the installation, check whether the door has a sponge air filter. If yes, this package is not required.

1 Tailoring the Air Filter

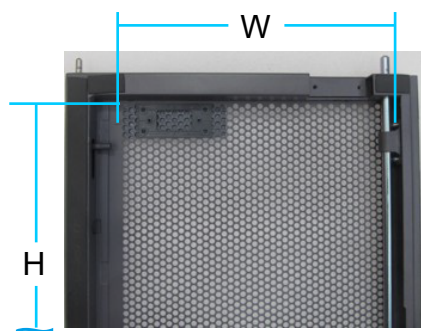

The air filter must be able to cover the hole on the door plate.




An area must be reserved for the door lock.


2 Installing Sponge Fixing Strips




Place sponge fixing strips vertically on the door plate at even distances.

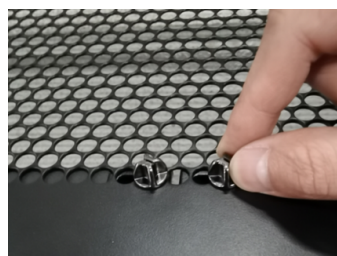

Secure the nuts with a torque of 5 kgf·cm (4.34 lbf·in.) at most.

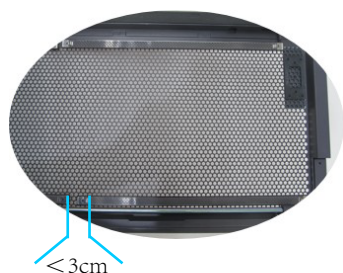

It is recommended that the vertical distance between sponge fixing strips do not exceed 3 cm.

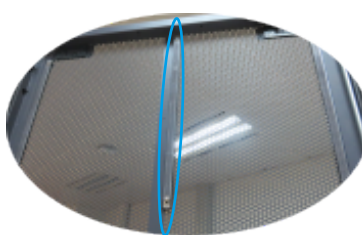

If the horizontal distance between two sponge fixing strips exceeds 40 cm, you are advised to add a sponge fixing strip vertically.




3 Installing the Air Filter



Install the tailored air filter, and gently press the contact positions between the air filter and sponge fixing strips to secure the air filter. Check that the air filter covers the hole on the door plate.

4 Installing Spring Strips

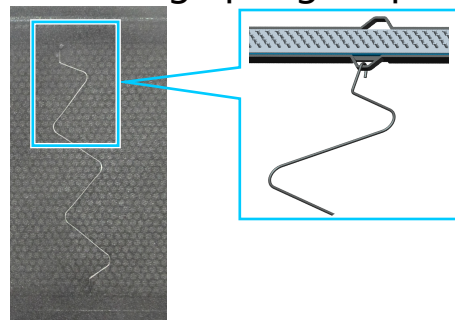

Place one spring strip horizontally between every two sponge fixing strips. The spring strip must be hooked to the protrusion points on the sponge fixing strips at both sides.



Note

The length of the spring strip depends on the distance between two sponge fixing strips. It must be stretched to securely press the air filter. After the installation is complete, check and clean the installation site. Ensure that no materials are left in the cabinet or surrounding areas.